



AUTHORISED
EXPORTER
N° IT/004/BI/15

italvalvole® s.a.s.

di SPADON OSCAR & C.

Guide to selection, use and maintenance of
ON - OFF valves, IVS-IVFL/07-08 series

CODE	11444
CATEG.	1716
GROUP	900
REVISION	05
DATE	13/03/2018

ON-OFF VALVES

SERIES IVS-IVFL/07-08

FAMILY 01 – GROUP 8,9,10,12

Master handbook description: Guide to selection, use and maintenance of
ON - OFF valves, series IVS-IVFL/07-08
(English)

Code: 11444

Category: 1716

Group: 900

Revision no.: 05

Date: 13/03/2018

Drawn up by: LN

Checked by: AR

Approved by: OS



IT AEOF 15 0974



ISO 9001 - Cert. n° 0302



Cert. PED N° 002-97/23/CE-D
Cert. PED N° PA001-97/23/CE-B

DIRECTIVE 2014/34/EU
CERTIFICATE N° 0425 ATEX 2519
CERTIFICATE N° 0425 ATEX 1318



Table of contents

1	Foreword	4
2	Technical features	4
2.1	Table 1: Kv of the valves IVS-IVFL/07-08	5
2.2	Table 2: Air consumption of the valves IVS-IVFL/07-08	5
2.3	Table 3: Δseal pressure of valves IVS-IVFL/07-08 (bar)	5
2.4	Table 4: Compatible Fluids	6
2.5	Safety Notes	6
2.6	Overall dimensions of the valves IVS-IVFL/07-08	7
2.6.1	IVS-IVFL/07-08 with visual device; group: 8-9-10-12	7
2.6.2	IVS-IVFL/07-08 normally open; group: 8-9-10-12	8
3	Tags description	9
4	Fittings	10
5	Storage, Assembly, Check And Maintenance	11
5.1	Transport, Storage And Handling	11
5.2	Assembly Instructions	11
5.2.1	General information	11
5.2.2	Installation of flanged valves	11
5.2.3	Assembly of valves with head welding ends	11
5.2.4	Assembly of valves with female threaded connections	11
5.2.5	Assembly of valves with male threaded connections	12
5.3	Operation Test	12
5.3.1	First check of the valve seal	12
5.4	Troubleshooting	12
5.4.1	N. C. VALVES	12
5.4.2	N. O. VALVES	13
5.5	Scheduled Maintenance	13
5.6	Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 DN 15 ÷ 50 with visual device	14
5.6.1	Disassembly	14
5.6.2	Assembly	14
5.6.3	Exploded View IVS-IVFL/07-08 DN 15÷50 with visual device	15
5.7	Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 DN 65 ÷ 100 with visual device	16
5.7.1	Disassembly	16
5.7.2	Assembly	16
5.7.3	Exploded View IVS-IVFL/07-08 DN 65 ÷ 100 with visual device	17
5.8	Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 DN 100÷150 with visual device	18
5.8.1	Disassembly	18
5.8.2	Assembly	18
5.8.3	Exploded View IVS-IVFL/07-08 DN 100÷150 with visual device	19
5.9	Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 DN 15 ÷ 50 normally open	20
5.9.1	Disassembly	20

5.9.2	Assembly	20
5.9.3	Exploded View IVS-IVFL/07-08 DN 15÷50 normally open	21
5.10	Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 with handwheel	22
5.10.1	Disassembly	22
5.10.2	Reassembly.....	22
5.10.3	Exploded view IVS-IVFL/07-08 with handwheel	22
5.11	Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 with micro holding box.....	23
5.11.1	Micro holding box removal and refitting.....	23
5.11.2	Exploded view of micro holding box for IVS-IVFL/07-08.....	23
5.12	Parts and spare parts IVS-IVFL/07-08 DN 15 ÷ 50 with visual device	24
5.13	Parts and spare parts IVS-IVFL/07-08 DN 65 ÷ 100 D.125 with visual device.....	25
5.14	Parts and spare parts IVS-IVFL/07-08 DN 100 ÷ 150 with visual device.....	26
5.15	Parts and spare parts IVS-IVFL/07-08 DN 15 ÷ 50 N.O.....	27
5.16	Types of previous IVS-IVFL valves	28
5.16.1	Spare parts IVS-IVFL DN 15 ÷ 50 with visual device	28
5.16.2	Spare parts IVS-IVFL DN 65 with visual device	29
5.16.3	Spare parts IVS-IVFL DN 80 ÷ 200 with visual device	30
Annex 1 – Pneumatic limit switch type FINC000234.....		31
Annex 2 – Pneumatic limit switch type FINCVME201.....		32
Annex 3 – Electromechanic limit switch type FINC00E100.....		33
Annex 4 – Electromechanic limit switch type FINC00161E.....		34
Annex 5 – 2-wire inductive proximity switch A.C. N.O.....		35
Annex 6 – 3-wire inductive proximity switch D.C. N.O.....		36
Annex 7 – 2-wire magnetic sensor A.C. N.O.		37
6	Table 4: Tightening Torques	38
7	Disposal	38
8	Warranty.....	38

1 Foreword

The on-off valves are designed to meet several current and future use requirements. Their features make them suitable for dyeing textile industry, tanneries, chemical industries, food industries and for all those environments which, due to humidity and aggressiveness can accept only stainless steel.

Their maintenance is easy, their stem is provided with teflon seal, and they are mainly made of pressed and microfused components. All the ON-OFF valves series IVS-IVFL/07 are available with microfused body, except for the bodies IVFL DN 150 and 200. The code IVS applies to the valve with T-square body, the code IVFL applies to the valve with body with 45° angle.

Classification according to directive 2014/68/UE : Art. 4. Par. 3 .

Table 4 includes a list of fluids which are perfectly compatible with these valves.

For any other fluid or use, which has not been expressly indicated in this manual, contact directly our service department.

2 Technical features

- General notice:* ⇒ all the pressure values indicated hereinafter are relative pressure values. Normal operation with pressure under shutter
- ⇒ **valve designed for fluids of group 2 (directive 2014/68/UE).**
- DN:* ⇒ 15 ÷ 200
- Connections:* ⇒ for head welding
- ⇒ flanged according to UNI PN 6, PN 10, PN 16, (flanges can be flat, pressed or press-forged)
- ⇒ GAS threaded both male and female
- Pmax amm. (PS):* ⇒ 16 bar (DN 15÷50); 10 bar (DN 65÷80); 6 bar (DN 100÷150); 5 bar (DN 200)
- Pmin all.:* ⇒ 0 bar
- Seal:* ⇒ EPDM, PTFE-coated EPDM, PTFE
- Tmax amm.:* ⇒ 150 °C with EPDM seal; 155 °C with PTFE-coated EPDM seal; 200 °C, PTFE seal
- Tmin all.:* ⇒ -10 °C (liquid phase)
- Flow direction:* ⇒ unidirectional 2-way ball valve, with straight and oblique body
- Air connection:* ⇒ 1/8" GAS
- Supply fluid:* ⇒ industrial air
- Supply pipes:* ⇒ pipe inner diameter = 4 mm, min. outer diameter = 6 mm, able to bear the supply Pmax under the environmental conditions of the plant where the valve is fitted.
- Supply pressure:* ⇒ 6 bar
- Air consumption (NC):* ⇒ see table 2
- Versions:* ⇒ with handwheel, with visual device, with inductive sensors, with magnetic sensors, with pneumatic limit switches, with mechanical limit switches
- Manufacturing materials:* ⇒ see drawings and relevant tables
- Overall dimensions:* ⇒ see overall dimensions drawings and relevant tables



IVS valve with T-square body, with visual device

2.1 Table 1: Kv of the valves IVS-IVFL/07-08

DN		ΔP [bar]	Kv [m ³ /h]	DN		ΔP [bar]	Kv [m ³ /h]
15	IVS	1	6	65	IVS	1	65
	IVFL		4,9		IVFL		90
20	IVS	1	11,2	80	IVS	1	121,5
	IVFL		6		IVFL		130,5
25	IVS	1	17,7	100	IVS	1	185,2
	IVFL		14,9		IVFL		206,5
32	IVS	1	26,2	125	IVS	1	355
	IVFL		24		IVFL		372,5
40	IVS	1	37,9	150	IVS	1	411
	IVFL		34,5		IVFL		417
50	IVS	1	54,1	200	IVS	1	----
	IVFL		45,8		IVFL		----




2.2 Table 2: Air consumption of the valves IVS-IVFL/07-08

CONTROL PRESSURE	AIR CONSUMPTION OF STAINLESS STEEL VALVES [NI / cycle]			
	Servo Control Ø 70	Servo Control Ø 80	Servo Control Ø 125	Servo Control Ø 160
6 bar	0,824	1,182	4,982	12,667

Note: cycle is meant as complete opening/closing operation.

2.3 Table 3: Δ seal pressure of valves IVS-IVFL/07-08 (bar)

Ø Servo Control	DN 15	DN 20	DN 25	DN 32	DN 40	DN 50	DN 65	DN 80	DN 100	DN 125	DN 150	DN 200
70	5	5	3,5	3,2	2,3	1,5						
	16	14	9,5									
80			16	14	10	6,5						
125					16	14	3	2,5	1,6			
							9,5	6,5	3			
160								7,5	4,5	1,1	0,75	0,4
										3,5	2,5	1,4
160 enhanced								10	6	5,5	3,7	2

	VALVE WITH STANDARD ΔP
	VALVE WITH REDUCED ΔP
	VALVE WITH ENHANCED ΔP

2.4 Table 4: Compatible Fluids

Type of fluid	Type of seal		
	EPDM	PTFE-coated	PTFE GRAPHIT
Vinyl acetate	YES	YES	YES
Glycerol fat acids	NO	YES	YES
Phenol	NO	YES	YES
Phosphoric acid 20% max.	YES	YES	YES
Phthalic acid	YES	YES	YES
Gallic acid	NO	YES	YES
Nitric acid 5% - 65% max	NO	YES	YES
Tannic acid	YES	YES	YES
Ethanol	YES	YES	YES
Methanol	YES	YES	YES
Propanol	YES	YES	YES
Aniline	NO	YES	YES
Sodium carbonate 20% max	YES	YES	YES
Borax (sodium tetraborate)	YES	YES	YES
Sodium carbonate	YES	YES	YES
Potassium chlorate 30% max	YES	YES	YES
Sodium chloride 20% max	YES	YES	YES
Potassium chloride 5% max	YES	YES	YES
Ethylene glycol	YES	YES	YES
Ammonium nitrate	YES	YES	YES
Copper nitrate	YES	YES	YES
Sodium nitrate	YES	YES	YES
Potassium sulphate 20% max at T=100 °C	YES	YES	YES
Sodium sulphate	YES	YES	YES
Zinc sulphate 40% max at T=100 °C	YES	YES	YES
Potassium sulphite 10% max	YES	YES	YES
Sodium sulphide	YES	YES	YES
Toluene	NO	YES	YES
Water Steam T _{max} =130 °C P = 2.7 bar	YES	YES	YES
Water Steam T _{max} =150 °C P = 4.8 bar	YES	YES	YES

All data in table 4, if not otherwise specified, is relevant at a temperature of 21°C.

All data have a general meaning and are not valid for all possible working conditions. These data may considerably vary depending upon various conditions, such as: temperature, concentration, fluid speed.

For detailed information, please get in touch with the technical department.

Any use of the valve on explosive, easily inflammable, comburent and poison gases is strictly forbidden.

Any use of the valve on liquids based on: chlorine, fluorine, bromine, iodine and derivative elements is strictly forbidden.


Any deviation from such prohibitions may be issued for special applications, by our technical department, upon written request.

2.5 Safety Notes

- The valve body, under maximum operating temperature conditions, depending on the system, may reach a T=200°C. It is up to the engineer to provide the system with the necessary safety guards and/or warning signals with the purpose to remove/indicate the risk of possible burns to the user.
- Each valve is provided with 2 inspection holes (located on the intermediate body). Their purpose is to signal any loss from the stem seal. They are extremely important as they limit the passage of fluid into the air circuit and warn about the loss, preventing the industrial air from being contaminated. It is up to the engineer to provide the system with the necessary safety guards and/or warning signals with the purpose to remove/indicate the risk of contact of the user with dangerous fluids (if any).
- Important note: never blow air or fluids inside the 2 inspection holes. Should they, for any reason, be clogged, disassemble the valve for a complete maintenance.
- During any operation on the valve, the fluid shall not be present inside the piping or the valve.

2.6 Overall dimensions of the valves IVS-IVFL/07-08


2.6.1 IVS-IVFL/07-08 with visual device; group: 8-9-10-12

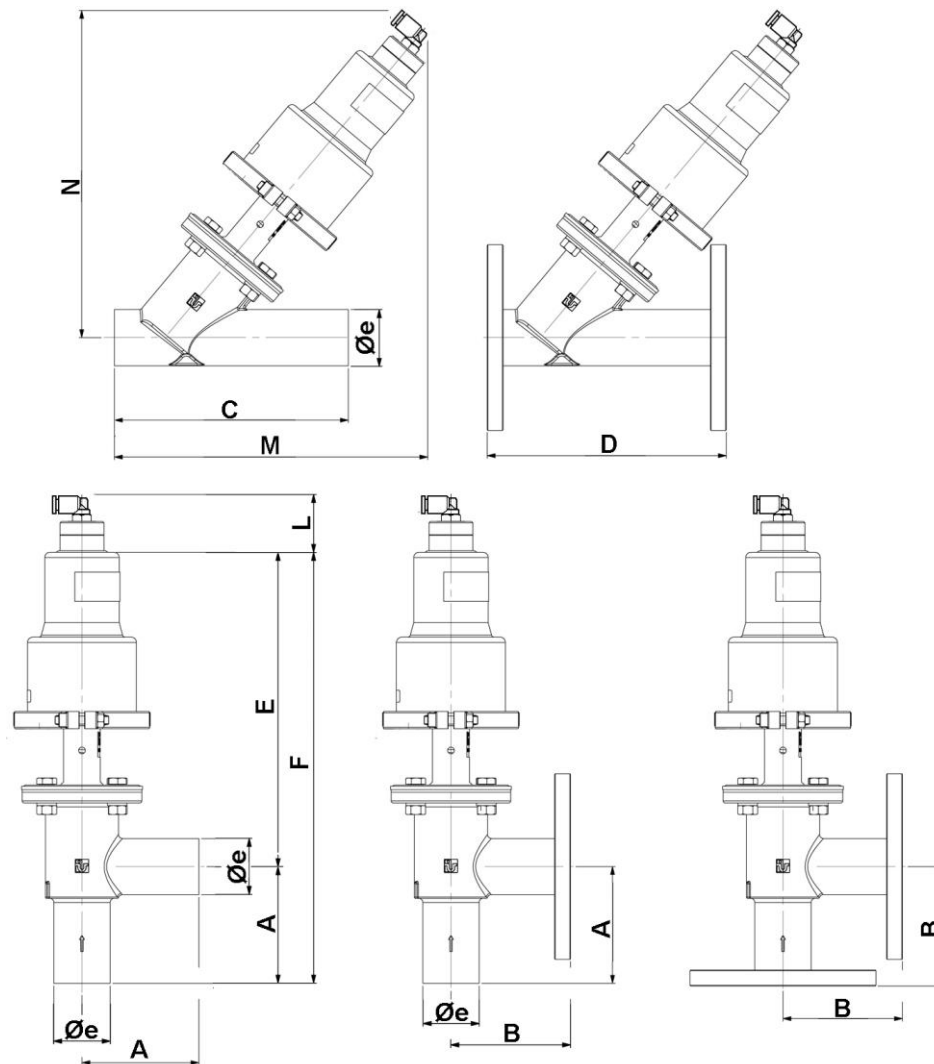

Drawing no. 100630 Rev.:00

ND	15	20	25	32	40	50	65	80	100	125	150
Øand pipe	21.3	26.9	33.7	42.4	48.3	60.3	76.1	89	114.3	139.7	168.3
A	68	68	78	88	98	113	130	135	148	135	148
B	70	70	80	90	100	115	130	135	150	165	190
C	146	146	156	176	196	226	290	310	345	395	475
D	150	150	160	180	200	230	290	310	350	400	480
E	204	204	204	237	237	259	316	327	404	388	399
F	272	272	282	325	335	372	446	462	552	523	547
L	36	36	36	36	36	36	60.5	60.5	76	76	76
M	221	215	206	238	254	284	373	389	478	490	-
N	206	211	205	235	342	357	315	339	398	443	-

Dimensions are in millimetres

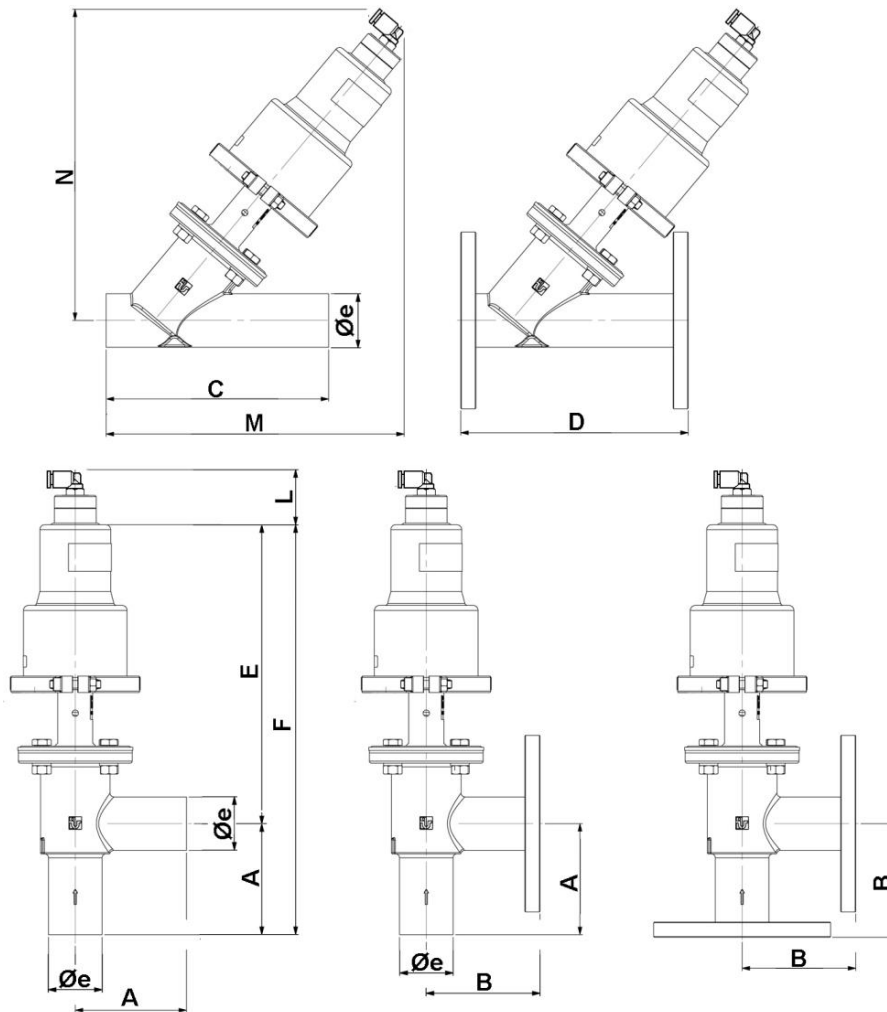2.6.2 IVS-IVFL/07-08 normally open; group: 8-9-10-12


Drawing no. 100631 Rev.:00

DN	15	20	25	32	40	50
Øand pipe	21.3	26.9	33.7	42.4	48.3	60.3
A	68	68	78	88	98	113
B	70	70	80	90	100	115
C	146	146	156	176	196	226
D	150	150	160	180	200	230
E	204	204	204	237	237	259
F	272	272	272	325	325	372
L	23	23	23	23	23	23
M	216	210	201	233	249	279
N	199	204	198	228	235	250

Dimensions are in millimetres

3 Tags description



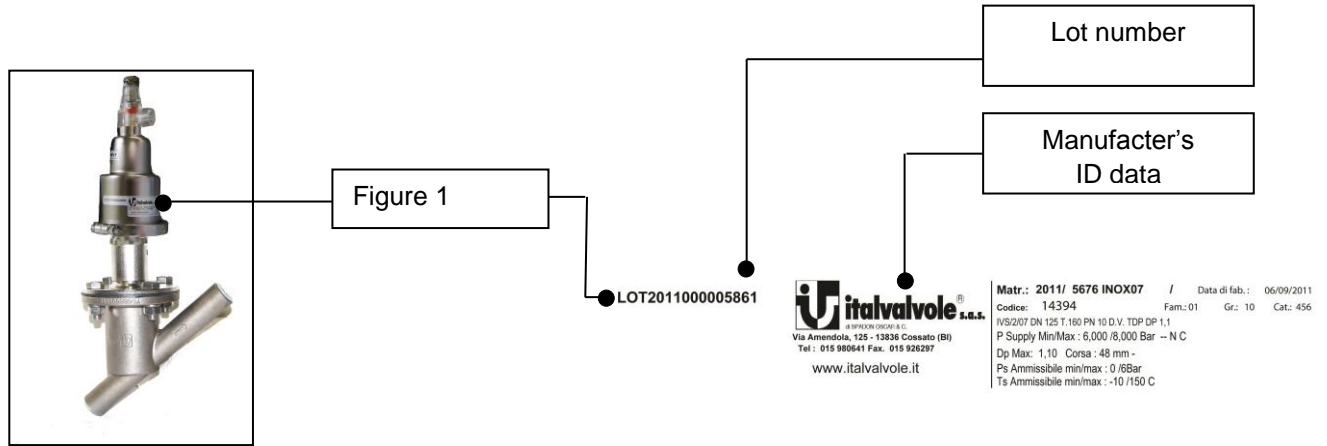


Fig.1 : Technical data of the valves

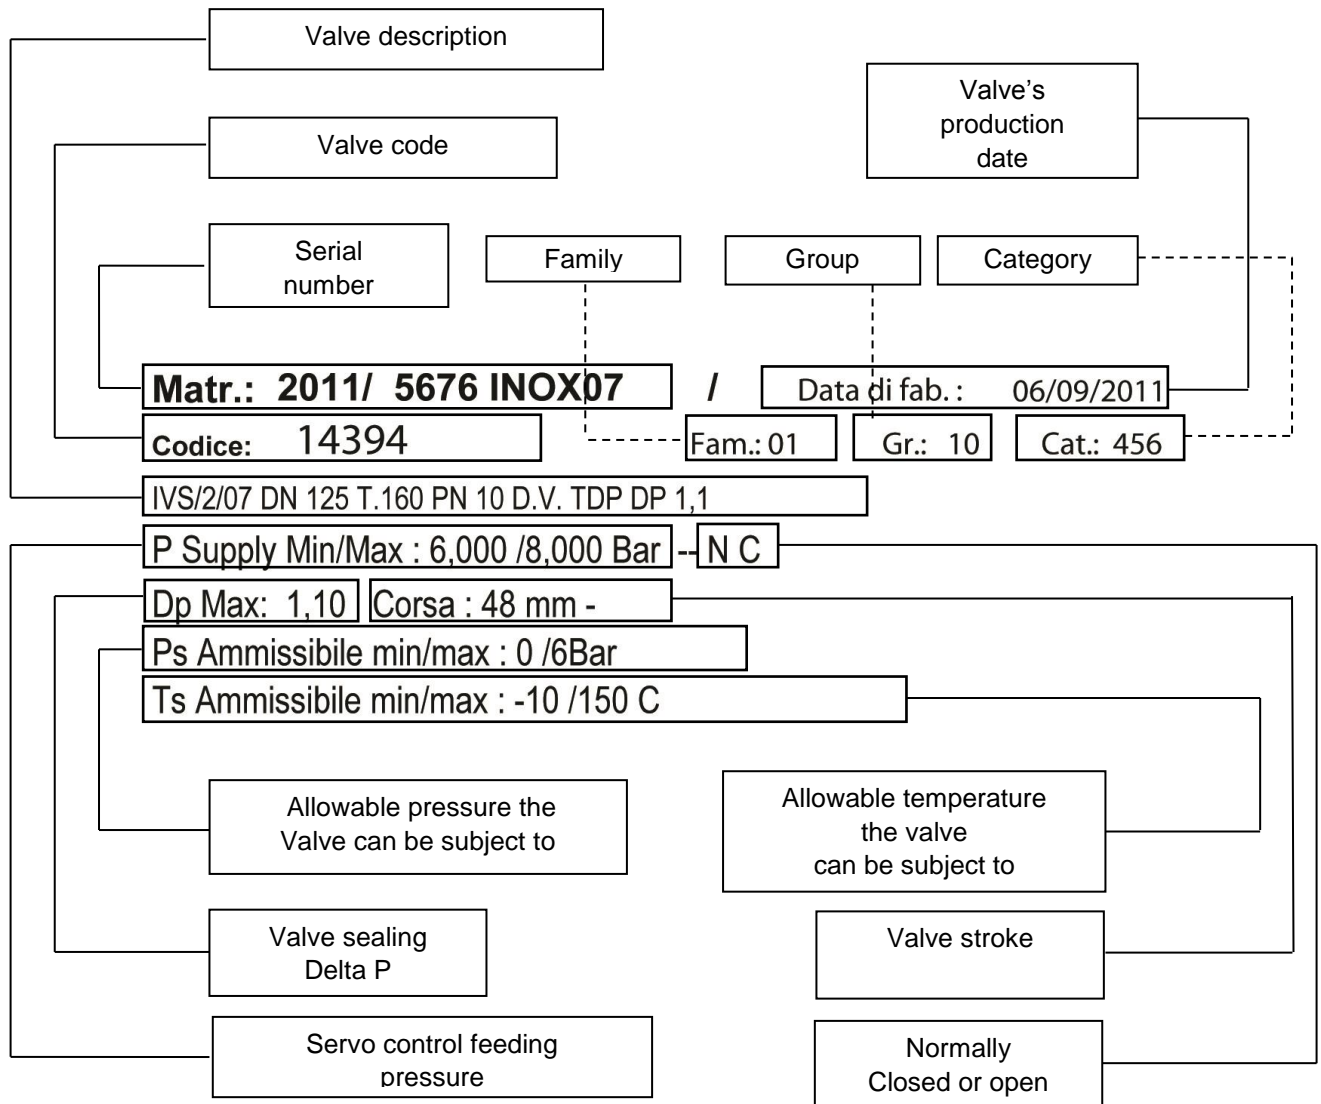

4 Fittings

The stainless steel valves can be supplied with several fittings to satisfy the different needs of the customer.

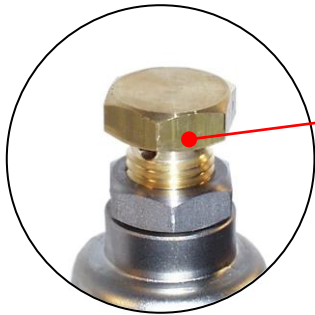


STROKE LIMITING DEVICE

The stroke limiting device enables to limit the valve stroke to the required value.



MAGNETIC SENSOR

This sensor enables to detect valve opening or closing: it is activated by a magnet moving with the shutter.

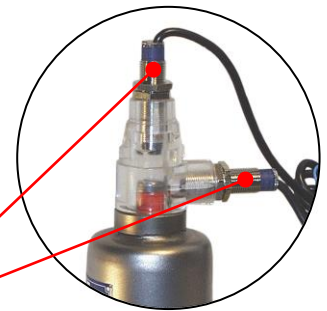


INDUCTIVE SENSOR

This sensor enables to detect the valve on/off condition.




SENSOR BOX

The sensor box is fitted on the upper part of the servo control: electric or pneumatic limit switches can be fitted inside it.

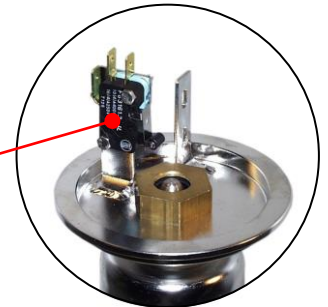

SOLENOID VALVE

The solenoid valve enables to control the opening and closing of the valve by means of an electric input.

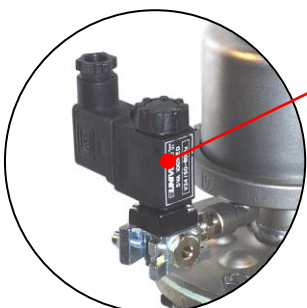

EMERGENCY HANDWHEEL

The emergency handwheel enables to open the valve in case of lack of air.



5 Storage, Assembly, Check And Maintenance

5.1 Transport, Storage And Handling

IVS-IVFL/07-08 ON-OFF valves, during transport and assembly, must be handled very carefully. Shocks as well as anomalous stresses must be avoided (do not handle the valve by the transparent cap, in case of servo control normally closed).

Valves are delivered with dust-proof protections on all connections and these protections must not be removed until they are installed.

Valves shall be stored in areas which are not exposed to the sunshine, so as to prevent inner gaskets from getting dry and old before time.

Storage temperature shall be between 0°C and + 50°C.

5.2 Assembly Instructions

5.2.1 General information

Valve installation on the system shall be carried out only by personnel qualified in in hydraulics and pneumatics, provided with all the equipment normally used in the industrial hydraulic and pneumatic plant engineering. The personnel shall always wear proper accident prevention garments, taking particular care to protect face, eyes and hands.

The valve must never be disassembled or modified. Otherwise, warranty is voided.

N.B. A compression spring is included inside the valve.

Before assembly, dust-proof protections shall be removed from the valve body. In case of servo control normally closed, remove the threaded cap located sideways. In case of servo control normally open, remove the threaded cap located on the upper side.

In case of normally closed servo control, the supply shall be provided from the side connection.

In case of normally open servo control, the supply shall be carried out from the connection located on the cylinder head; the side threaded cap must not be removed to prevent dust or foreign matters from entering the cylinder.

Compressed air shall be industrial air, with a pressure between 6 and 7 bar, with supply pipes with inner diameter = 4 mm.

The air connections on the valve shall be made of 1/8" gas male threaded couplings.

During valve cleaning operations, do not blow compressed air or pressurized fluids into the inspection holes.

5.2.2 Installation of flanged valves

In case the body has flanges connections, it is necessary to put a seal between the valve flanges and the pipes flanges, in order to ensure a perfect seal; moreover, it is necessary to torque tighten the flange closing screws, according to the equipment features, in compliance with mechanic constraints due to the valve PS

5.2.3 Assembly of valves with head welding ends

In case of bodies having butt and head welding ends, with normally closed servo control, before starting welding, the whole servo control complete with its gasket shall be removed, so as not to damage it during welding. In order to properly perform intermediate body assembly and disassembly operations, operate as follows:

for N. C. VALVES

1) Blow air inside the servo control (6 bar).

for all valves

2) Unscrew the screws which fasten the servo control to the valve body.

3) Remove the servo control from the body.

4) Extract the gasket from the body.

Welding must be carried out considering the material of the valve body and the required thickness, according to the provisions in force for the whole system.

5.2.4 Assembly of valves with female threaded connections

In case the body has female threaded connections, it is necessary to coat the connection pipe terminals with PTFE seal tape to ensure a perfect seal; moreover, it is necessary to tighten connections to the prescribed torque, as specified later on, in table 5.

Caution: the installer must verify that all parts connected to the valve bear the required tightening torque.

5.2.5 Assembly of valves with male threaded connections

In case the body has male threaded connections, it is necessary to coat such areas with PTFE seal tape to ensure a perfect seal; moreover, it is necessary to torque tighten the connections, as specified in table 5.

Caution: the installer must verify that all parts connected to the valve bear the required tightening torque.

In order to prevent foreign matters (welding slags, chips and others), located in the pipes, from damaging the valve seat, before operating the valve, open it completely and make the fluid pass through at the maximum operating pressure of the system, so as to clean the pipe.

5.3 Operation Test

Before starting up the system and after any repair or overhaul, the following operation test shall be carried out:

On valves with normally closed NC servo control:


- 1) Send the fluid inside the valve under shutter at the operating pressure (check that it is always lower than the maximum allowable pressure of the valve).
- 2) Blow air inside the servo control and check for opening, observing fluid passage.
- 3) Switch off air from the servo control.
- 4) Repeat this operation 5 times.
- 5) Check, with air off, that there is no leak from the valve.
- 6) Check, with air on, that there is no air leak from the servo control.

On valves with normally open NO servo control:

- 1) Send the fluid inside the valve under shutter at the operating pressure (check that it is always lower than the maximum allowable pressure of the valve).
- 2) Blow air inside the servo control and check for closure, observing fluid passage
- 3) Switch off air from the servo control.
- 4) Repeat this operation 5 times.
- 5) Check, with air on, that there is no leak from the valve.
- 6) Check, with air on, that there is no air leak from the servo control

5.3.1 First check of the valve seal

FOR PTFE VALVES SEAL

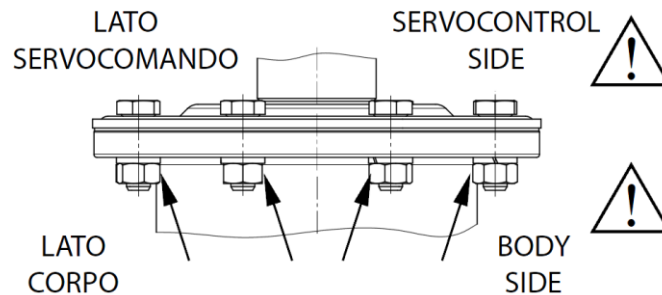

THE FIRST HOURS OF USE MUST BE AT HOT TEMPERATURE (Tmin.: 130 °C).

After some hours of hot use, screw down the nuts indicated by the arrows.

5.4 Troubleshooting

Troubleshooting operations shall be always carried out by qualified personnel only, adequately equipped for the hydraulic and pneumatic operations and provided with the proper safety clothing, paying particular attention to the protection of face, eyes and hands.

5.4.1 N. C. VALVES

In case of anomalous operation or valve leakages, the valve operation shall be immediately stopped and the following checks shall be carried out:

disconnect the air circuit; disconnect the air supply pipe (with air off), and make sure that no air is inside the line.

Caution: during troubleshooting, the valve shall not be removed, nor placed elsewhere. No component of the valve shall be disassembled or loosened.

Check, by means of a pressure gauge, that the pressure of the valve inlet fluid (upstream) is not higher than the maximum allowable pressure or, if $\Delta p < PS$, Δp is not exceeded

Should anomalies still be present after this check, valve inner parts are to be verified, disassembling the valve as indicated under the "Instructions for disassembly, gasket replacement and re-assembly of N. C. valves" of this manual.

In case of doubts, or before performing operations which have not been expressly indicated in this manual, contact our service department.

5.4.2 N. O. VALVES

In case of anomalous operation or valve leakage, the operation shall be immediately stopped and the following checks shall be carried out:

blow air (at a pressure value equal to that specified for a proper operation) into the servo control so as to make the valve close.

Caution: during troubleshooting, the valve shall not be removed, nor placed elsewhere. No component of the valve shall be disassembled or loosened.

Check, by means of a pressure gauge, that the pressure of the valve inlet fluid (upstream) is not higher than the maximum allowable pressure or, if $\Delta p < PS$, Δp is not exceeded

Should anomalies still be present after this check, valve inner parts are to be verified, disassembling the valve as indicated under the "Instructions for disassembly, gasket replacement and re-assembly of N. C. valves" of this manual.

In case of doubts, or before performing operations which have not been expressly indicated in this manual, contact our service department.

5.5 Scheduled Maintenance

Scheduled maintenance operations shall be carried out independently of the ones due to possible failures, which always require an immediate intervention.

The time interval between one maintenance operation and the following shall be included in the lower time interval between the one corresponding to 300,000 cycles and three years. It consists of a complete disassembly of the valve, replacement of all the gaskets and a complete cleaning of all other components. For disassembly and re-assembly operations, make reference to the relevant paragraphs of this manual.

5.6 Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 DN 15 ÷ 50 with visual device

Refer to annexed Dwg. N° 080379 for disassembly and assembly operations of valves.

Assembly and disassembly operations shall be carried out only personnel qualified in in hydraulics and pneumatics, provided with all the necessary work and safety equipment. Before carrying out any operation on systems and valves, get acquainted with operating temperatures and pressures and any other particular conditions, and take the relevant safety measures.

Whenever operations are to be carried out on valves, remove the fluid completely. The valve body shall be completely empty

NOTE: Read the procedures thoroughly before starting any operation.

5.6.1 Disassembly


- 1) Blow air in the servo control (6 bar).
- 2) Unscrew the nuts (31), extract the washers (30) and the screws (28).
- 3) Separate the servo control from the valve body (34).
- 4) Extract the body gasket (29).
- 5) Blow air out of the servo control. **Be careful about the movement of the shutter stem (32) due to air output!**
- 6) Unscrew screws (24), remove nuts (25) and remove the two clamps (26). **Caution! A compression spring is inside the cylinder.** Adequate fixture shall then be used preventing the spring housing cylinder (22) from leaving the intermediate body (27), once the two clamps are separated.
- 7) Remove the spring housing piston(22). The spring (1) will be free for extraction.
- 8) Screw down the transparent cap (2).
- 9) Extract the O-Ring (11).
- 10) Remove the spring (1).
- 11) Lock the shutter stem (32) between the soft jaws. Screw the stroke indicator (3) and the self-locking nut (5).
TDUOP Version
 - 12) Extract the first piston bearing washer (6), remove the first piston bearing (4), located on the top.
 - 13) Remove the first OR (8), remove the piston with TDUOP gasket (7), remove the second OR (8).
 - 14) Remove the second piston bearing (4), extract the second piston bearing washer (6).**Tecnopolimery piston version**
 - 15) Remove the plane washer (74), remove the piston (75) with the DE gasket (76) insert, remove the DE gasket (76) from the piston (75).
 - 16) Remove the O-ring (77) and the piston bearing washer (6).
- 17) Remove the shutter stem (32) from the intermediate body (27).
- 18) Extract from the intermediate body the seeger ring for holes (9). **Caution! The seeger ring (9) keeps the packing gland spring (15) compressed;** maximum care shall then be taken to prevent the spring from coming out suddenly during the disassembly operations.
- 19) Remove the ring washer (10), the first packing gland (17), the first packing gland washer (16), the spring (15), the second packing gland washer (16), the second packing gland (17).
- 20) Unscrew the nuts (21).
- 21) Remove the cap retaining washer (20), the cap (19).
- 22) Remove the cap holder (18) and gasket (33).
- 23) Now the valve has been completely disassembled, so that the required components can be replaced.

5.6.2 Assembly

- 1) Insert the OR gasket (33) and the cap holder (18) on the shutter stem (32).
- 2) Insert the cap (19), the cap stop washer (20) in the cap holder and torque tighten nut and counternut (21) according to table 5.
- 3) Insert into the intermediate body (27), the first packing gland (17), the first packing gland washer (16), the spring (15), the second packing gland washer (16), the second packing gland (17) and the plain washer (10).
- 4) Compress the assembly and fix with the seeger ring for holes (9). **Caution! The seeger ring (9) keeps the packing gland spring (15) compressed;** maximum care shall then be taken to prevent the spring from coming out suddenly during the assembly operations.
- 5) Insert the previously assembled shutter stem (32) into the intermediate body.
- 6) Insert on the shutter stem the first piston bearing washer (6) and the gasket OR (77).
- 7) Insert on the Technopolimery piston (75) the DE gasket (76).
- 8) Insert on the shutter stem the piston, the plane washer (74). Tighten the assembly with the self-locking nut (5) closing the component package but without torque tightening.
- 9) Screw the stroke indicator (3).
- 10) Insert the O-Ring (11) into the intermediate body.
- 11) Insert spring (1) into its seat.
- 12) Insert on the intermediate body the spring housing piston (22).
- 13) Using proper instruments, approach the spring bearing piston to the intermediate body and lock it with the two clamps (26). **Caution! A compression spring is inside the cylinder.**
- 14) Insert the nuts (25) into the clamps and tighten the screws (24) on them according to table 5. Take care that the clamp closing sides are perfectly parallel.
- 15) Screw the transparent cap (2) on the spring housing piston (22), without forcing its closing.

- 16) Blow air in the servo control (6 bar). **Caution! When the air actuates the servocontrol, the shutter will move for its entire stroke.**
- 17) Rest the body gasket (29) on the valve body (34). Fit the servo control into the valve body.
- 18) Insert the screws (28) in the servocontrol intermediate body in correspondence with the valve body holes.
- 19) Insert the spring washers (30) on the screws and torque tighten the nuts (31) according to table 5.
- 20) Blow air out of the servo control.

5.6.3 Exploded View IVS-IVFL/07-08 DN 15÷50 with visual device

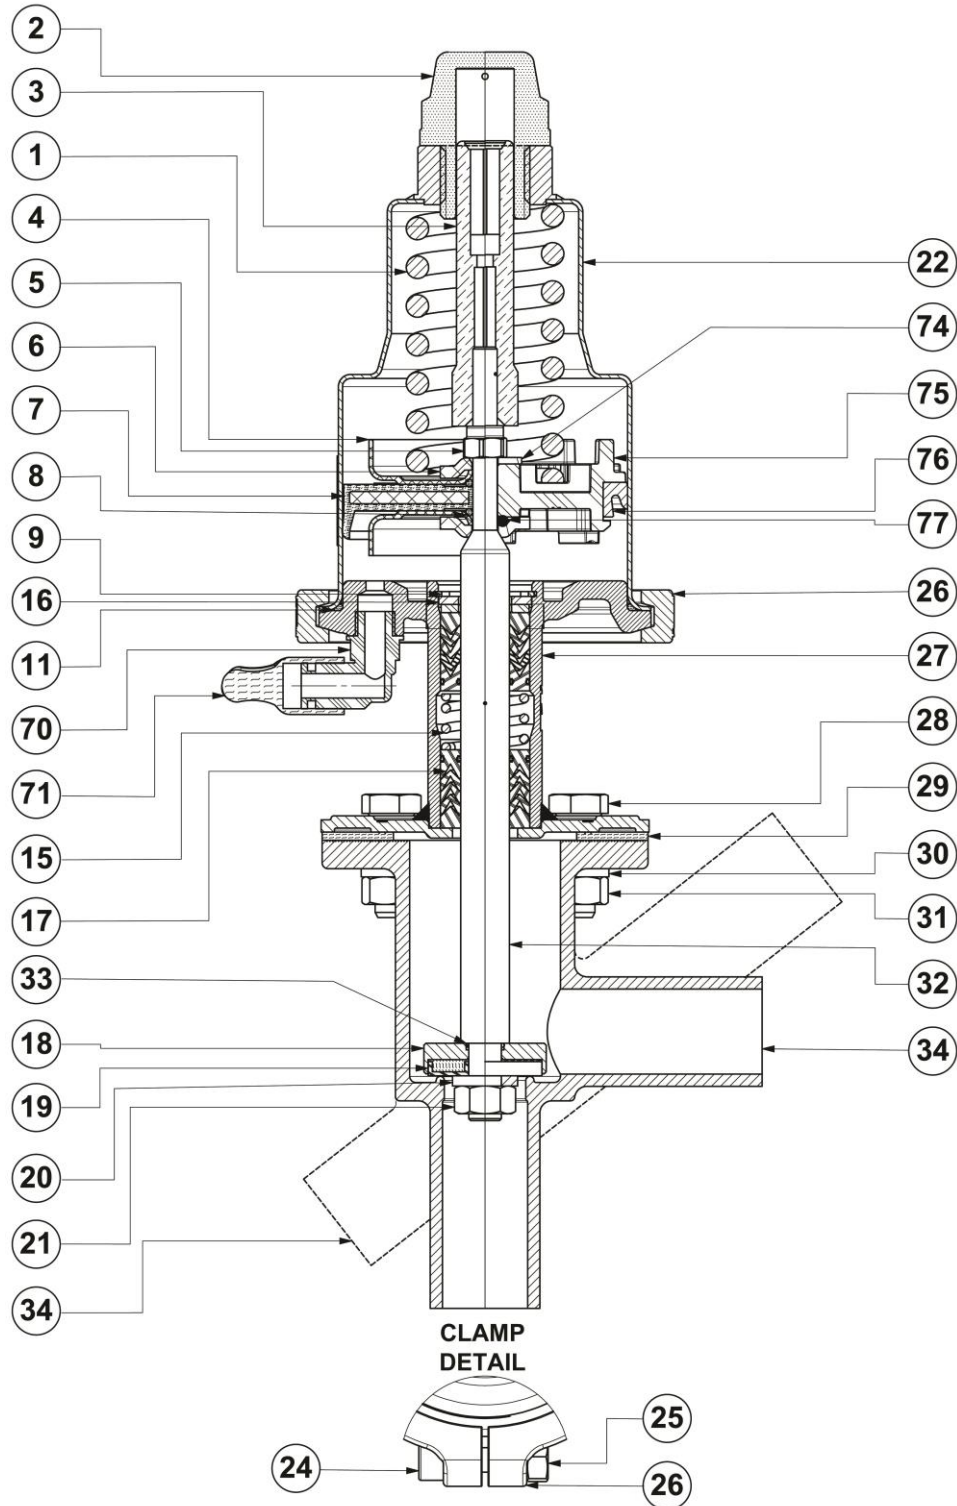

Drawing no. 080379 Rev.:01

5.7 Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 DN 65 ÷ 100 with visual device

Refer to annexed Dwg. N° 080382 for disassembly and assembly operations of valves.

Assembly and disassembly operations shall be carried out only personnel qualified in in hydraulics and pneumatics, provided with all the necessary work and safety equipment. Before carrying out any operation on systems and valves, get acquainted with operating temperatures and pressures and any other particular conditions, and take the relevant safety measures.

Whenever operations are to be carried out on valves, remove the fluid completely. The valve body shall be completely empty.

NOTE: Read the procedures thoroughly before starting any operation.


5.7.1 Disassembly

- 1) Blow air in the servo control (6 bar).
- 2) Unscrew the nuts (31), extract the washers (30) and the screws (28).
- 3) Separate the servo control from the valve body (34).
- 4) Extract the body gasket (29).
- 5) Blow air out of the servo control. **Be careful about the movement of the shutter stem (32) due to air output!**
- 6) Unscrew the screws (46), remove the nuts (48) and the washers (47). **Caution! A compression spring is inside the cylinder.** Adequate fixture shall then be used preventing the spring housing cylinder (22) from leaving the intermediate body (27), once the screws (46) are fully unscrewed.
- 7) Remove the spring housing piston (22). The spring (1) will be free for extraction.
- 8) Screw down the transparent cap (2).
- 9) Extract the O-Ring (11).
- 10) Remove the spring (1).
- 11) Lock the shutter stem (32) between the soft jaws. Screw the stroke indicator (3) and the self-locking nut (5).
- 12) Remove the plain washer (42).
- 13) Remove the piston with TDUOP seal (7).
- 14) Withdraw the piston bearing washer (43) and remove the OR gasket (8) from it.
- 15) Remove the shutter stem (32) from the intermediate body (27).
- 16) Extract the seeger ring for holes (9). **Caution! The seeger ring (9) keeps the packing gland spring (15) compressed;** maximum care shall then be taken to prevent the spring from coming out suddenly during the disassembly operations.
- 17) Remove the plain washer (16), the first packing gland (17), the spring (15), the second packing gland (17).
- 18) Unscrew the nuts (21).
- 19) Remove the cap retaining washer (20), the cap (19).
- 20) Remove the cap holder (18) and gasket (33).
- 21) Now the valve has been completely disassembled, so that the required components can be replaced.

5.7.2 Assembly

- 1) Insert the OR gasket (33) and the cap holder (18) on the shutter stem (32).
- 2) Insert the cap (19), the cap stop washer (20) in the cap holder (18) and torque tighten nut and counternut (21) in according to table 5.
- 3) Insert the first packing gland (17), the spring (15), the second packing gland (17) and the plain washer (16) into the intermediate body (27).
- 4) Compress the assembly and fix with the seeger ring for holes (9). **Caution! The seeger ring (9) keeps the packing gland spring (15) compressed;** maximum care shall then be taken to prevent the spring from coming out suddenly during the assembly operations.
- 5) Insert the previously assembled shutter stem (32) into the intermediate body.
- 6) Insert the OR gasket (8) into the piston bearing washer (43).
- 7) Insert on the shutter stem the previously assembled piston bearing washer, the piston with TDUOP gasket (7), taking care to position it with the lip downwards, the plain washer (42). Tighten the assembly with the self-locking nut (5) closing the component package but without torque tightening.
- 8) Screw the stroke indicator (3).
- 9) Insert the O-Ring (11) into the intermediate body.
- 10) Insert the spring (1).
- 11) Insert on the intermediate body the spring housing piston (22).
- 12) Using proper instruments, approach the spring bearing piston to the intermediate body. **Caution! A compression spring is inside the cylinder.**
- 13) Insert the screws (46) in the spring housing in correspondence with the intermediate body holes.
- 14) Insert the spring washers (47) on the screws (46) and torque tighten the nuts (48) according to table 5.
- 15) Screw the transparent cap (2) on the spring housing piston (22), without forcing its closing.
- 21) Blow air in the servo control (6 bar). **Caution! When the air actuates the servocontrol, the shutter will move for its entire stroke.**
- 16) Rest the body gasket (29) on the valve body (34). Fit the servo control into the valve body.
- 17) Insert the screws (28) in the servocontrol intermediate body in correspondence with the valve body holes.
- 18) Insert the spring washers (30) on the screws and torque tighten the nuts (31) according to table 5.
- 19) Blow air out of the servo control.

5.7.3 Exploded View IVS-IVFL/07-08 DN 65 ÷ 100 with visual device

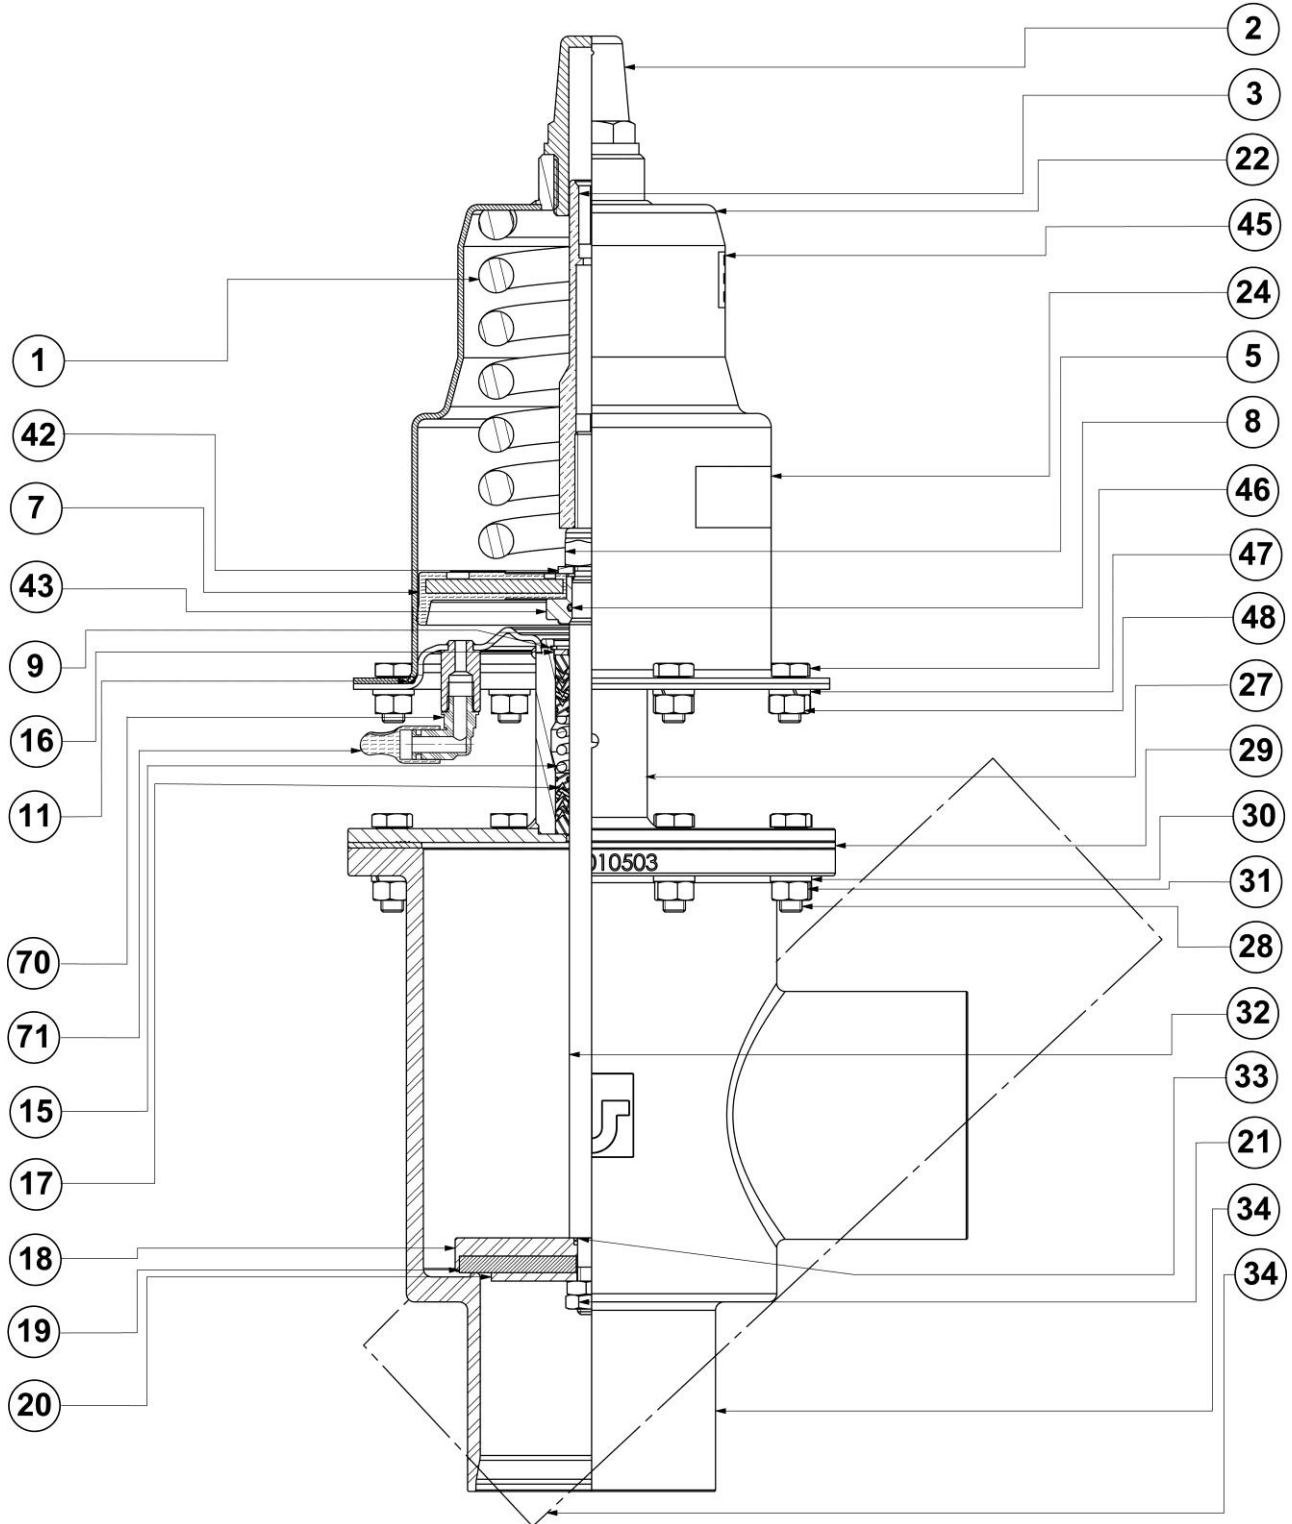

Drawing no. 080382 Rev.:01

5.8 Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 DN 100÷150 with visual device

For the disassembly and assembly operations of the valves, refer to annexed Dwg No. 080400.

Assembly and disassembly operations shall be carried out only personnel qualified in in hydraulics and pneumatics, provided with all the necessary work and safety equipment. Before carrying out any operation on systems and valves, get acquainted with operating temperatures and pressures and any other particular conditions, and take the relevant safety measures.

Whenever operations are to be carried out on valves, remove the fluid completely. The valve body shall be completely empty.

NOTE: Read the procedures thoroughly before starting any operation.


5.8.1 Disassembly

- 1) Blow air in the servo control (6 bar).
- 2) Unscrew the nuts (31), extract the washers (30) and the screws (28).
- 3) Separate the servo control from the valve body (34).
- 4) Extract the body gasket (29).
- 5) Blow air out of the servo control. **Be careful about the movement of the shutter stem (32) due to air output!**
- 6) Unscrew the screws (46), remove the nuts (48) and the washers (47). **Caution! A compression spring is inside the cylinder.** Adequate fixture shall then be used preventing the spring housing cylinder (22) from leaving the intermediate body (27), once the screws (46) are fully unscrewed.
- 7) Remove the spring housing piston (22). The spring (1) will be free for extraction.
- 8) Screw down the transparent cap (2).
- 9) Extract the O-Ring (11).
- 10) Remove the spring (1).
- 11) Lock the shutter stem (32) between the soft jaws. Screw the stroke indicator (3) and the self-locking nut (5).
- 12) Remove the piston bearing washer (42).
- 13) Remove the piston with TDUOP seal (7).
- 14) Remove the piston bearing washer (43).
- 15) Remove the shutter stem (32) from the intermediate body (27).
- 16) Extract the seeger ring for holes (9). **Caution! The seeger ring (9) keeps the packing gland spring (15) compressed;** maximum care shall then be taken to prevent the spring from coming out suddenly during the disassembly operations.
- 17) Remove the plain washer (16), the first packing gland (17), the spring (15), the second packing gland (17).
- 18) Unscrew the nuts (44) and (21).
- 19) Remove the cap retaining washer (20), the cap (19).
- 20) Remove the cap holder (18) and gasket (33).
- 21) Now the valve has been completely disassembled, so that the required components can be replaced.

5.8.2 Assembly

- 1) Insert the OR gasket (33) and the cap holder (18) on the shutter stem (32).
- 2) Insert the cap (19), the cap stop washer (20) in the cap holder (18) and torque tighten nut (44) and counternut (21) according to table 5.
- 3) Insert the first packing gland (17), the spring (15), the second packing gland (17) and the plain washer (16) into the intermediate body (27).
- 4) Compress the assembly and fix with the seeger ring for holes (9). **Caution! The seeger ring (9) keeps the packing gland spring (15) compressed;** maximum care shall then be taken to prevent the spring from coming out suddenly during the assembly operations.
- 5) Insert the previously assembled shutter stem (32) into the intermediate body (27).
- 6) Insert on the shutter stem the piston bearing washer (43), the piston with TDUOP gasket (7), taking care to assemble it in the same initial position and the piston bearing (42). Tighten the assembly with the self-locking nut (5) closing the component package but without torque tightening.
- 7) Screw the stroke indicator (3).
- 8) Insert the O-Ring (11) into the intermediate body (27).
- 9) Insert spring (1) into its seat.
- 10) Insert on the intermediate body the spring housing piston (22).
- 11) Using proper instruments, approach the spring bearing piston to the intermediate body. **Caution! A compression spring is inside the cylinder.**
- 12) Insert the screws (46) in the spring housing in correspondence with the intermediate body holes.
- 13) Insert the spring washers (47) on the screws (46) and torque tighten the nuts (48) according to table 5.
- 14) Screw the transparent cap (2) on the spring housing piston (22).
- 22) Blow air in the servo control (6 bar). **Caution! When the air actuates the servocontrol, the shutter will move for its entire stroke.**
- 15) Rest the body gasket (29) on the valve body (34). Fit the servo control into the valve body.
- 16) Insert the screws (28) in the servocontrol intermediate body in correspondence with the valve body holes.
- 17) Insert the spring washers (30) on the screws and torque tighten the nuts (27) according to table 5.
- 18) Blow air out of the servo control.

5.8.3 Exploded View IVS-IVFL/07-08 DN 100÷150 with visual device

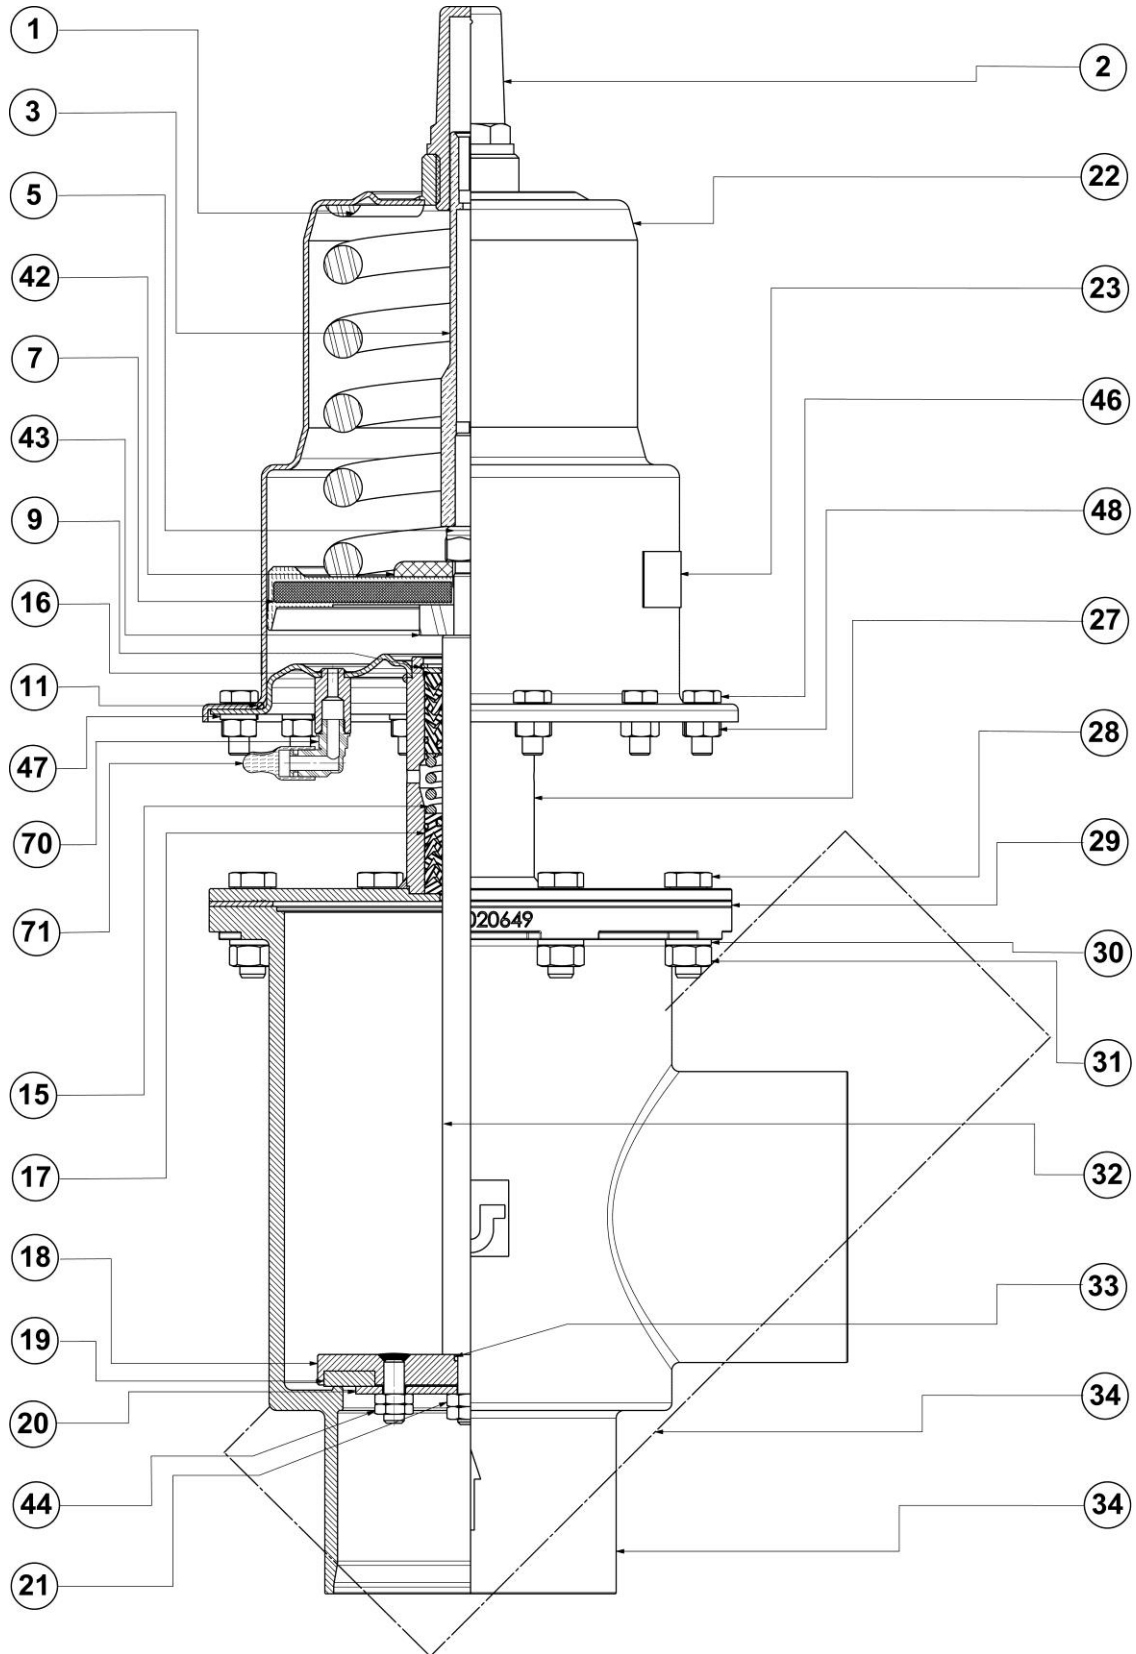

Drawing No. 080400 Rev.:01

5.9 Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 DN 15 ÷ 50 normally open

For the disassembly and assembly operations of the valves, refer to annexed Dwg No. 080381.

Assembly and disassembly operations shall be carried out only personnel qualified in in hydraulics and pneumatics, provided with all the necessary work and safety equipment. Before carrying out any operation on systems and valves, get acquainted with operating temperatures and pressures and any other particular conditions, and take the relevant safety measures.

Whenever operations are to be carried out on valves, remove the fluid completely. The valve body shall be completely empty.

NOTE: Read the procedures thoroughly before starting any operation.


5.9.1 Disassembly

- 1) Unscrew the nuts (31), extract the washers (30) and the screws (28).
- 2) Separate the servo control from the valve body (34).
- 3) Extract the body gasket (29).
- 4) Unscrew screws (24), remove nuts (25) and remove the two clamps (26). **Caution! A compression spring is inside the cylinder.** Adequate fixture shall then be used preventing the spring housing cylinder (22) from leaving the intermediate body (27), once the two clamps are separated.
- 5) Remove the spring housing piston (22).
- 6) Unscrew the air inlet fitting (49) and extract the O-ring (50) from it.
- 7) Lock the shutter stem (32) between the soft jaws. Unscrew the self-locking nut (5).
TDUOP Version
 - 8) Extract the first piston bearing washer (6), remove the first piston bearing (4), located on the top.
 - 9) Remove the first OR (8), remove the piston with TDUOP gasket (7), remove the second OR (8).
 - 10) Remove the second piston bearing (4), extract the second piston bearing washer (6).
Tecnopolimery piston version
 - 11) Remove the plane washer (74), remove the piston (75) with the DE gasket (76) insert, remove the DE gasket (76) from the piston (75).
 - 12) Remove the O-ring (77) and the piston bearing washer (6).
 - 13) Extract the spring (1) from the intermediate body.
 - 14) Remove the shutter stem (32) from the intermediate body (27).
 - 15) Extract the seeger ring for holes (9). **Caution! The seeger ring (9) keeps the packing gland spring (15) compressed;** maximum care shall then be taken to prevent the spring from coming out suddenly during the disassembly operations.
 - 16) Remove the packing gland washer (16), the first packing gland (17), the spring (15), and the second packing gland (17).
 - 17) Unscrew the nuts (21).
 - 18) Remove the cap retaining washer (20), the cap (19).
 - 19) Remove the cap holder (18) and gasket (33).
 - 20) Now the valve has been completely disassembled, so that the required components can be replaced.

5.9.2 Assembly

- 1) Insert the gasket (33) and the cap holder (18) on the shutter stem (32).
- 2) Insert the cap (19), the cap stop washer (20) in the cap holder and torque tighten nut and counternut (21) according to table 5.
- 3) Insert into the intermediate body (27), the first packing gland (17), the spring (15), the second packing gland (17) and the packing gland washer (16).
- 4) Compress the assembly and fix with the seeger ring for holes (9). **Caution! The seeger ring (9) keeps the packing gland spring (15) compressed;** maximum care shall then be taken to prevent the spring from coming out suddenly during the assembly operations.
- 5) Insert the spring (1) into the intermediate body (27).
- 6) Insert the previously assembled shutter stem (32) into the intermediate body.
- 7) Insert on the shutter stem the piston bearing washer (6), the first O-ring (77).
- 8) Insert on the Technopolimery piston (75) the DE gasket (76).
- 9) Insert on the shutter stem the piston, the plane washer (74). Tighten the assembly with the self-locking nut (5) closing the component package but without torque tightening.
- 10) Screw the stroke indicator (3).
- 11) Insert on the intermediate body the spring housing piston (22).
- 12) Using proper instruments, approach the spring bearing piston to the intermediate body and lock it with the two clamps (26). **Caution! A compression spring is inside the cylinder.**
- 13) Insert the nuts (25) into the clamps and tighten the screws (24) on them according to table 5. Take care that the clamp closing sides are perfectly parallel.
- 14) Insert the O-ring gasket (50) into the air inlet fitting (49).
- 15) Torque tighten the air inlet coupling (49) on the spring bearing piston (22) according to table 5.
- 16) Rest the body gasket (29) on the valve body (34). Fit the servo control into the valve body.
- 17) Insert the screws (28) in the servocontrol intermediate body in correspondence with the valve body holes.
- 18) Insert the spring washers (30) on the screws and torque tighten the nuts (31) according to table 5.

5.9.3 Exploded View IVS-IVFL/07-08 DN 15÷50 normally open

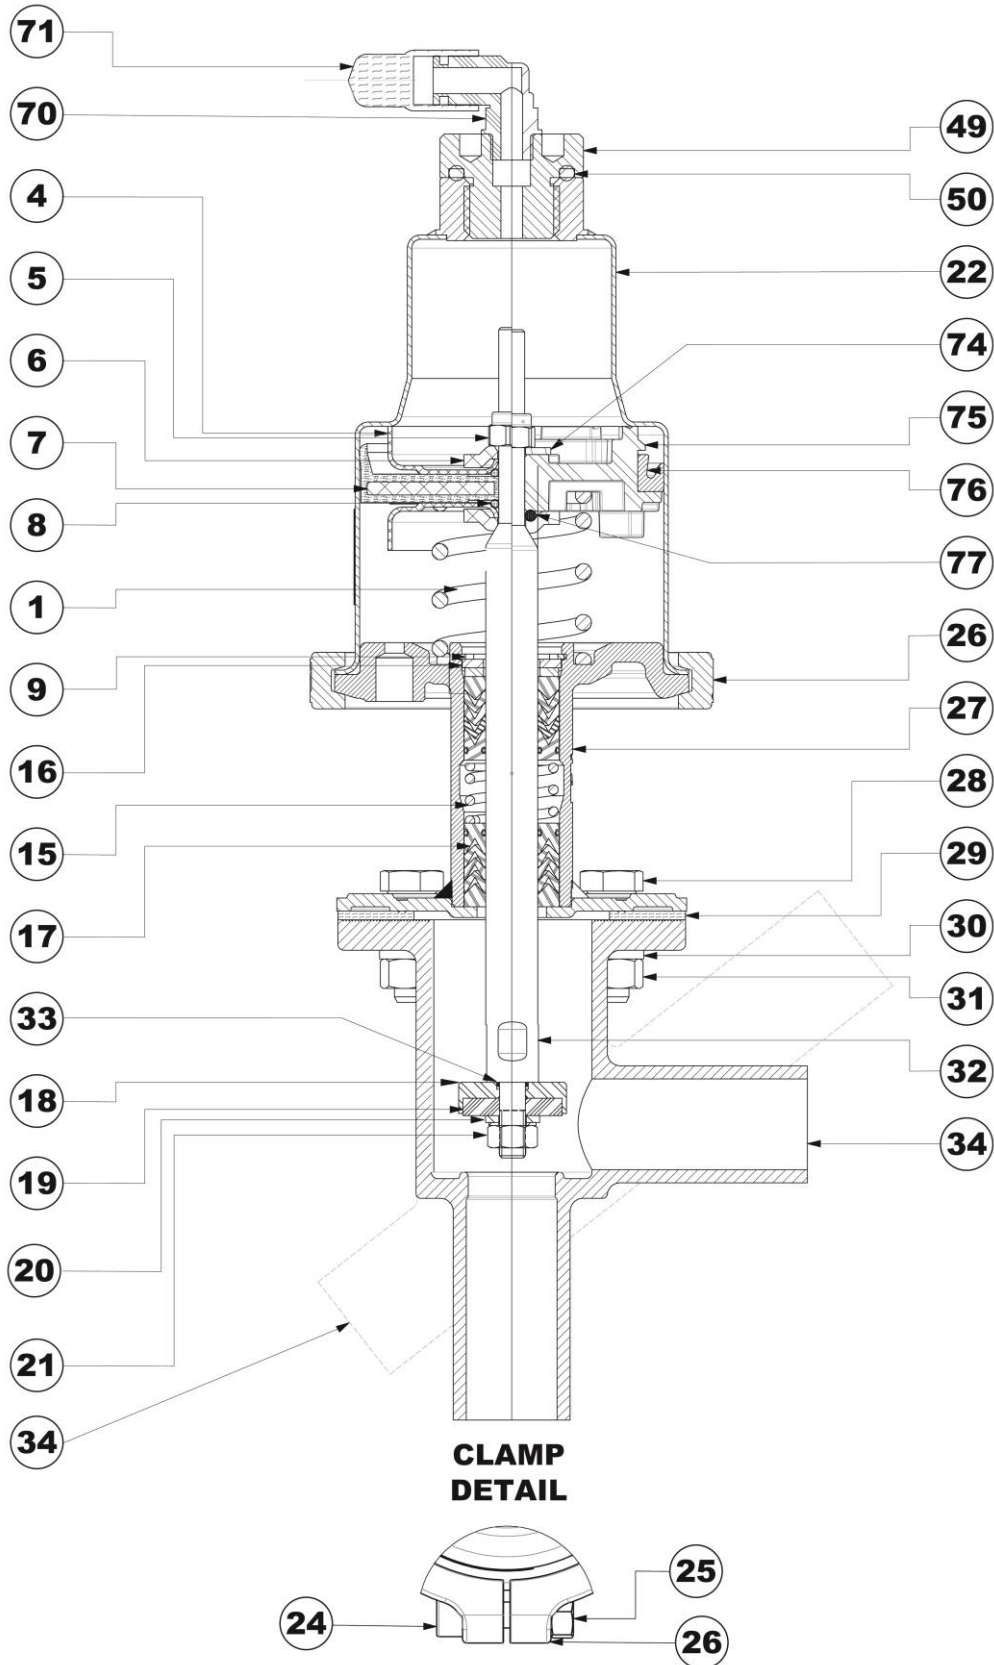

Drawing no. 080381 Rev.:01

5.10 Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 with handwheel

For the disassembly and assembly operations of the valves, refer to annexed Drw. No. 080380.

Assembly and disassembly operations shall be carried out only personnel qualified in in hydraulics and pneumatics, provided with all the necessary work and safety equipment. Before carrying out any operation on systems and valves, get acquainted with operating temperatures and pressures and any other particular conditions, and take the relevant safety measures.

Whenever operations are to be carried out on valves, remove the fluid completely. The valve body shall be completely empty.

NOTE: Read the procedures thoroughly before starting any operation.


5.10.1 Disassembly

- 1) Before separating the servocontrol from the body, remove the elastic pin (38) and the plain washer (35).
- 2) Remove the handwheel (39) and remove from it the DI gasket (40).
- 3) Then disassemble the valve following the instructions concerning the valves with visual devices.

5.10.2 Reassembly

- 1) Assemble the valve following the reassembly instructions concerning the valves with visual devices.
- 2) Insert the DI gasket (40) into the handwheel (39).
- 3) Screw the handwheel (39) until it touches the gasket holding piston (22).
- 4) Insert the plain washer (35) on the shaft of the manual control (37).
- 5) Insert the elastic pin (38) into the hole of the manual control (37) so that it protrudes on both sides.

5.10.3 Exploded view IVS-IVFL/07-08 with handwheel

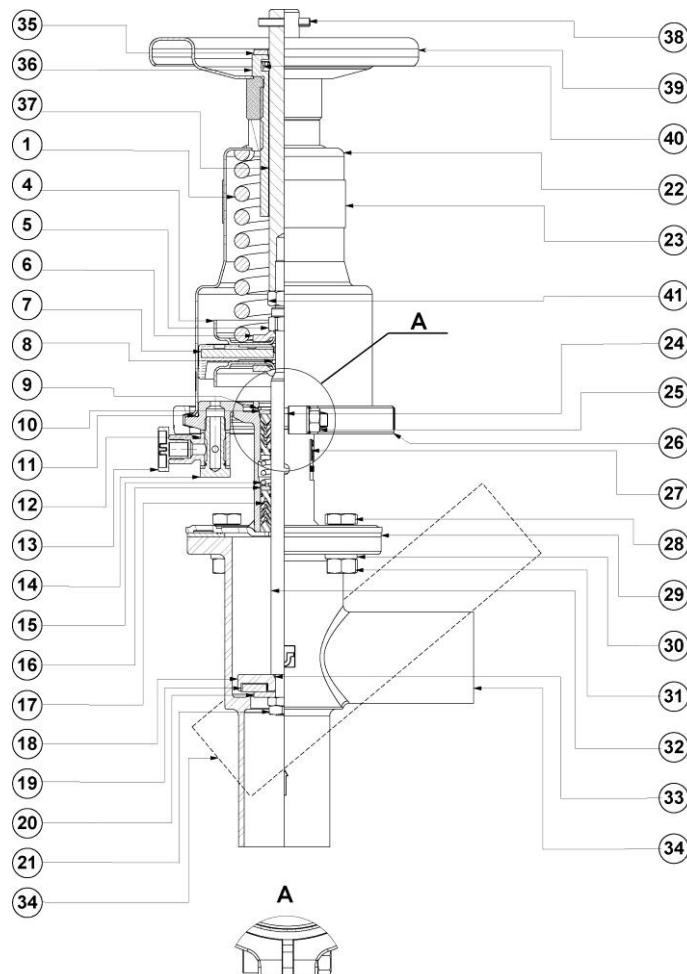

Drawing no. 080380 Rev.:00

5.11 Instructions for disassembly, gasket replacement, reassembly of IVS-IVFL/07-08 with micro holding box

For the disassembly and assembly operations of the valves, refer to annexed Drw. No. 080380. Assembly and disassembly operations shall be carried out only personnel qualified in in hydraulics and pneumatics, provided with all the necessary work and safety equipment. Before carrying out any operation on systems and valves, get acquainted with operating temperatures and pressures and any other particular conditions, and take the relevant safety measures.


Whenever operations are to be carried out on valves, remove the fluid completely. The valve body shall be completely empty.

NOTE: Read the procedures thoroughly before starting any operation.

5.11.1 Micro holding box removal and refitting

- 1) Unscrew the Hex. con. head screws (56) from the nuts (55).
- 2) Separate the clamps (54).
- 3) Remove the micro holding cover (51) and remove from it the cable holder (63).
- 4) Then insert the electric cables and the pneumatic hoses in the cable holders (63).
- 5) Fasten again the cable holders (63) in the micro holding cover (51).
- 6) Connect the electric cables to the electropneumatic limit switch (57) (see the technical specifications of the limit switch in the final section of the manual).
- 7) Connect the pneumatic hoses to the pneumatic limit switch (68) (see the technical specifications of the limit switch in the final section of the manual).
- 8) Reposition the micro holding cover (51) on the micro holding plate (46), then fasten all of them with the clamps (54).
- 9) Insert the hex. nuts (55) into the clamps (54) and tighten the hex. con. screws (56).


5.11.2 Exploded view of micro holding box for IVS-IVFL/07-08

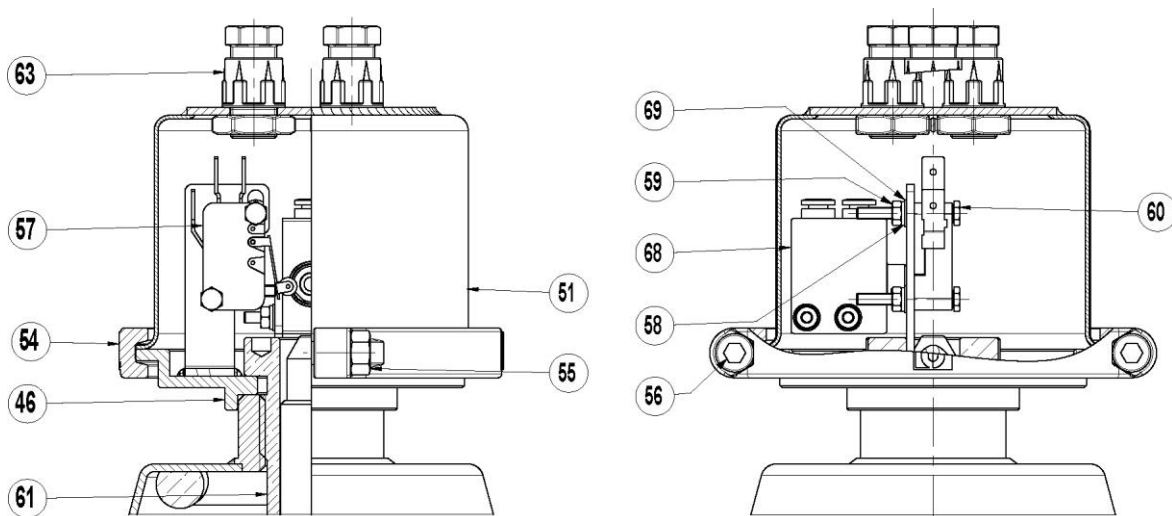

5.12 Parts and spare parts IVS-IVFL/07-08 DN 15 ÷ 50 with visual device

PART	Q.ty	DESCRIPTION	MATERIAL
1	1	Spring	STEEL 55iCr6
2	1	Transparent cap	PLASTIC
3	1	Stroke indicator	RED PVC
4	2	Piston bearing	Fe 360
5	1	Self- locking nut	Fe 360
6	2	Piston bearing washer	Fe 360
7	1	TDUOP gasket	NBR Fe 360
8	2	O-Ring gasket	GACO
9	1	Seeger ring	1.4301
11	1	O-Ring gasket	GACO
15	1	Packing gland spring	1.4401
16	2	Packing gland washer	1.4401
17	2	Packing gland	PTFE+PTFE GRAPHITE
18	1	Cap holder	1.4401
19	1	Cap	EPDM EPDM-PTFE coated PTFE
20	1	Cap stop washer	1.4401
21	2	Hexagon nut	1.4401
22	1	Spring housing piston	1.4301
24	2	Hex sunken conical Screw	1.4301
25	2	Hexagon nut	1.4301
26	2	Clamp	1.4308
27	1	Intermediate body	1.4308/1.4401
28	(1)	Hex. head screw	1.4301
29	1	Body gasket	PTFE
30	(1)	Spring washer	1.4301
31	(1)	Hexagon nut	1.4301
32	1	Shaft	1.4401
33	1	O-Ring gasket	FPM
34	1	Valve body	1.4408
70	1	Air connections	TECHNOPOLIMERY
71	1	Protection cap	PVC
74	1	Plain washer	Fe360
75	1	Piston	PA 66 FV 30
76	1	DE gasket	NBR
77	1	OR gasket	GACO

(1) N° 4 DN 15-32, N° 8 DN 40-50

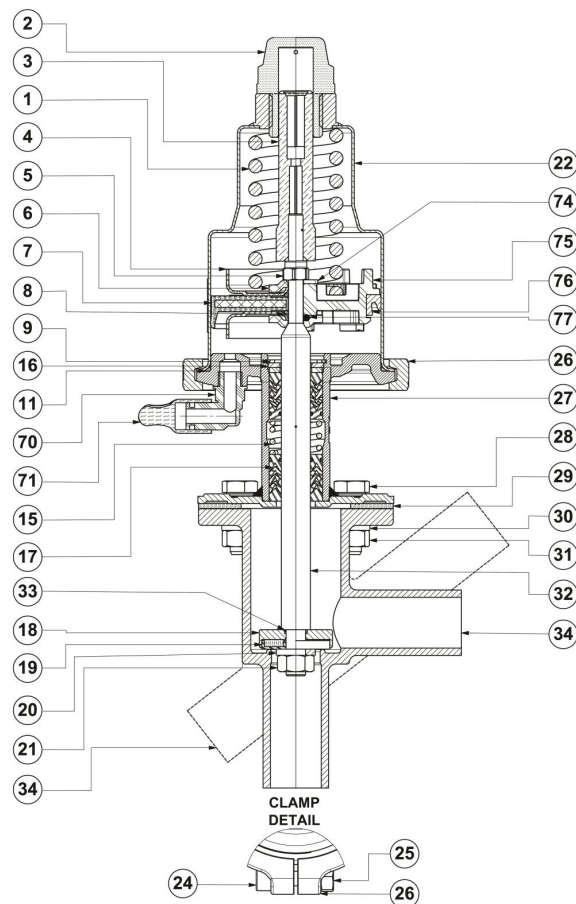

Body side spare parts


DN	SPARE PART CODE (Part No. 15-17-19-29-33)		
	PTFE	EPDM PTFE-coated	EPDM
15	10682	10679	10676
20			
25	10683	10680	10677
32	10560	10558	10556
40	10684	10681	10678
50	10561	10559	10557

Air side spare parts

Ø SERV.	SPARE PART CODE (Part No. 11-74-75-76-77)
Ø 70	3945
Ø 80	7896

5.13 Parts and spare parts IVS-IVFL/07-08 DN 65 ÷ 100 D.125 with visual device

PART	Q.ty	DESCRIPTION	MATERIAL
1	1	Spring	STEEL 55iCr6
2	1	Transparent cap	PLASTIC
3	1	Stroke indicator	RED PVC
5	1	Self- locking nut	Fe360
7	1	TDUOP gasket	NBR Fe360
8	2	O-Ring gasket	GACO
9	1	Seeger ring	1.4301
11	1	O-Ring gasket	GACO
15	1	Packing gland spring	1.4401
16	1	Packing gland washer	1.4401
17	2	Packing gland	PTFE+PTFE GRAPHITE
18	1	Cap holder	1.4401
19	1	Cap	EPDM EPDM-PTFE coated PTFE
20	1	Cap stop washer	1.4401
21	2	Hexagon nut	1.4401
22	1	Spring housing piston	1.4301
27	1	Intermediate body	1.4308/1.4401
28	8	Hex. head screw	1.4301
29	1	Body gasket	PTFE
30	8	Spring washer	1.4301
31	8	Hexagon nut	1.4301
32	1	Shaft	1.4401
33	1	O-Ring gasket	FPM
34	1	Valve body	1.4408
42	1	Flat washer	Fe360
43	1	Piston bearing washer	Fe360
24+45	1	Date label	-
46	8	Hex. head screw	1.4301
47	8	Spring washer	1.4301
48	8	Hexagon nut	1.4301
70	1	Air connections	TECHNOPOLIMERY
71	1	Protection cap	PVC

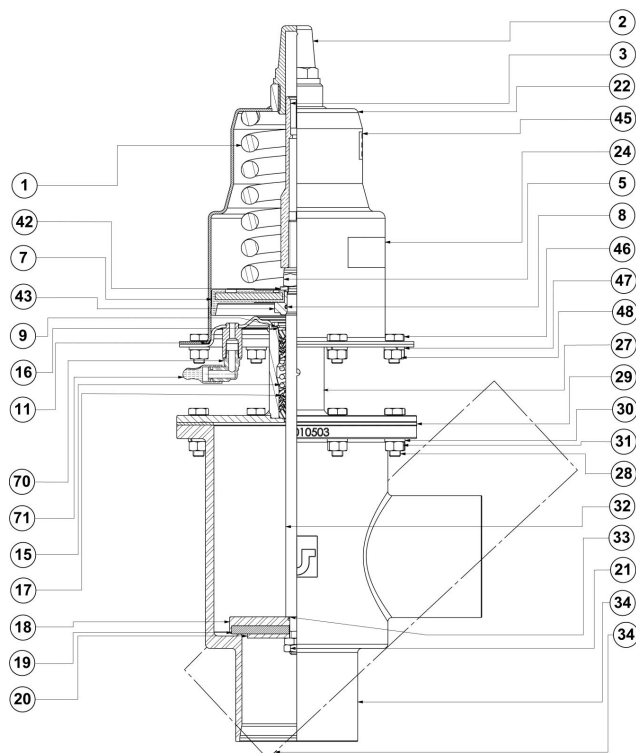

Body side spare parts


DN	SPARE PART CODE (Part No. 15-17-19-29-33)			
	PTFE	EPDM PTFE-coated	EPDM	FULL DISC CAP
65	10333	10332	10331	
80	9729	9728	9727	9730
100		10803		10691

Air side spare parts

Ø SERV.	SPARE PART CODE (Part No. 7-8-11-43)
Ø 125	9731

5.14 Parts and spare parts IVS-IVFL/07-08 DN 100 ÷ 150 with visual device

PART No.	Q.ty	DESCRIPTION	MATERIAL
1	1	Spring	STEEL 55iCr6
2	1	Transparent cap	PLASTIC
3	1	Stroke indicator	RED PVC
5	1	Self- locking nut	Fe360
7	1	TDUOP gasket	NBR Fe360
9	1	Seeger ring	1.4301
11	1	O-Ring gasket	GACO
15	1	Packing gland spring	1.4401
16	1	Flat washer	1.4401
17	2	Packing gland	PTFE+PTFE GRAPHITE
18	1	Cap holder	1.4401
19	1	Cap	EPDM EPDM-PTFE coated PTFE
20	1	Cap stop washer	1.4401
21	2	Hexagon nut	1.4401
22	1	Spring housing piston	1.4301
23	1	Data label	-
27	1	Intermediate body	1.4308/1.4401
28	(1)	Hex. head screw	1.4301
29	1	Body gasket	PTFE
30	(1)	Spring washer	1.4301
31	(1)	Hexagon nut	1.4301
32	1	Shaft	1.4401
33	1	OR gasket ⁽²⁾	FPM
34	1	Valve body	1.4408
42	1	Flat washer	Fe360
43	1	Piston bearing washer	Fe360
44	8	Hexagon nut	1.4301
46	12	Hex. head screw	1.4301
47	12	Spring washer	1.4301
48	12	Hexagon nut	1.4301
70	1	Air connections	TECHNOPOLIMERY
71	1	Protection cap	PVC

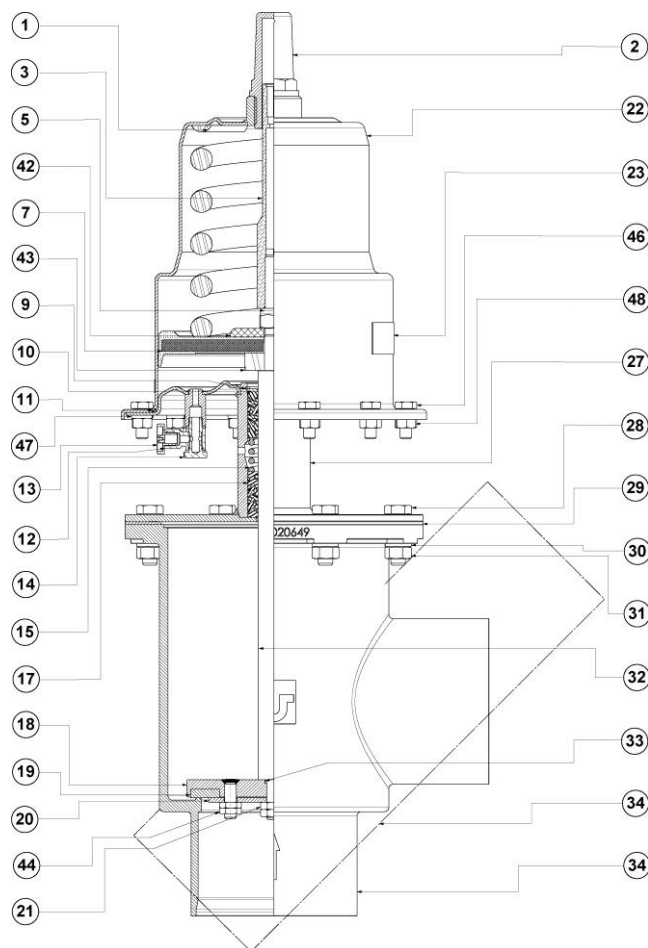

(1) N° 8 DN 100-125, N° 12 DN 150, N° 16 DN 200

(2) DN 100 only

Body side spare parts


DN	SPARE PART CODE (Part No. 15-17-19-29-33)			
	PTFE	EPDM PTFE-coated	EPDM	FULL DISC CAP
100		10804	10694	10802
125	10689	10687	10685	10692
150	10690	10688	10686	10693
200				

Air side spare parts

Ø SERV.	SPARE PART CODE (Part No. 7-11)
Ø 160	3948

5.15 Parts and spare parts IVS-IVFL/07-08 DN 15 ÷ 50 N.O.

PART	Q.ty	DESCRIPTION	MATERIAL
1	1	Servo control spring	Acc. for springs
4	2	Piston bearing	Fe360
5	1	Self- locking nut	Fe360
6	2	Piston bearing washer	Fe360
7	1	TDUOP gasket	NBR Fe 360
8	2	O-Ring gasket	GACO
9	1	Seeger ring	1.4301
15	1	Packing gland spring	1.4401
16	1	Packing gland washer	1.4401
17	2	Packing gland	PTFE+PTFE
18	1	Cap holder	1.4401
19	1	Cap	EPDM EPDM-PTFE coated PTFE
20	1	Cap stop washer	1.4401
21	2	Hexagon nut	1.4401
22	1	Spring housing piston	1.4301
23	1	Data label	-
24	2	Hex sunken conical	1.4301
25	2	Hexagon nut	1.4301
26	2	Clamp	1.4308
27	1	Intermediate body	1.4308/1.4401
28	(¹)	Hex. head screw	1.4301
29	1	Body gasket	PTFE
30	(¹)	Spring washer	1.4301
31	(¹)	Hexagon nut	1.4301
32	1	Shaft	1.4401
33	1	O-Ring gasket	FPM
34	1	Valve body	1.4408
49	1	Air fitting	1.4301
50	1	O-Ring gasket	GACO
70	1	Air connections	TECHNOPOLIMERY
71	1	Protection cap	PVC
74	1	Plain washer	Fe360
75	1	Piston	PA 66 FV 30
76	1	DE gasket	NBR
77	1	OR gasket	GACO

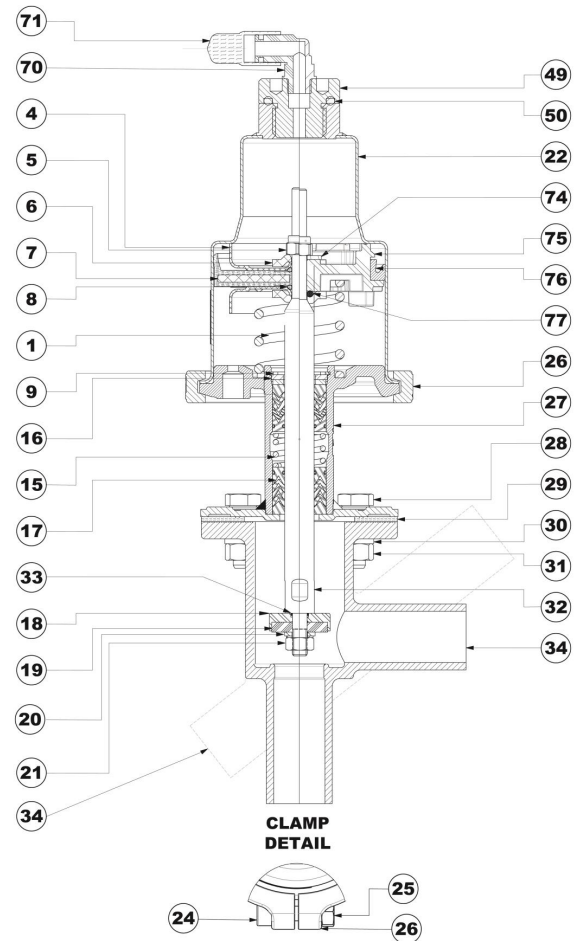

(¹) N° 4 DN 15-32, N° 8 DN 40-80

Body side spare parts

DN	SPARE PART CODE (Part No. 15-17-19-29-33)		
	PTFE	EPDM PTFE-coated	EPDM
15	10682	10679	10676
20			
25	10683	10680	10677
32	10560	10558	10556
40	10684	10681	10678
50	10561	10559	10557

Air side spare parts


Ø SERV.	SPARE PART CODE (Part No. 50-74-75-76-77)
Ø 70	6380
Ø 80	6381

5.16 Types of previous IVS-IVFL valves

There are two spare part codes: one includes the servocontrol side gaskets; one includes the body side gaskets.

The valves produced since the beginning of 2007 differ from the valves of the previous version only for the components fitted inside the intermediate body and for the intermediate body. Moreover, all the DN from 15 to 100 are no longer provided with oscillating cap holder (it is fixed).

5.16.1 Spare parts IVS-IVFL DN 15 ÷ 50 with visual device

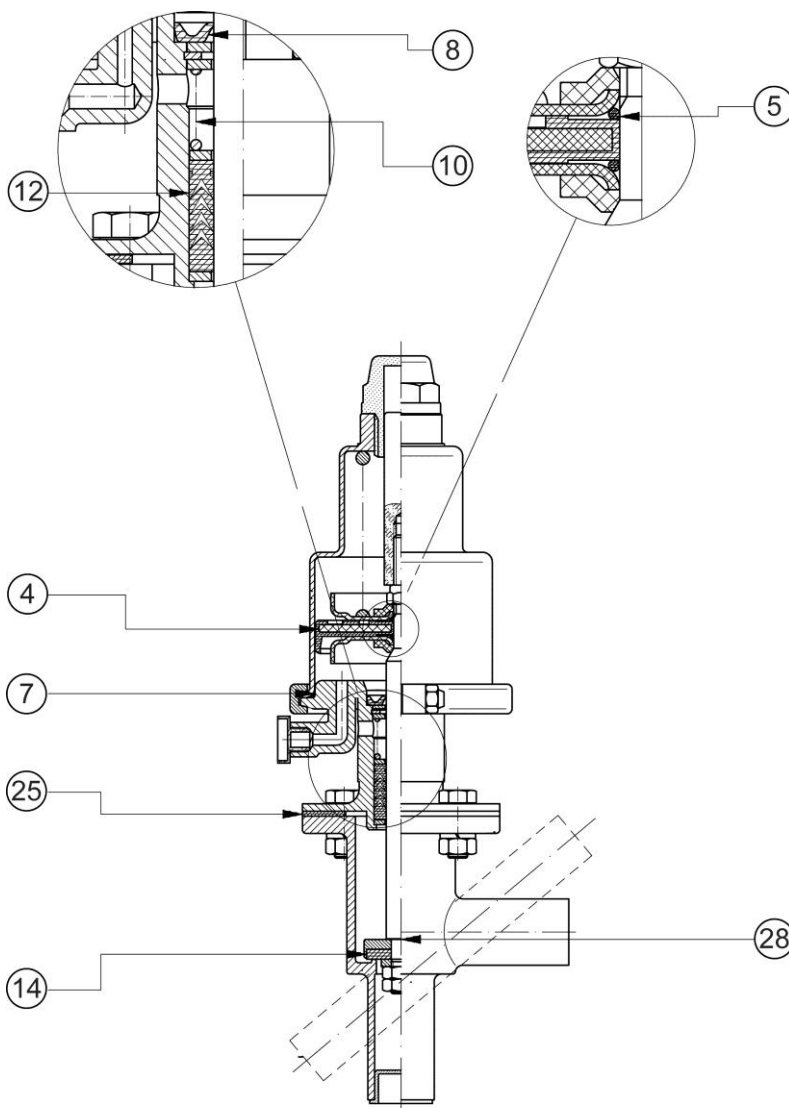

Body side spare parts


DN	SPARE PART CODE (Part N° 8-10-12-14-25-28)		
	PTFE	EPDM PTFE- coated	EPDM
15	5351	4190	2820
20	5351	4190	2820
25	5352	4191	2821
32	5353	4192	2822
40	5354	4193	2823
50	5355	4194	2824

Air side spare parts

Ø SERV.	SPARE PART CODE (Part No. 4-5-7)
Ø 70	3945
Ø 80	7896

Drawing no. 080409 Rev.:00

5.16.2 Spare parts IVS-IVFL DN 65 with visual device

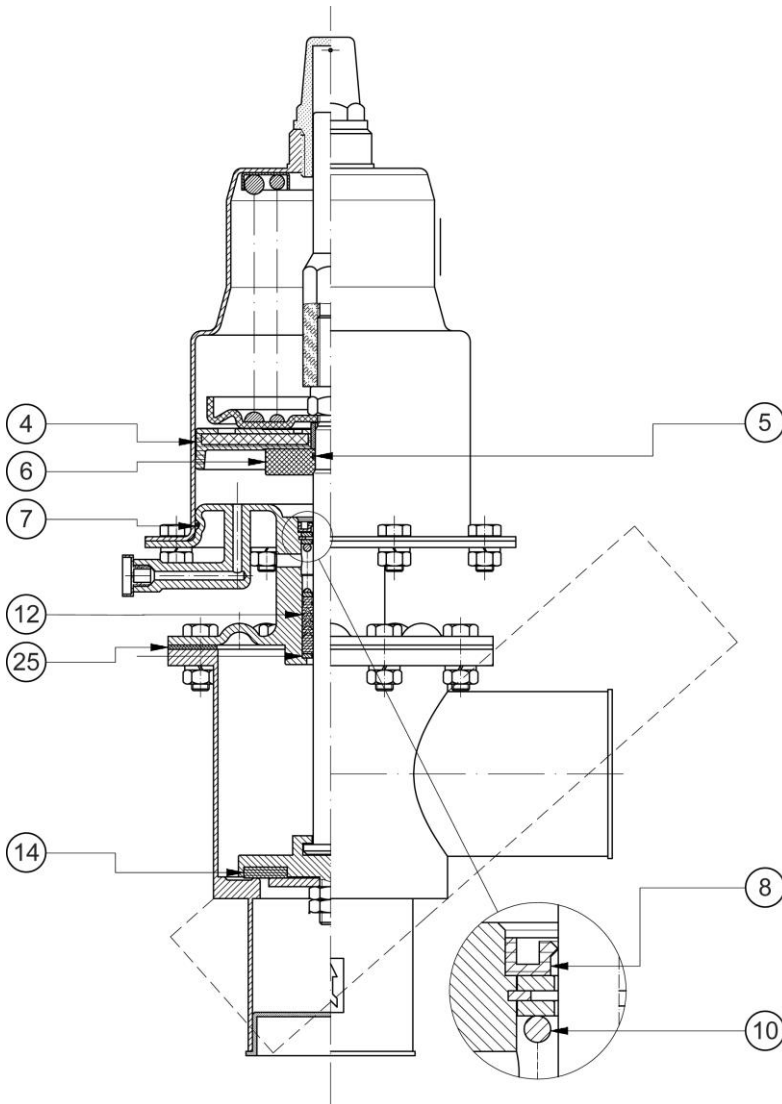

Body side spare parts


DN	SPARE PART CODE (Part No. 8-10-12-14-25)		
	PTFE	EPDM PTFE- coated	EPDM
65	8305	7586	7585

Air side spare parts

Ø SERV.	SPARE PART CODE (Part No. 4-5-6-7)
Ø 125	3947

Drawing no. 080408 Rev.:00

5.16.3 Spare parts IVS-IVFL DN 80 ÷ 200 with visual device

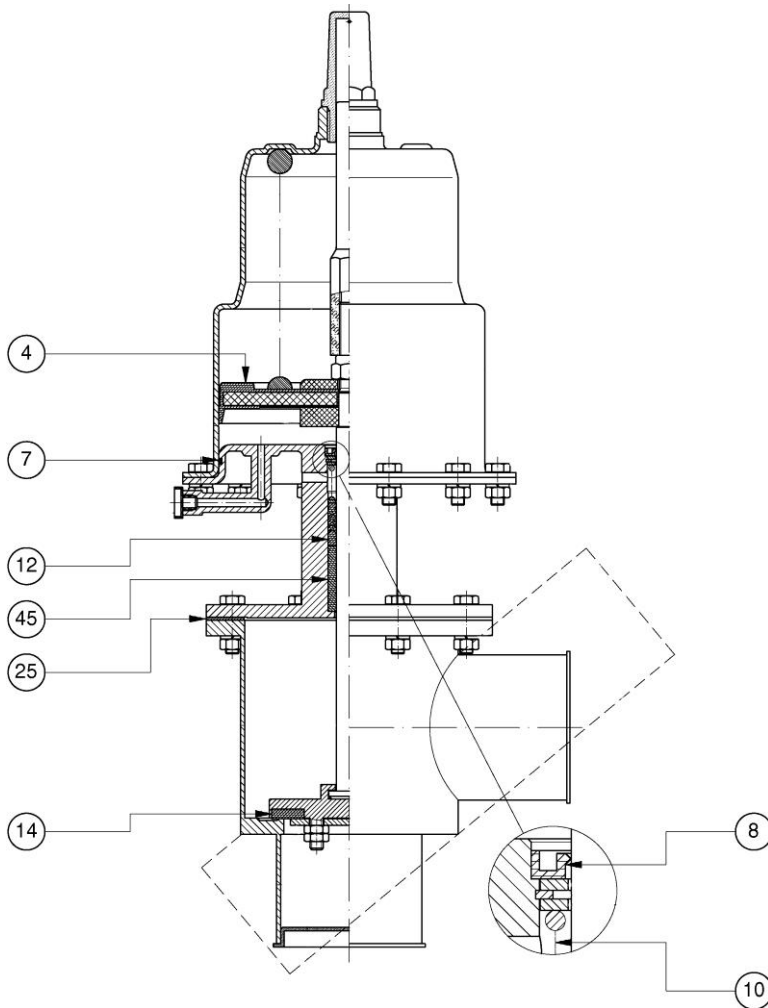

Body side spare parts

DN	SPARE PART CODE (Part N° 8-10-12-14-25-45)	
	EPDM PTFE-coated	EPDM
80	4196	2826
100	4197	2827
125	4198	2828
150	4199	2829
200	4200	2830



Air side spare parts

Ø SERV.	SPARE PART CODE (Part No. 4-7)
Ø 160	3948

Drawing no. 080410 Rev.:00

Annex 1 – Pneumatic limit switch type FINC000234

Minivalves 234-945

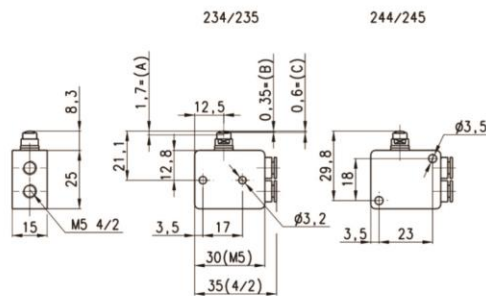

Code properties

Mod. 234-945	SYMBOL VM01
-----------------	----------------

Series general data

Construction	poppet - type (closed centre)
Valve group	3/2 way/pos., normally closed
Materials	aluminium body, OT58 (brass) plunger, NBR seals
Mounting	by through - holes in valve body
Ports	M5, cartridge dia. 4
Ambient temperature	0°C ÷ 60°C
Medium temperature	0°C ÷ 50°C
Operating pressure	see models
Fluid	Filtered air, without lubrication. If lubricated air is used, it is recommended to use ISO VG32 oil. Once applied the lubrication should never be interrupted.

Annex 2 – Pneumatic limit switch type FINCVME201



MINIVALVES, MECHANICALLY AND HAND OPERATED SERIES VME


- Minivalves with 3/2 NO NC poppet,
- Installation in any position
- Push-in fittings for pipe Ø 4 mm and M5 on the valve body
- Low actuation force
- Rapid, accurate signal
- Mechanical actuation
- The 2 places adapter allows manual actuation of 1 or 2 VME valves with manual Ø 22 panel actuators. Thus it is possible to obtain 3/2, 5/2, 5/3 open centre and 5/3 pressure centre pneumatic functions.
- On request, it is possible to place a NC-NO electric switch next to VME valve for mixed solenoid/pneumatic signals.




TECHNICAL DATA	
Valve fitting port	Push-in fitting for pipe diam. 4 and M5 (axial or side)
Fluid	Filtered air without lubrication; lubrication, if used, must be continuous
Type	With poppet
Versions	Mechanical and manual
Operators:	With Plunger – Plunger for wall-mounting – Roller lever – Unidirectional roller lever
• mechanical	Depending on the type of actuation panel selected
• manual	
Operating pressure	bar 0,5 to 10
Operating temperature range	°C -10° to +60
Nominal diameter	mm 2,5
Conductance C	Nl/min · bar 16,5
Critical ratio b	bar/bar 0,03
Flow rate at 6 Bar ΔP 0.5 Bar	Nl/min 35
Flow rate at 6 Bar ΔP 1 Bar	Nl/min 60
Actuation force – Plunger at 6 Bar	N 8
Recommended lubricant	ISO and UNI FD22
Installation	In any position
Compatibility with oils	Please refer to page 6-7 of the technical documentation

COMPONENTS

- ① VALVE BODY: Aluminium
- ② BUTTON: chemically nickel-plated brass
- ③ DISTANCE PLATES: Brass
- ④ GASKETS: NBR
- ⑤ PUSH-IN FITTING CARTRIDGES: stainless steel, brass and plastic
- ⑥ SPRINGS: stainless steel

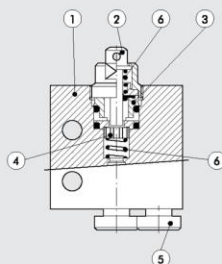

Ø 4

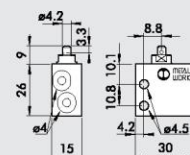

Code	Description
W3501001101	VME2-01 NC Ø 4

Annex 3 – Electromechanic limit switch type FINC00E100



Position switches

Technical data


Insulation resistance		500 V DC	MΩ	100
Dielectric strength		50/60 Hz per 1" *	V AC	2500
Rated insulation voltage	Ui	IEC947-5-1	V AC	500
Rated thermal current	Ithe	IEC947-5-1	A	10
Rated operating current	IEC947-5-1/EN60947-5-1			
Category AC15 A300	le	24 V	A	10
		125 V	A	6
		230 V	A	6
		400 V	A	3
Category DC13 Q300	le	24 V	A	6
		48 V	A	4
		120 V	A	1
		250 V	A	0,4
Contact resistance	IEC255-7 cat.3	initial value	mΩ	25
Short circuit protective devices	IEC269 (IEC947-5-1) gl or gG type fuse		A	10
Rated conditionals short circuit current	IEC947-5-1		A	1000
Pollution degree	IEC947-5-1			3
Protection degree	EN 60529		IP	66
Protection against electric shock		plastic	class	II
		metal	class	I
Vibration resistance	IEC68-2-6	mm		0,35 ± 15% (10 ÷ 55 Hz ± 1 Hz)
Shock resistance	IEC68-2-27	11 ms	g	30
Mechanical life			cycles	15.000.000
Electrical life	a 250 V AC 6A with resistance load cos φ=1		cycles	500.000
	a 250 V AC 6A with resistance load cos φ=0,4		cycles	500.000
Distance between contacts	snap action type		mm	2x1,25
	slow action type		mm	2x2
Terminals	Type		Screw with combined notch and retractable plate (notch Ph. Size 1)	
	Screw		M	3,5
	Protection degree		IP	20 A
	Material		Steel class 8,8/ Galvanized	
	Max. screw tightening torque		cNm (Kg cm)	120 (12,24)
	Max connecting capacity	rigid cable	mm ²	2x1,5
		flexible cable	mm ²	2x1,5
Terminal numbering		In accordance with EN50013		

Condition of use

Air ambient temperature	operational	°C	-35 ÷ +85 (without formation of ice)
Relative humidity	operational		95% max

* between terminals of the same polarity; between terminals with different polarity; between live mechanical parts and ground; between live mechanical parts and non-current-carrying metal parts

Operating features

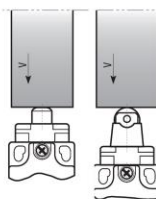


Plunger, Roller plunger, vertical travel Actuators: A-B

Drive cam operating parameters

	V max (m/s)
Act. A	0,5
Act. B	0,5

Drive forces

Minimum command force	9 N
Minimum forced opening force	28 N

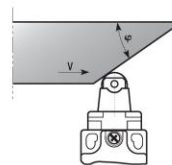

Roller plunger, side travel Actuator: B

Drive cam operating parameters


φ	V max (m/s)
30°	0,5
20°	1

Drive forces

Minimum command force	9 N
Minimum forced opening force	28 N


Steel roller plunger

Thermoplastic

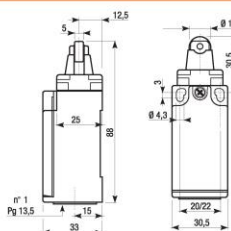

Part no. Contact block Circuit diagram Contact travel

E10000BI Snap action
1NO+1NC



Annex 4 – Electromechanic limit switch type FINC00161E

V3 - Standard 83 161 3


The strengths of the family

- Nominal ratings 0.1 A to 20 A / 250 VAC
- Operating temperature up to +125°C
- Conforming to EN 61058 and UL 1054
- Choice of actuators with 4 possible fixing positions


Reference characteristics	83 161 338
Function	I (changeover)
Connections	W3
Electrical characteristics	
Rating nominal / 250 VAC (A)	16
Rating thermal / 250 VAC (A)	20
Mechanical characteristics	
Maximum operating force (N)	0,8
Min. Release force (N)	0,2
Maximum total travel force (N)	2
Max. permitted overtravel force (N)	20
Maximum rest position (mm)	16,2
Operating position (mm)	14,7 ^{+0,3}
Maximum differential travel (mm)	0,35
Min. overtravel CRA (mm)	1,2
Ambient operating temperature (°C)	-20 → +125
Mechanical life for 2/3 CRA (operations)	2 x 10 ⁷
Contact gap (mm)	0,4
Weight (g)	5,6




Operating curve for types 831611 / 831613

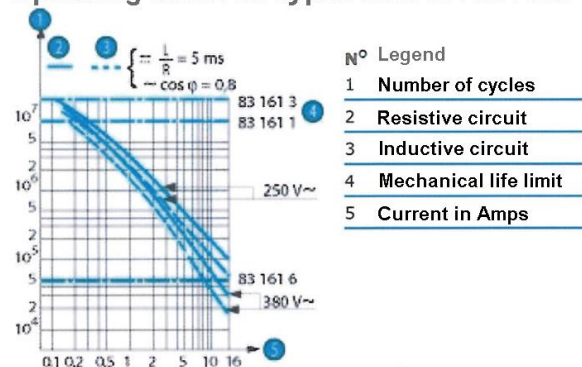

Single break changeover switch

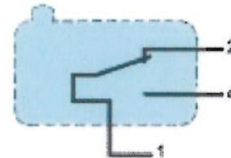


→ *Encombrements

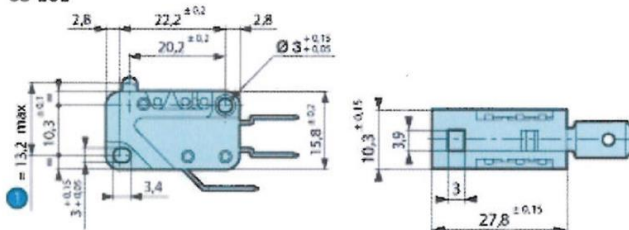


→ *Connexions


W3 per faston 6,35 mm (6,3 x 0,8)

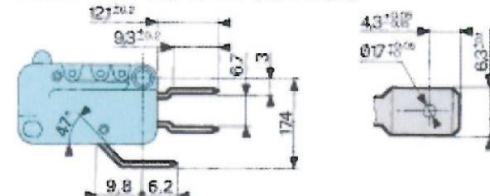

→ *Levier position d'ancrage

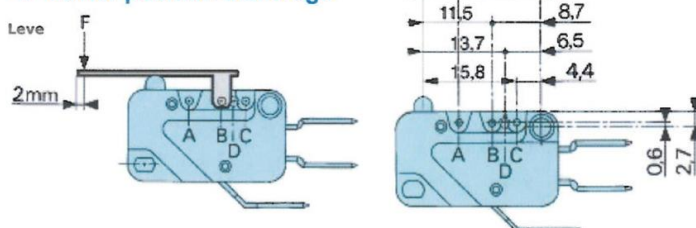

→ *Accessoires de manoeuvre

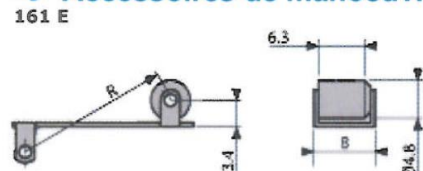


Annex 5 – 2-wire inductive proximity switch A.C. N.O.

Proximity Sensors

XS6 Extended Range and Auto-Adaptable Inductive Sensor Metal Tubular, DC and AC/DC



Dimensions



	Cable		Connector	
	a	b	a	b
∅ 8	1.9 (50)	1.6 (42)	2.4 (61)	1.6 (40)
∅ 12	1.9 (50)	1.6 (42)	2.4 (61)	1.6 (42)
∅ 18	2.3 (60)	0.09 (51)	2.8 (72.2)	2.0 (51)
∅ 30	2.3 (60)	0.09 (51)	2.8 (72.2)	2.0 (51)

in. (mm)

Features

Entire range of fully shielded metal body tubular inductive proximity sensors

- Increased sensing range, fully shielded
- 2-wire AC/DC and 3-wire DC
- Normally open or normally closed outputs available
- Cable and connector versions
- PNP or NPN, DC
- Self-Teach available on 12–30 mm versions

Nominal Sensing Distance	Circuit Type	Output Mode	Voltage Range	Load Current Maximum	Operating Frequency DC	AC	Catalog Number
12 mm Diameter, 2 m (6.6 ft) cable ▲							
4 mm	2-wire	N.O.*	12–48 Vdc	1.5–100 mA	4,000 Hz	25 Hz	XS612B1MAL2



- * To order a normally closed (N.C.) version, change the A to B. Example: XS518B1PAL2 to XS518B1PBL2.
- ◆ Self-teach version only
- ▲ For a 5 m (16.4 ft) cable length, add suffix L5. For a 10 m (32.8 ft) cable length, add suffix L10.

Minimum Mounting Clearances, in. (mm)

Auto-Adaptable				Extended Range			
Side by Side		Face to Face		Side by Side		Face to Face	
Flush	Not Flush	Flush	Not Flush	Flush	Not Flush	Flush	Not Flush
∅ 12 e ≥ 0.55 (14)	1.9 (50)	e ≥ 1.9 (50)	3.9 (100)	∅ 8 e ≥ 0.1 (3)	e ≥ 0.7 (18)	∅ 12 e ≥ 0.2 (4)	e ≥ 0.9 (24)
∅ 18 e ≥ 1.1 (28)	3.9 (100)	e ≥ 3.9 (100)	7.9 (200)	∅ 18 e ≥ 0.4 (10)	e ≥ 2.4 (60)	∅ 18 e ≥ 0.4 (10)	e ≥ 2.4 (60)
∅ 30 e ≥ 1.9 (48)	7.1 (180)	e ≥ 7.1 (180)	14.1 (360)	∅ 30 e ≥ 0.8 (20)	e ≥ 4.7 (120)	∅ 30 e ≥ 0.8 (20)	e ≥ 4.7 (120)

Wiring


3-Wire Selectable

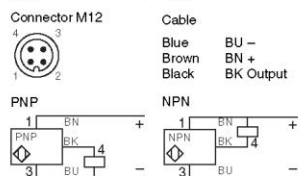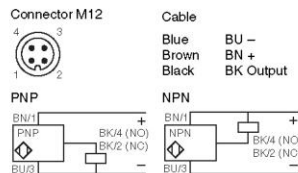


2-Wire AC/DC



2-Wire Non-Polarized








Specifications

Mechanical	Extended Range	Auto-Adaptable	
		Shielded	Non-Shielded
Fine Detection Zone	12 mm	0–3.2 mm	1.7–3.4 mm
Sn	12 mm	—	0–3.4 mm
Temperature Rating	Storage	-40 to +185 °F (-40 to +85 °C)	
	Operation	-13 to +158 °F (-25 to +70 °C)	
Enclosure Rating	NEMA Type	3, 4X, 6P, 12, 13	
	IEC	IP68 cable versions (IP67 connector versions)	
Enclosure Material	Case	Nickel-plated brass	
	Face	PBT	
Maximum Tightening Torque	12 mm	15 N•m (11 lb-ft)	
Vibration	25 g, ±2 mm amplitude (10–55 Hz)		
Shock Resistance	50 g, 11 ms duration		
Differential (% of Sr)	15%		
Repeatability (% of Sr)	3%		
LED Indicator	Power and Teach	—	
	Output	Green	
Cable	PVR 3 x 0.34 mm ² / PVR2 x 0.5 mm ²		
Connector	M12 4-pin / U20 3-pin micro-style	M12 micro-style 4-pin	
Electrical	2-wire AC/DC	3-wire DC	Auto-adaptable DC
Voltage Range	24–240 Vac; 24–210 Vdc	12–48 Vdc	12–24 Vdc
Voltage Limit (Including Ripple)	20–264 Vac/Vdc	10–58 Vdc	10–36 Vdc
Voltage Drop	5.5 V	2 V	2 V
Maximum Leakage (Residual) Current—Open State	0.8 mA	—	—
Current Consumption	—	10 mA	10 mA
Maximum Current Limit	AC: 5–300 mA; DC: 5–200 mA	200 mA	100 mA
Power-up Delay (Maximum)	20 ms—12 mm; 25 ms—18/30 mm	5 ms	5 ms
On Delay (Maximum)	12 mm	0.5 ms	0.3 ms
Off Delay (Maximum)	12 mm	0.2 ms	0.7 ms
Operating Frequency, Maximum	12 mm	AC: 25 Hz / DC: 1,000 Hz	2,500 Hz
Protective Circuitry	Short Circuit Protection	No	Yes
	Overload Protection	Yes	Yes
	Reverse Polarity Protection	Yes	Yes
Agency Listings			

Annex 6 – 3-wire inductive proximity switch D.C. N.O.

CYLINDRICAL INDUCTIVE SENSORS IN METAL HOUSING

- Voltage 20 ÷ 240 V_~
- Amplified in d.c. + a.c. 2 wires
- Cable output

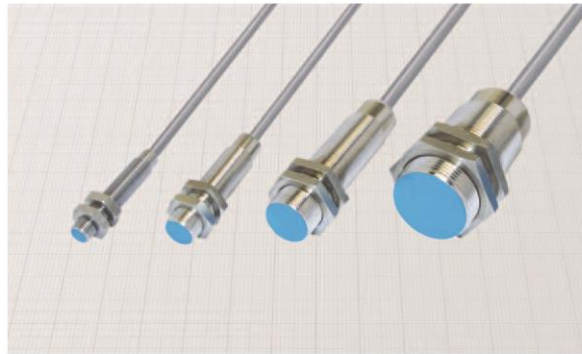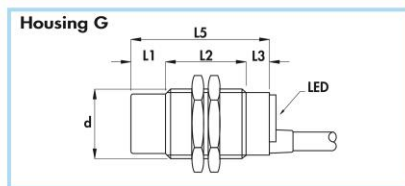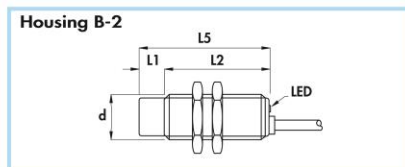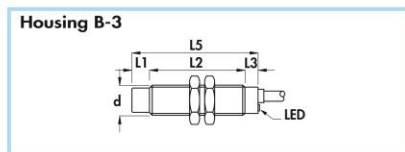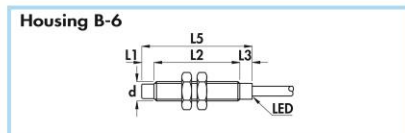

Diameter	M8 x 1	M12 x 1	M18 x 1	M30 x 1,5
Nut Size	SW13	SW17	SW24	SW36
Thickness mm	4	4	4	5
Max tightening torque Nm	10	15	35	80

Materials:

- Cable: 2 m PVC CEI 20 - 22 II; 90°C; 300 V; O.R.
- Housing 8 mm: stainless steel
- Housing 12 - 18 - 30 mm: nickel plated brass
- Sensing face: plastic

General Features:

These sensors are able to work with either direct or alternate current. Voltage drop and residual current are very low. They are not polarized and the load can be connected on both the leads. In many applications they can be used to replace mechanical microswitches.

Technical data:

- Supply voltage (U_B): 20 ÷ 240 Vdc/Vac
- Electrical system frequency: 40 ÷ 60 Hz
- Off-state current (I_o) at 24 V: ≤ 1 mA
- Off-state current (I_o) at 220 V: ≤ 1,5 mA
- Minimum operational current (I_m): 5 mA
- Voltage drop (U_d): ≤ 5 V
- Temperature range: -25° ÷ +70°C
- Max thermal drift of sensing distance S_r: ± 10%
- Repeat accuracy (R): ± 2%
- Switching hysteresis (H): 10%
- Degree of protection: IP67
- Switch status indicator: yellow LED
- Cable conductor cross section: 0,35 mm² on 8 and 12 mm
0,50 mm² on 18 mm
0,75 mm² on 30 mm
- Protected against short-circuit and overload (versions with letter K)
- Suppression of initial false impulse
- Class 2 equipment according to IEC 536
- Shock and vibration according to EN60068-2-27 EN60068-2-6
- Electromagnetic compatibility (EMC) according to EN60947-5-2

Housing	Flush mounting Non-flush mounting	L1	L2	L3	L4	L5	Cable diameter	Body diameter (d)	Max switching frequency (F) in d.c.	Max switching frequency (F) in a.c.	Rated operational current (I _o)	Nominal sensing distance (S _r) ± 10%	ORDERING REFERENCES	
													NO	NC
B-6	•	-	40	5	-	45	3,5	M8 x 1	1000	25	100	1,5	AX8/4609S	AX8/4619S
B-6	•	5	35	5	-	45	3,5	M8 x 1	800	25	100	2,5	AX8/5609S	AX8/5619S
B-3	•	-	43	7	-	50	4	M12 x 1	800	25	100	2	AX12/4609KS	AX12/4619KS
B-3	•	7	36	7	-	50	4	M12 x 1	600	25	100	4	AX12/5609KS	AX12/5619KS
B-2	•	-	50	-	-	50	5	M18 x 1	800	25	200	5	AX18/4A09KS	AX18/4A19KS
B-2	•	10	40	-	-	50	5	M18 x 1	400	25	200	8	AX18/5A09KS	AX18/5A19KS
G	•	-	50	10	-	60	6	M30 x 1,5	400	25	200	10	AX30/4609KS	AX30/4619KS
G	•	15	35	10	-	60	6	M30 x 1,5	200	25	200	15	AX30/5609KS	AX30/5619KS

Annex 7 – 2-wire magnetic sensor A.C. N.O.

Proximity Magnetic Sensors Cylindrical Body, FSM Series



- Cylindrical case
- Brass or nickel plated brass body
- M12 or M16 diameter
- NO or CO output functions
- Front side switching

Product Description

The cylindrical proximity magnetic sensors of the FSM series are available in different versions with brass or nickel-plated brass body, different dimensions and output contacts and can be mounted

directly on ferromagnetic supports. FSM.A.7 model is provided with output function status LED, while FSM.S.2/S2/AT can resist to temperatures up to 180 °C.

Ordering Key

FSM.S.2/S2/AT

Type _____
 Output Function _____
 Reed Contact Type _____
 Special Versions _____
 Special Applications _____

Type Selection

Dimensions	Output function	High temperature applications	Reference
M12 x 1	NO	-	FSM.A.2 FSM.A.7 FSM.S.2
M16 x 1	Change-over	- Yes	FSM.S.2/S2 FSM.S.2/S2/AT

General specification

Case	Output connection
FSM.A.2 FSM.A.7 FSM.S.2 FSM.S.2/S2 FSM.S.2/S2/AT	FSM.A.2 FSM.S.2 FSM.S.2/S2 FSM.A.7 FSM.S.2/S2/AT
Nickel-plated brass Brass	PVC Cable Silicone Cable
Protection degree IP67	
Operating temperature FSM.S.2/S2/AT	
-25 to +75°C -25 to +180°C	

Electrical specifications


Contacts	2	7	S.2
Max switching voltage	250 Vac	-	220 Vac
Max switching current	3 A	50 mA	1 A
Max switching power	100 VA	-	60 VA

Operating distance


Magnetic Units	CL.10	CL.11	CL.18	CL.20/S1	CL.20/S3	CL.23	CL.31	CL.50
FSM.A.2	-	16	2	14	13	11	19	-
FSM.S.2	-	9	-	-	-	-	-	19
FSM.A.7*	-	-	-	-	-	-	-	-
FSM.S.2/S2/AT	-	-	-	-	8	-	-	-

* ≥ 7 mm with Neodimium REN 35, 5x5x1,5 magnetic unit mounted on iron

Dimensions

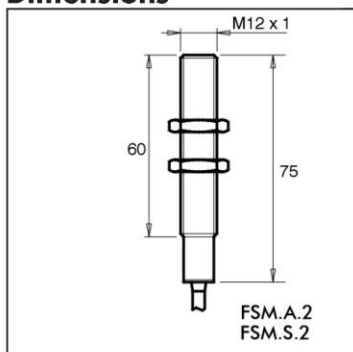

Wiring Diagrams

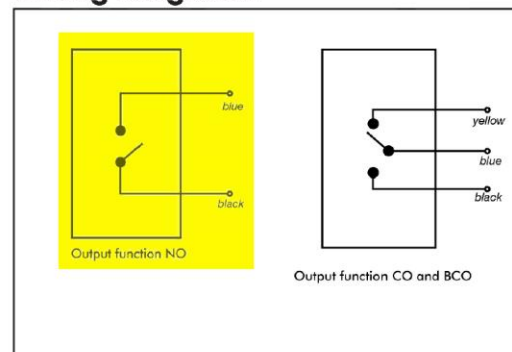

6 Table 4: Tightening Torques

Part match	Tightening torque for stainless steel valve threaded couplings [Kg·m]											
	ND 15	ND 20	ND 25	ND 32	ND 40	ND 50	ND 65	ND 80	ND 100	ND 125	ND 150	ND 200
P. 21	0,65	1,5			3			1,5				
P. 25 P. 24	0,65											
P. 29 P. 31	2,5							4,5				
P. 46 P. 48							1,5					
P. 22 P. 49	7,0						19,6					

7 Disposal

After use, for the valve disposal, it is necessary to disassemble the valve and separate the different materials the valve is composed of, according to the tables annexed to the valve working drawings, then dispose of the different materials in compliance with the laws in force. Assembly and disassembly operations shall be carried out by qualified personnel only, equipped with all the work and safety tools. **ATTENTION! Compressed springs are included inside the servo control.** Thus, during valve disassembly, components are disposed of by using all safety equipment necessary to prevent sudden separation of upper head from lower head when all servo control upper head fastening screws have been removed.

8 Warranty

Every valve is checked before leaving the factory. On request of customer a certificate of control can be issued. The customer himself can inspect and check the material at our factory before shipment. Such inspection is considered definitive.

All expenses relative to special checks or requirements by the customer are at the customers expense.

Our responsibility (for damage to person or/and properties during installation and/or maintenance) lapses when the valve is removed from its original packaging.

Our responsibility is limited to the replacement or repair of parts which develop material or manufacturing defects within 12 months from shipment and which have been used in normal working conditions. This use exclude every and any other obligation. All transport and additional costs are at the customer expense.

ITALVALVOLE[®] reserved the right to stop, change or modify the characteristics of any of its products without being obliged to replace or mount the modified parts on products already supplied.

WARNINGS:

- The safety conditions shall not be guaranteed and malfunctions shall not be subjected to valves in case:
 - disassembly, re-assembly, maintenance operations are not carried out in compliance with the use and maintenance manual.
 - original spare parts are not used.
- It is forbidden to remove pages from this document or to make any correction.
- In case of doubt, make reference to Italian version of the manual.
- ITALVALVOLE[®] S.A.S. reserves the right to change its products and the relevant documentation without prior notice.
- The use of the handbook does not exempt from the observance of the laws in force.
- We inform you that some components may come from countries other than Italy.