

873ACC Ace Series Electrochemical Analyzers for Contacting Conductivity Measurement

Style A



(873APH Version Shown)

Contents

Figures.....	v
Tables.....	vii
1. Introduction	1
Quick Start	1
Step 1 - Wiring	1
Step 2 - Verify Analyzer Identification	3
Step 3 - Verify Valid Measurements	3
Looking for More Information?	4
General Description	5
Instrument Features	5
Enclosures	5
Dual Alarms	5
No Battery Backup Required	6
Hazardous Area Classification	6
Display	6
Keypad	6
Application Flexibility	6
Storm Door Option	6
Analyzer Identification	7
Standard Specifications	8
Product Safety Specifications	10
2. Installation	11
Mounting to a Panel - Plastic Enclosure, 873ACC-__ P	11
Mounting to a Panel - Metal Enclosure 873ACC-__ W	12
Mounting to a Pipe - Metal Enclosure, 873ACC-__ Y	12
Mounting to a Surface, Fixed Mount - Metal Enclosure, 873ACC-__ X	14
Mounting to a Surface, Movable Mount - Metal Enclosure, 873ACC-__ Z	16
Wiring of Plastic Enclosure	18
Wiring of Metal Enclosure	19
Wiring of Alarms	21
3. Operation	23
Overview	23
Display	23
Keypad	24
To View Process Temperature	26

To View Setup Entries	27
4. Configuration.....	29
User Configuration Setup Entries	29
Alarms	30
Output	31
Changing Sensors (SEnS)	33
Full Scale Range (FSC)	33
5. Calibration	35
Electronic Bench Calibration	35
Calibration of Cell Channel	35
Checking the Temperature Circuit Calibration.	36
Zero and Span Calibration	36
Calibrating the Analyzer to a Specific Sensor	38
Determining Temperature Cell Factor (tCF)	39
Entering a tCF Value	40
Entering a CF Value	40
Standardization Using a Known Solution	40
6. Diagnostics.....	41
Troubleshooting	41
Error Codes	41
7. Alarm Contact Maintenance.....	43
8. Warranty.....	45
Index.....	47

Figures

1	Rear Panel Wiring - Plastic Version	2
2	Rear Panel Wiring - Metal Version	3
3	Front Panel Display and Keypad	7
4	Data Label	7
5	Mounting to Panel - Plastic Enclosure	11
6	Mounting to Panel - Metal Enclosure	12
7	Metal Enclosure - Pipe Mounting	13
8	Metal Enclosure - Fixed Mount	15
9	Metal Enclosure - Movable Mount	17
10	Rear Panel Wiring - Plastic Enclosure	18
11	Rear Panel Wiring - Metal Enclosure	20
12	Display and Keypad	24
13	Sensor Identification	39
14	Alarm Contact Reconditioning Circuit	43

Tables

1	Product Safety Specifications	10
2	Recommended Conduit and Fitting (Due to Internal Size Restraints)	20
3	Keypad Functions	25
4	User Configuration Setup Entries	29
5	Resistance Inputs	38
6	Troubleshooting Symptoms	41
7	Error/Alarm Messages	41

1. Introduction

Quick Start

The purpose of this section is to give you the basic steps to quickly begin using your 873ACC Electrochemical Analyzer.

- ◆ Step 1 - Wiring
- ◆ Step 2 - Verify Analyzer Identification
- ◆ Step 3 - Verify Valid Measurements

Step 1 - Wiring

— **! CAUTION** —

Wiring installation must comply with any existing local regulations.

The 873A Analyzer is supplied in two types – plastic enclosure or metal enclosure. Follow the wiring instructions for the type of enclosure that you have. More wiring information can be found in the sections on “Wiring of Plastic Enclosure” on page 18 and “Wiring of Metal Enclosure” on page 19.

Wiring of Plastic Enclosure (General Purpose Version)

1. Remove optional rear cover assembly BS805QK, if present.
2. Connect ALM 1 and ALM 2 alarm wires to terminal block TB3 as shown in Figure 1. Failsafe operation requires connections to be made between contacts NC and C. For details see “Wiring of Alarms” on page 21.
3. Connect wires from external circuit to analog output terminals TB3 (M+) and TB3 (M–). Refer to Figure 1.

— **NOTE** —

Only 871CC type Sensors can be used with the 873ACC Analyzer. Model 500, 910, 920, 921, and 923 Sensors cannot be used with the 873A Analyzer. The 871CC Sensor types “A” through “F” use a 100 k Ω thermistor for automatic temperature compensation. The 871CC Sensors “K” through “M” use a 100 Ω RTD for automatic temperature compensation and are recommended for all measurements at elevated temperature.

4. Remove factory-installed jumper assembly from terminal block TB2 and discard.
5. Connect sensor wires to analyzer terminal block TB2 as shown in Figure 1.
6. Connect power wires to terminal block TB1 as shown in Figure 1.
7. Attach optional rear panel cover, if present.

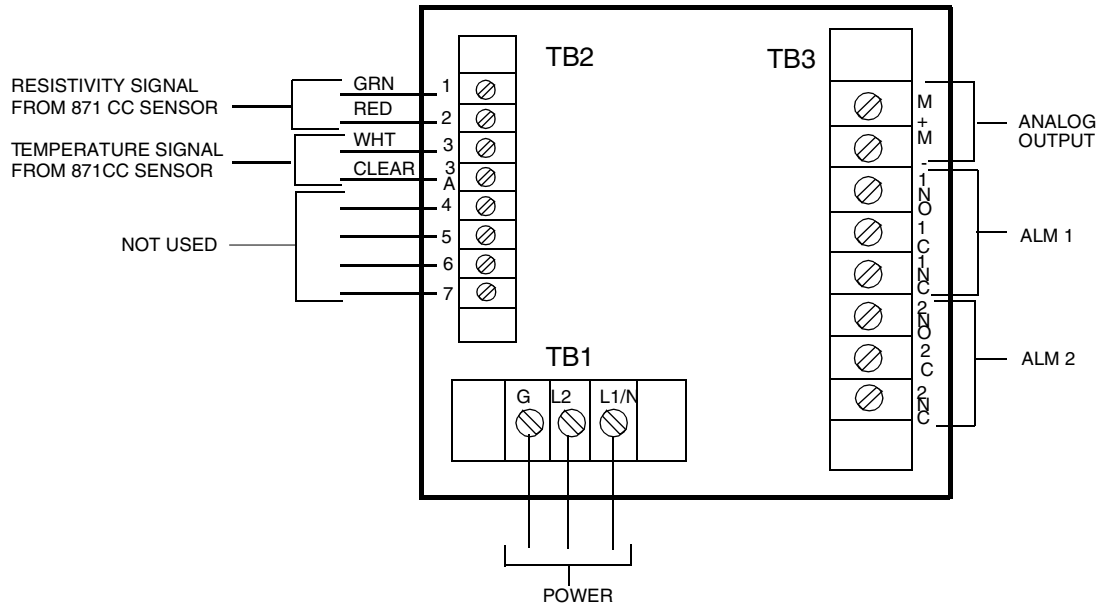


Figure 1. Rear Panel Wiring - Plastic Version

Wiring of Metal Enclosure (Field-Mounted Version)

— **NOTE** —

1. To maintain the enclosure tightness rating, such as NEMA 4X, CSA Enclosure 4X, or IEC Degree of Protection IP-65, wiring methods and fittings appropriate to the ratings must be used.
2. Alarm wires should run with the power wires. Sensor wires should run with analog output wires.

1. Remove back cover to access terminal/power board.
2. Connect ALM 1 and ALM 2 Alarm wires to terminal block TB3 as shown in Figure 2. Failsafe operation requires connections to be made between contacts NC and C. For details see “Wiring of Alarms” on page 21.
3. Connect wires from external circuit for analog output to terminal block TB4.
4. Connect sensor wires to analyzer terminal block TB2 as shown in Figure 2.

— **NOTE** —

Only 871CC type Sensors can be used with the 873ACC Analyzer. Model 500, 910, 920, 921, and 923 Sensors cannot be used with the 873A Analyzer. Sensors “A” through “F” use a 100 k Ω thermistor for temperature compensation. Sensors “K” through “M” use a Pt 100 Ω RTD for temperature compensation and are recommended for all work at elevated temperature.

5. Connect power wires to terminal block TB1 as indicated in Figure 2. The earth (ground) connection from the power cord should be connected to the stud located in the bottom of the case.

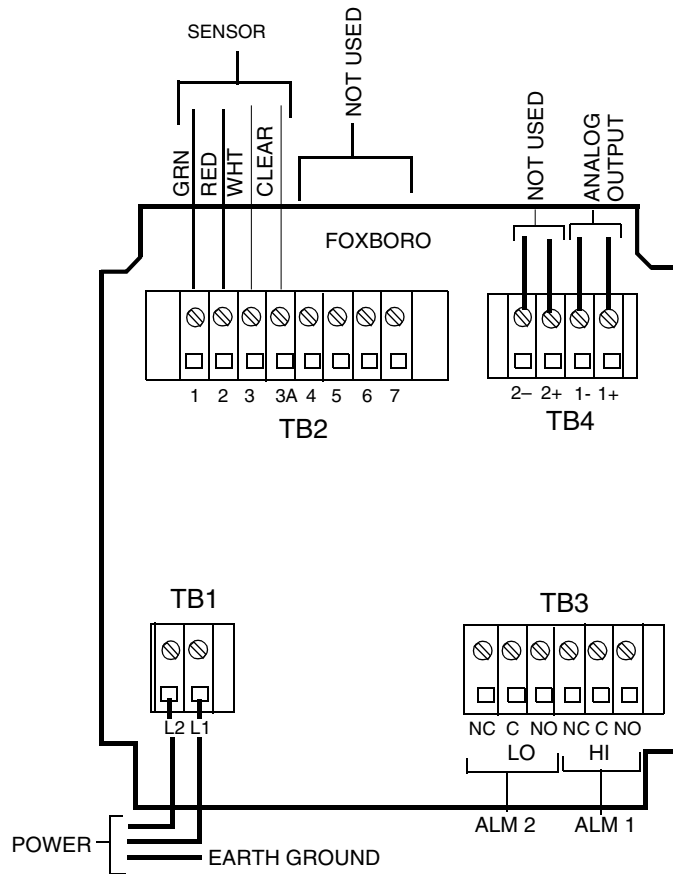


Figure 2. Rear Panel Wiring - Metal Version

Step 2 - Verify Analyzer Identification

Verify the information shown on the data label on the side of the instrument. Note especially the range shown beside “CALIB.” This range should encompass your desired measurement range.

To reconfigure your instrument, refer to Table 4, “User Configuration Setup Entries,” on page 29.

Step 3 - Verify Valid Measurements

Your analyzer was calibrated at the factory. Therefore, you should not have to calibrate it. However, it is good practice to adjust your analyzer to your sensor. See “Calibrating the Analyzer to a Specific Sensor” on page 38.

Looking for More Information?

For more detailed information, refer to the following sections of this manual:

For installation information, refer to “Installation” on page 11. For dimensional information, refer to DP 611-163.

For detailed explanation of the controls and indicators, refer to “Operation” on page 23.

For detailed configuration instructions, refer to “Configuration” on page 29.

For detailed calibration instructions, refer to “Calibration” on page 35.

If you need additional help, please call the Invensys Foxboro Electrochemical Service Center at 1-508-549-4730 in the U.S.A. or call your local Invensys Foxboro representative.

General Description

The 873ACC Analyzer interprets the conductivity of aqueous solutions. Its measurement display may be read in either $\mu\text{S}/\text{cm}$ or mS/cm . Solution temperature is also measured by the 873ACC for automatic temperature compensation and may be displayed at any time. It provides an isolated output signal proportional to the measurement for transmission to an external receiver.

Instrument Features

Described below are some of the features of the 873ACC Electrochemical Analyzer:

- ◆ Plastic or Metal Enclosure
- ◆ Dual Alarms
- ◆ Analog Output
- ◆ EEPROM Memory
- ◆ Hazardous Area Classification on Metal Enclosure
- ◆ Front Panel Display
- ◆ Front Panel Keypad
- ◆ Application Flexibility
- ◆ Storm Door Option

Enclosures

The plastic enclosure is intended for panel mounting in general purpose locations, and mounts in 1/4 DIN size panel cutout. It meets the enclosure ratings of NEMA 1 and CSA Enclosure 1.

The metal enclosure is intended for field locations and may be panel, pipe, or surface mounted. The housing is extruded aluminum coated with a tough epoxy-based paint. The enclosure is watertight, dusttight, corrosion-resistant, meeting the enclosure ratings of NEMA 4X, CSA Enclosure 4X, and IEC Degree of Protection IP-65, and fits in a 92 x 92 mm (3.6 x 3.6 in) panel cutout (1/4 DIN size). The metal enclosure provides protection against radio frequency interference (RFI) and electromagnetic interference (EMI).

Dual Alarms

Dual independent, Form C dry alarm contacts, rated 5 A noninductive 125 V ac/30 V dc are provided. The alarm status is alternately displayed with the measurement on the LED (light-emitting diode) display.

—  **CAUTION** —

When the contacts are used at signal levels of less than 20 W, contact function may become unreliable over time due to the formation of an oxide layer on the contacts. See “Alarm Contact Maintenance” on page 43.

No Battery Backup Required

Nonvolatile EEPROM memory is employed to protect all operating parameters and calibration data in the event of power interruptions.

Hazardous Area Classification

The metal field-mounted versions are designed to meet the Factory Mutual and the Canadian Standards Association requirements for Class I, Division 2 hazardous locations. See Table 1 for details.

Display

The instrument's display consists of a four-digit bank of red LEDs with decimal point, and an illuminated legend area to the right of the LEDs (see Figure 3). The 14.2 mm (0.56 in) display height provides visibility at a distance up to 6 m (20 ft) through a smoke-tinted, nonreflective, protective window on the front panel.

The measurement value is the normally displayed data. If other data is displayed due to prior keypad operations, the display automatically defaults to the measurement value about four minutes after the last keypad depression.

If no fault or alarm conditions are detected in the instrument, the measurement value is steadily displayed. If fault or alarm conditions are detected, the display alternates displaying the measurement value and a fault or alarm message at a 1 second rate.

Keypad

The instrument's front panel keypad consists of eight keys. Certain keys are for fixed functions; and other keys are for split functions. The upper function (green legends) of a split function key is actuated by pressing the **Shift** key in conjunction with the split function key. Refer to Figure 3.

Application Flexibility

The 873A Analyzer offers application flexibility through its standard software package. The software, run on the internal microprocessor, allows the user to define and set operating parameters particular to his application. These parameters fall into three general categories: Measurement Range, Alarm Configuration, and Output Characterization. These parameters are retained in the EEPROM nonvolatile memory. Following power interruptions, all operating parameters are maintained.

Storm Door Option

This door is attached to the top front surface of the enclosure. It is used to prevent accidental or inadvertent actuation of front panel controls, particularly in field mounting applications. The transparent door allows viewing of the display and is hinged for easy access to the front panel controls.

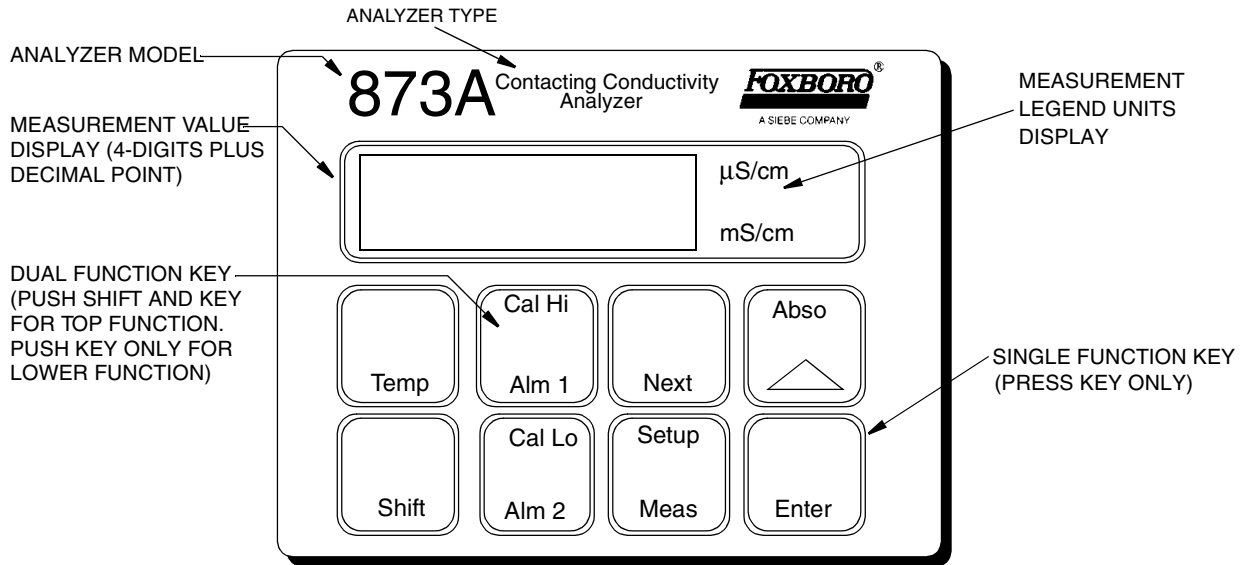


Figure 3. Front Panel Display and Keypad

Analyzer Identification

A data label is located on the side surface of the enclosure. This data label provides Model Number and other information pertinent to the particular analyzer purchased. Refer to Figure 4.

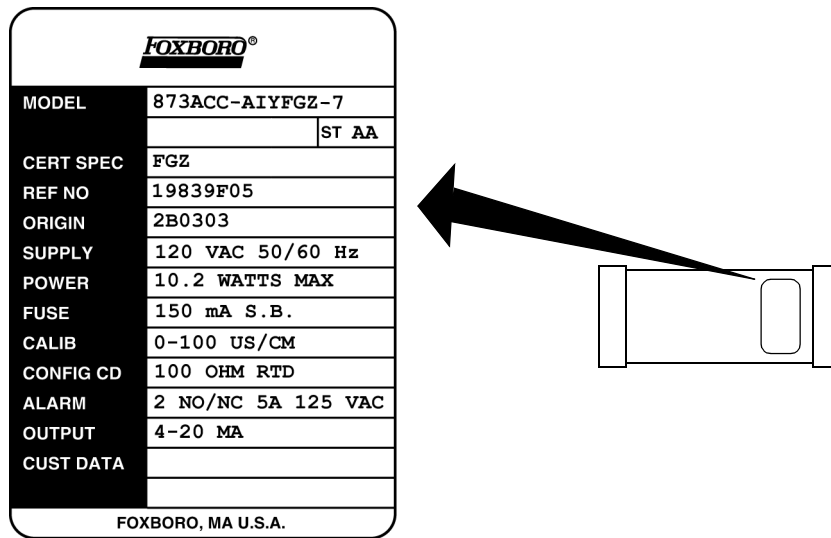


Figure 4. Data Label

Standard Specifications

Supply Voltages

- A 120 V ac
- B 220 V ac
- C 240 V ac
- E 24 V ac
- J 100 V ac

Supply Frequency

50 or 60, ± 3 Hz

Output Signal

- I 4 to 20 mA isolated
- T 0 to 10 V dc isolated
- E 0 to 20 mA isolated

Ambient Temperature Limits

-25 to $+55$ °C (-13 to $+131$ °F)

Measurement Ranges

0 to 1, 2, 5, 10, 20, 50, 100, 200, and 500 $\mu\text{S}/\text{cm}$;
0 to 0.1, 0.2, 0.5, 1, 2, 5, 10, and 20 mS/cm .

Temperature Measurement Range

-17 to $+199$ °C (0 to 390 °F) w/100 Ω RTD
 -17 to $+121$ °C (0 to 250 °F) w/100 k Ω thermistor

Temperature Compensation Range

-17 to $+199$ °C (0 to 390 °F) w/100 Ω RTD
 -17 to $+121$ °C (0 to 250 °F) w/100 k Ω thermistor

Relative Humidity Limits

5 to 95%, noncondensing

Accuracy of Analyzer

$\pm 0.5\%$ of upper range limit

Dimensions

Plastic Enclosure 92(H) x 92(W) x 183(L) mm
Metal Enclosure 92(H) x 92(W) x 203(L) mm

Enclosure/Mounting Options

- P Plastic General Purpose Panel Mount
- W Metal Field Panel Mount
- X Metal Field Surface Mount
- Y Metal Field Pipe Mount
- Z Metal Field Movable Surface Mount

Approximate Mass

Plastic General Purpose Enclosure: 0.68 kg (1.5 lb)

Metal Field Enclosure (with Brackets):

Panel Mounting	1.54 kg (3.4 lb)
Pipe Mounting	2.31 kg (5.1 lb)
Fixed Surface Mounting	2.22 kg (4.9 lb)
Movable Surface Mounting	3.13 kg (6.9 lb)

Instrument Response

Two seconds maximum. Temperature response is 15 seconds maximum.

Measurement Damping

In Measure mode, damping is set at 10 seconds. Damping affects displayed parameters and analog outputs.

Alarms

Two alarms configurable via keypad

Individual set points continuously adjustable 0 to full scale via keypad

Alarm Contacts

Two independent, nonpowered Form C contacts. Rated 5 A noninductive 125 V ac/ 30 V dc (minimum current rating 1 A). Inductive loads can be driven with external surge-absorbing devices installed across contact terminations.

— CAUTION —

When the contacts are used at signal levels of less than 20 W, contact function may become unreliable over time due to the formation of an oxide layer on the contacts. See “Alarm Contact Maintenance” on page 43.

Alarm Indication

Alarm status alternately displayed with measurement on LED display.

RFI Susceptibility

(When all sensor and power cables are enclosed in a grounded conduit.)

Plastic Enclosure: < 0.5 V/m from 27 to 1000 MHz

Metal Enclosure: 10 V/m from 27 to 1000 MHz

Electromagnetic Compatibility (EMC)

The Model 873ACC Electrochemical Analyzer, 220 V ac or 240 V ac systems with metal enclosure, comply with the requirements of the European EMC Directive 89/336/EEC when the sensor cable, power cable, and I/O cables are enclosed in rigid metal conduit (see Table 2).

The plastic case units are intended for mounting in solid metal consoles or cabinets. The plastic case units will comply with the European EMC Directive 89/336/EEC when mounted in a solid metal enclosure and the I/O cables extending outside the enclosure are enclosed in solid metal conduit (see Table 2).

Product Safety Specifications

Table 1. Product Safety Specifications

Testing Laboratory, Type of Protection, and Area Classification	Application Conditions	Electrical Safety Design Code
FM for use in general purpose (ordinary) locations.		FGZ
FM nonincendive for use in Class I, Division 2, Groups A, B, C, and D and Class II, Division 2, Groups F and G hazardous locations.	Instruments with metal enclosure (codes W, X, Y, and Z) only. Temperature Class T6.	FNZ
CSA (Canada) for use in general purpose (ordinary) locations.	Supply Voltage 24 V, 100 V, and 120 V ac (codes -A, -E, -J) only.	CGZ
CSA (Canada) suitable for use in Class I, Division 2, Groups A, B, C, and D, hazardous locations.	Instruments with metal enclosure (codes W, X, Y, and Z) only. Supply Voltage 24 V, 100 V, and 120 V ac (codes -A, -E, -J) only.	CNZ

— NOTE —

The analyzer has been designed to meet the electrical safety descriptions noted in the table above. For detailed information or status of testing laboratory approvals and certifications, contact your Invensys Foxboro representative.

— ⚠ CAUTION —

1. When replacing covers on the 873A metal case, use Loctite (Part No. S0106ML) on the threads for the front cover and Lubriplate (Part No. X0114AT) on the threads for the rear cover. Do not mix.
2. Exposure to some chemicals may degrade the sealing properties of Polybutylene Teraethalate and Epoxy Magnacraft 276XAXH-24 used in relays K1 and K3. These materials are sensitive to acetone, MEK, and acids. Periodically inspect relays K1 and K3 for any degradation of properties and replace if degradation is found.

2. Installation

Mounting to a Panel - Plastic Enclosure, 873ACC-__P

The plastic enclosure is mounted to a panel as described below (see Figure 5).

1. Size panel opening in accordance with dimensions specified on DP 611-162.
2. Insert spring clips on each side of analyzer.
3. Insert analyzer in panel opening until side spring clips engage on panel.
4. From rear of panel (and analyzer), attach and tighten the top and bottom mounting screws until analyzer is securely held in place.

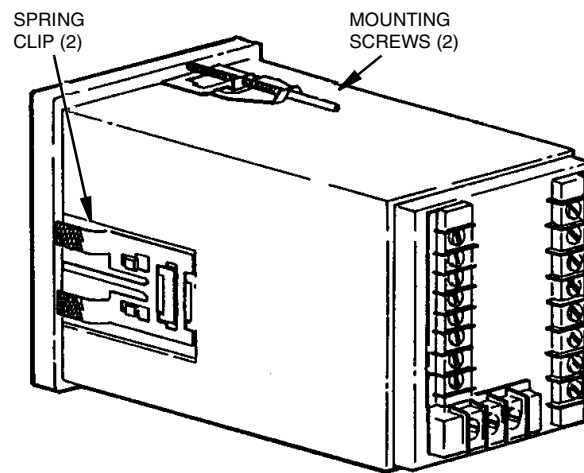


Figure 5. Mounting to Panel - Plastic Enclosure

Mounting to a Panel - Metal Enclosure 873ACC-__ W

The metal enclosure is mounted to a panel as described below:

1. Size panel opening in accordance with dimensions specified on DP 611-162.
2. Insert the analyzer through the panel cutout and temporarily hold in place. The rear bezel will have to be removed to perform this procedure.)
3. From the rear of the panel, slide the plastic clamp onto the enclosure until the two clamp latches snap into two opposing slots on longitudinal edges of the enclosure. See Figure 6.
4. Tighten screws (clockwise) on the clamp latches until the enclosure is secured to panel.
5. Reassemble the rear bezel to the enclosure using four screws.

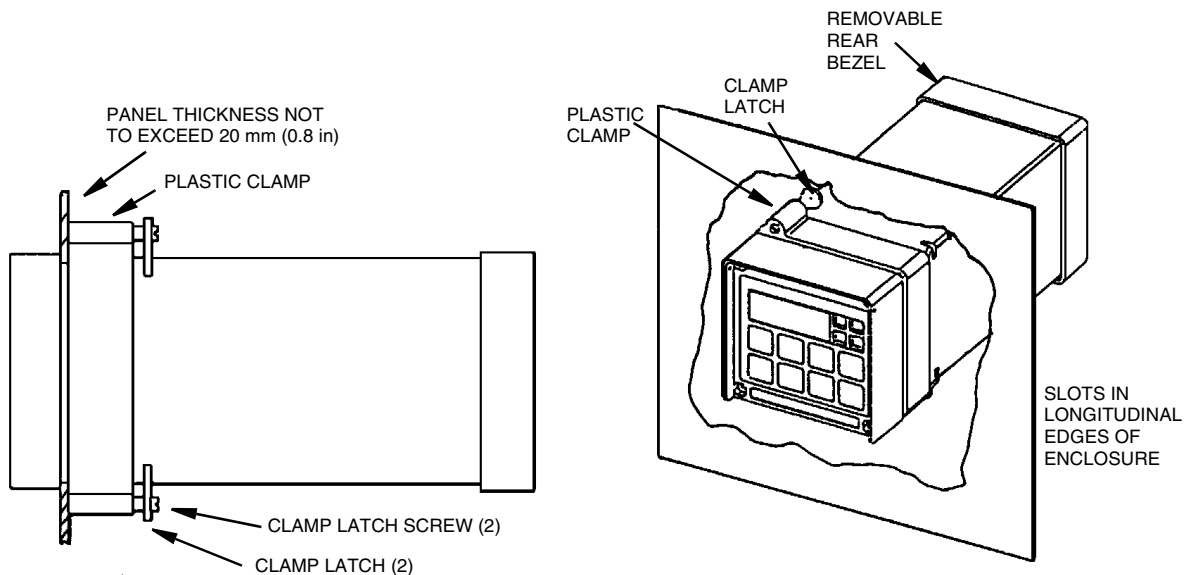


Figure 6. Mounting to Panel - Metal Enclosure

Mounting to a Pipe - Metal Enclosure, 873ACC-__ Y

1. Locate a horizontal or vertical DN 50 or 2 inch pipe.
2. Assemble universal mounting as follows:
 - a. Place hex bolts (5) through spacer (3) into support bracket (2).
 - b. Slide nylon washers (11) over bolts (5).
 - c. Slide bolts through pipe mounting bracket (1) and fasten assembly tightly with hardware designated 7, 6, and 13.
 - d. Attach pipe mounting bracket (1) to pipe using U-bolts (12) and hardware designated 6 and 13.

3. Slide the analyzer into support bracket (2) and slide strap clamp (4) onto analyzer. Using two screws, nuts, and washers, attach the strap clamp to the support bracket to secure the analyzer.
4. Lift entire assembly of Step 3, and using two U-clamps (12), nuts (13), and washers (6), secure mounting bracket (1) to pipe.

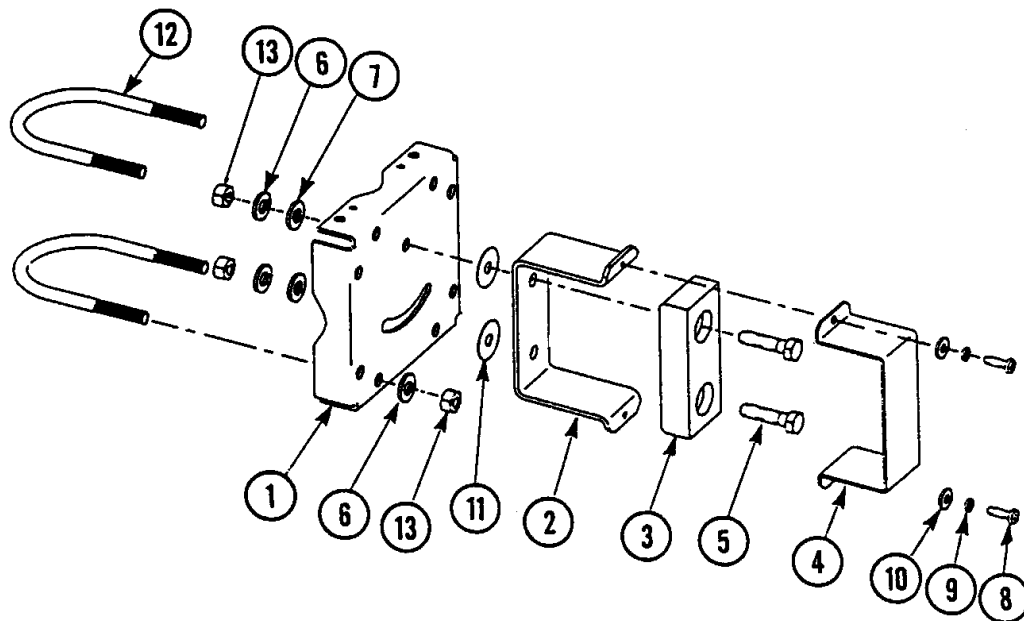
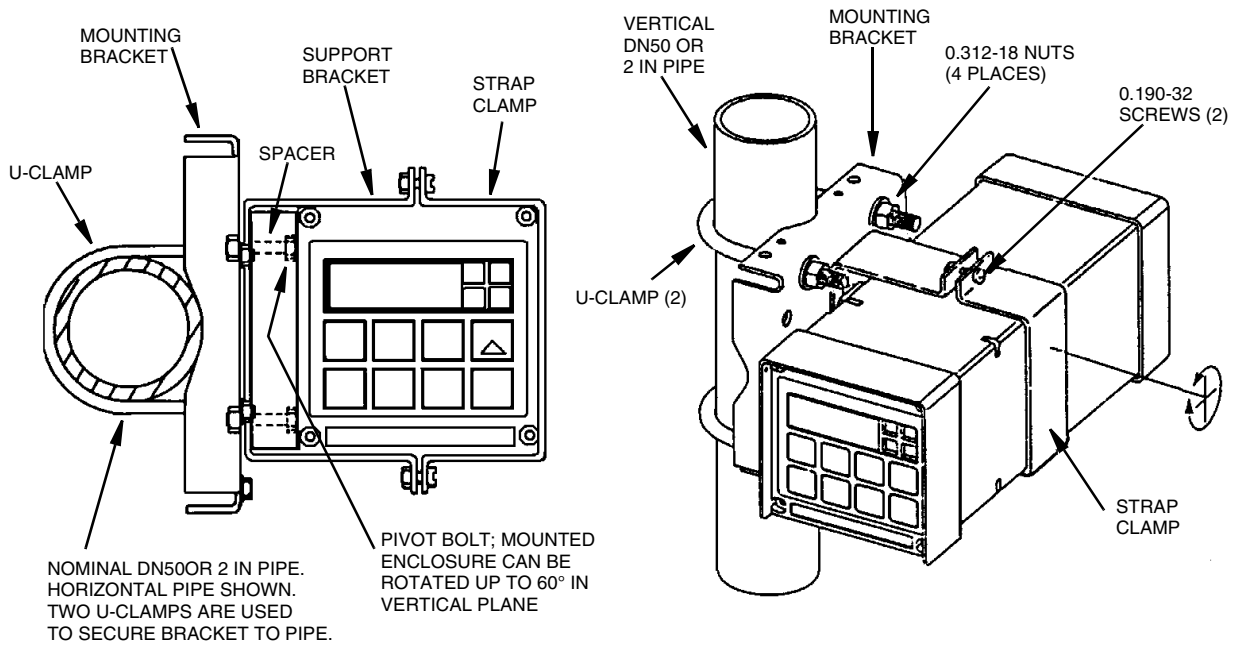


Figure 7. Metal Enclosure - Pipe Mounting

Mounting to a Surface, Fixed Mount - Metal Enclosure, 873ACC-__ X

1. Locate the mounting surface for the analyzer.
2. Referring to Figure 8, use mounting bracket (1) as a template for drilling four holes into the mounting surface. Notice that holes in the mounting bracket are 8.74 mm (0.344 in) in diameter. Do not attach the mounting bracket to the surface at this time.
3. Assemble universal mounting as follows:
 - a. Place hex bolts (5) through spacer (3) into support bracket (2).
 - b. Slide nylon washers (11) over bolts (5).
 - c. Slide bolts through universal mounting bracket (1) and fasten assembly together with hardware designated 7, 6, and 12.
 - d. Attach universal mounting bracket (1) to wall.
4. Slide the analyzer into support bracket (2) and slide strap clamp (4) onto the analyzer. Using two screws, nuts, and washers, attach the strap clamp to the support bracket to secure the analyzer.

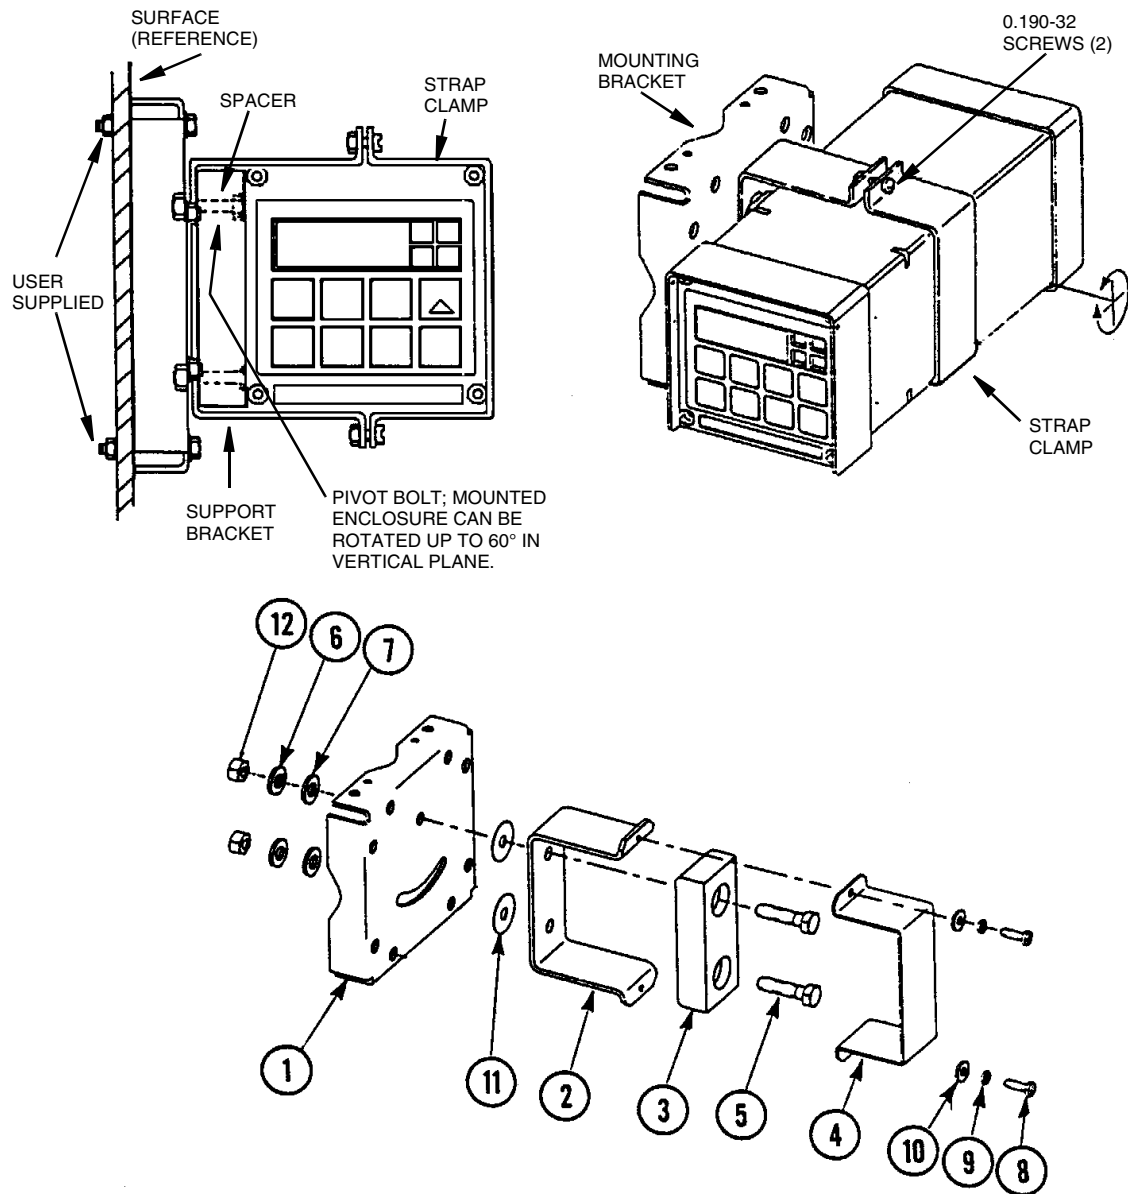


Figure 8. Metal Enclosure - Fixed Mount

I

Mounting to a Surface, Movable Mount - Metal Enclosure, 873ACC-__ Z

1. Locate the mounting surface for the analyzer. Also refer to PL 611-016.
2. Referring to Figure 9, use wall bracket (12) as template for drilling four holes into mounting surface. Notice that the holes in the wall bracket are 9.53 mm (0.375 in) in diameter.
3. Attach wall bracket (12) to surface using four bolts, washers, and nuts.
4. Assemble universal mounting as follows:
 - a. Place hex bolts (5) through spacer (3) into support bracket (2).
 - b. Slide nylon washers (11) over bolts (5).
 - c. Slide bolts through universal mounting bracket (1) and fasten assembly finger tight with hardware designated 9, 10, and 16.
5. Slide analyzer into support bracket (2) and slide strap clamp (4) onto the analyzer. Using two screws, nuts, and washers, attach the strap clamp to the support bracket to secure the analyzer.
6. Lift entire assembly of Step 5, align mounting bracket (1) and wall bracket pivot bolt holes, and then insert pivot bolt (13) through wall and mounting brackets into nylon washer (14) and locking nut (15).
7. Rotate bracket and analyzer assembly in horizontal plane to desired position and lock in place using the screw and washer.
8. Tilt the analyzer to the desired angle and lock in place with the hardware fastened finger tight in Step 4c.

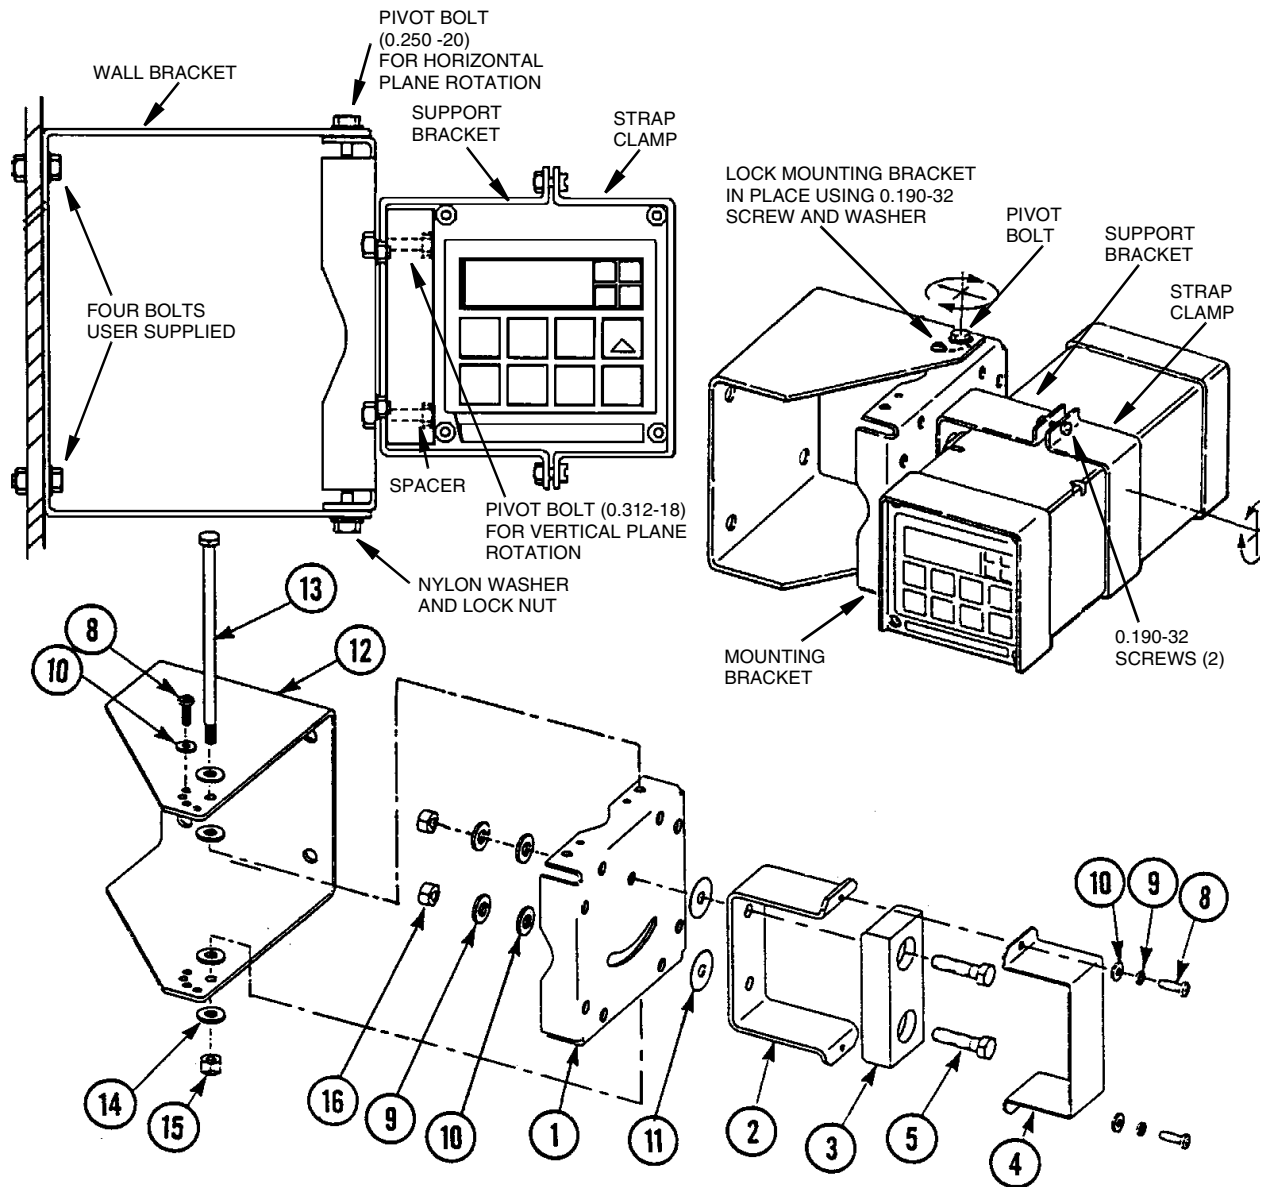


Figure 9. Metal Enclosure - Movable Mount

Wiring of Plastic Enclosure

— ⚠ CAUTION —

Wiring installation must comply with any existing local regulations.

1. Remove optional rear cover assembly BS805QK, if present.
2. Connect ALM 1 and ALM 2 alarm wires to TB3 as shown in Figure 10. Failsafe operation requires connections to be made between contacts NC and C. Also see “Wiring of Alarms” on page 21
3. Connect wires from external circuit for analog output to terminals TB3 (M+) and TB3 (M-). Refer to Figure 10.
4. Remove factory-installed jumper assembly from terminal block TB2 and discard.
5. Connect sensor wires to analyzer terminal block TB2 as shown in Figure 10.

— NOTE —

Only 871CC type Sensors can be used with the 873ACC Analyzer. Model 500, 910, 920, 921, and 923 Sensors cannot be used with the 873A Analyzer. The 871CC Sensor types “A” through “F” use a 100 k Ω thermistor for automatic temperature compensation. The 871CC Sensors “K” through “M” use a 100 Ω RTD for automatic temperature compensation and are recommended for all measurements at elevated temperature.

6. Connect power wires to terminal block TB1 as shown in Figure 10.
7. Attach optional rear panel cover, if present.

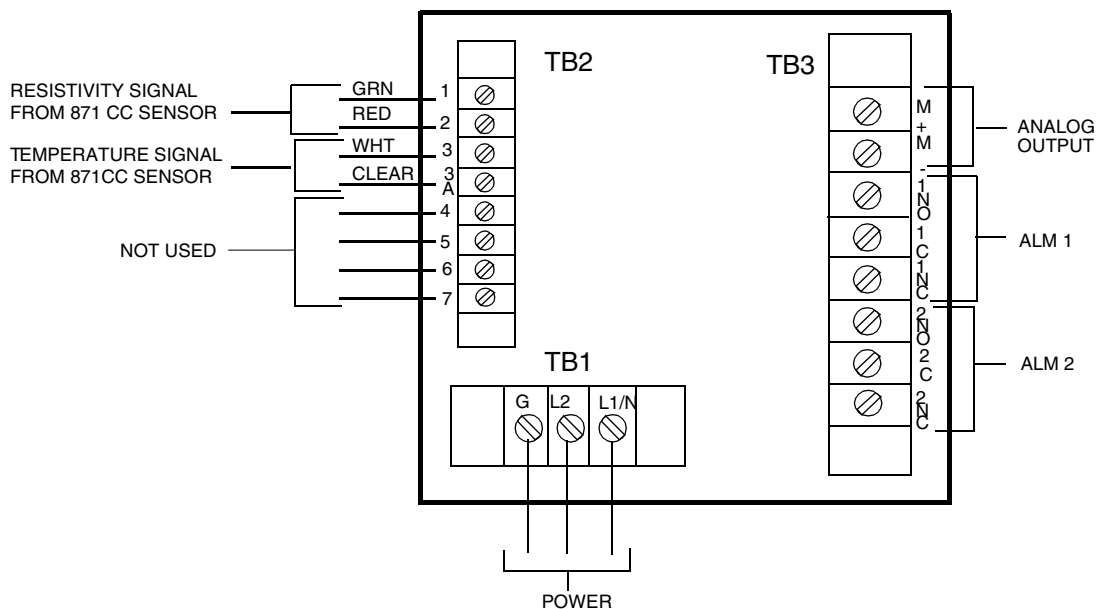


Figure 10. Rear Panel Wiring - Plastic Enclosure

Wiring of Metal Enclosure

⚠ CAUTION

Wiring installation must comply with any existing local regulations.

NOTE

1. To maintain the enclosure tightness rating, such as NEMA 4X, CSA Enclosure 4X, or IEC Degree of Protection IP-65, wiring methods and fittings appropriate to the ratings must be used. Table 2 identifies the appropriate parts.
 2. Alarm wires should run with the power wires. Sensor wires should run with analog output wires.
-

1. Remove back cover to access terminal/power board.
 2. Connect ALM 1 and ALM 2 alarm wires to TB3 as shown in Figure 11. Failsafe operation requires connections to be made between contacts NC and C. Also see “Wiring of Alarms” on page 21
 3. Connect wires from external circuit for analog output to terminal block TB4.
 4. Connect sensor wires to analyzer terminal block TB2 as shown in Figure 11.
-

NOTE

Only 871CC type Sensors can be used with the 873ACC Analyzer. Model 500, 910, 920, 921, and 923 Sensors cannot be used with the 873A Analyzer. Sensors “A” through “F” use a 100 k Ω thermistor for temperature compensation. Sensors “K” through “M” use a Pt 100 Ω RTD for temperature compensation and are recommended for all work at elevated temperature.

5. Connect power wires to terminal block TB1 as indicated in Figure 11. The earth (ground) connection from the power cord should be connected to the stud located in the bottom of the case.

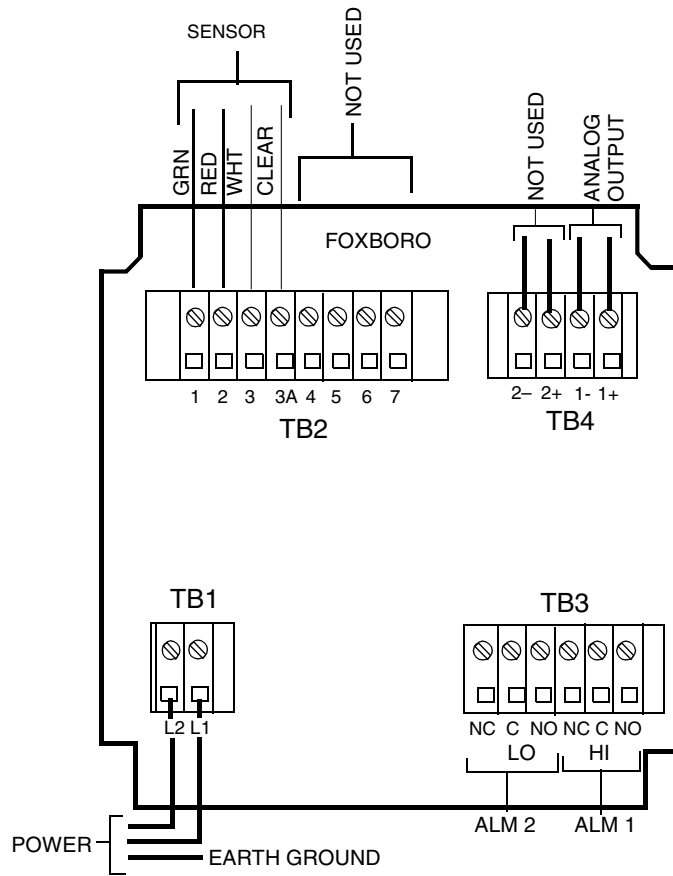


Figure 11. Rear Panel Wiring - Metal Enclosure

Table 2. Recommended Conduit and Fitting (Due to Internal Size Restraints)

Material	Conduit	Fitting
Rigid Metal	1/2 inch Electrical Trade Size	T & B* #370
Semi-Rigid Plastic	T&B # LTC 050	T&B #LT 50P or T&B #5362
Semi-Rigid Plastic, Metal Core	Anaconda Type HC, 1/2 inch	T&B #LT 50P or T&B #5362
Flexible Plastic	T&B #EFC 050	T&B #LT 50P or T&B #5362

*Thomas & Betts Corp., 1001 Frontier Road, Bridgewater, NJ 08807-0993


Wiring of Alarms

Alarm relays in the 873A Analyzer are “active” relays. This means that the relay is energized when the analyzer is powered and there is no alarm condition.

You can wire an external device (e.g., light bulb) to the analyzer in either of two ways. Each alarm relay provides a contact closure which can be used as a switch to turn an externally powered device on or off.


- ◆ Between NC and C so that the external device is activated when there is an alarm condition or a loss of power to the analyzer. This is referred to as “failsafe.”

FAILSAFE WIRING

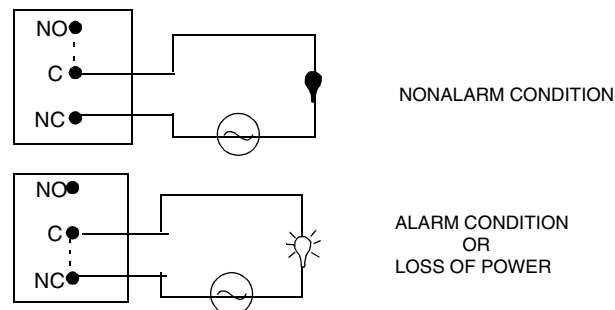

- ◆ Between NO and C so that the external device is activated in the normal condition (i.e., instrument is powered and no alarm condition exists).

NORMAL CONDITION WIRING

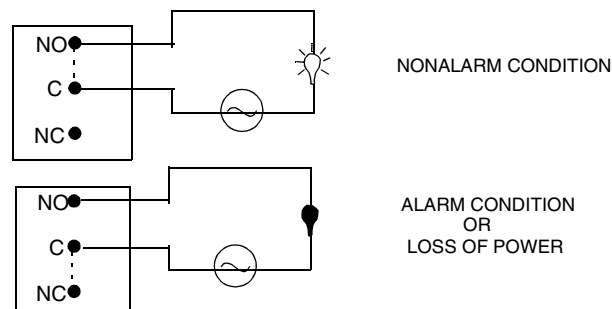

⚠ CAUTION

When the contacts are used at signal levels of less than 20 W, contact function may become unreliable over time due to the formation of an oxide layer on the contacts. See “Alarm Contact Maintenance” on page 43.

3. Operation

Overview

The 873A functions in two main modes, OPERATE and CONFIGURE.

As soon as the 873A Analyzer is powered, it is in the OPERATE mode. The instrument first conducts a self diagnostic, then automatically displays the measurement and outputs a proportional analog signal. Any error or alarm condition is alternately displayed with the measurement on the LED display. If two or more errors/alarms exist simultaneously, the analyzer will flash only the one with the highest priority. If the highest priority error/alarm is cleared and a lower priority error/alarm still remains, the analyzer will then flash the highest priority of those remaining.

Also, while in the OPERATE Mode, you may view the process temperature and all the parameter settings configured in the Configuration Setup Entries.

All 873A Analyzers are shipped configured, either with factory default settings or user defined parameters, as specified. In the CONFIGURE Mode, you may change any of the parameters previously entered.

Utilizing either mode requires understanding the functions of both the display and keypad.

Display

The display, Figure 12, is presented in two parts, a measurement/settings display and a backlit engineering units display. The measurement in $\mu\text{S}/\text{cm}$ or mS/cm , the temperature in C or F, and configuration parameters can be read on the display. To read anything other than the measurement, or to make a configuration or calibration change, requires keypad manipulations.

Keypad

The keypad, shown in Figure 12, consists of eight keys, four of which are dual function. The white lettered keys represent normal functions and the green lettered keys represent alternate functions. To operate a white lettered function key, just press the key. To operate a green lettered function key, press/hold the **Shift** key and then press the function key. The notation used to describe this operation is **Shift + (key)**. All key functions are described in Table 3.







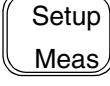
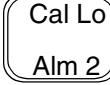
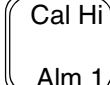


Figure 12. Display and Keypad

Table 3. Keypad Functions

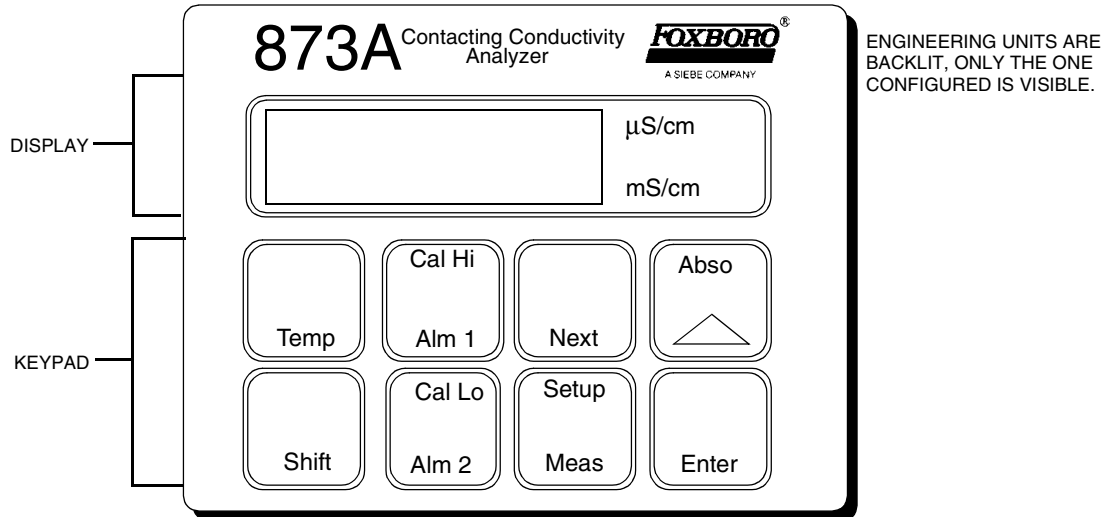Key	Function
	Shift: Press and hold this key to actuate the green dual-function keys.
	Absolute: Press/hold Shift and press this key to display conductivity without temperature correction. Increment (Δ): Press this key to increase the display count. Each press increases the value by one. Press and hold to increase the count at a rate of approximately one per second. When 9 is reached, display goes to 0.
	Temp: Press this key to display the process temperature. This may be the actual temperature or a manually set value as configured. The temperature is displayed as with one decimal point which alternates with °C or °F as chosen.
	Enter: Press this key to display the value or code of a setup entry. You can also use this key to select a parameter or code by entering the value or code into memory.
	Next: Used to select one of the four display digits similar to a cursor except causes digit to flicker. Also used to select the next entry choice of the setup function.
	Setup: Press/hold Shift and press this key to access the configuration entry function. Meas: Press this key at any time to return to Measure mode from other modes.
	Cal Lo: Press/hold Shift and press this key to access the lower calibration function of the analyzer. (Shifts y-intercept or offset voltage). Alm 2: Press this key to display and/or change the set point of Alarm 2.
	Cal Hi: Press/hold Shift and press this key to access the upper calibration function of the analyzer. (Changes slope or gain of analyzer). Alm 1: Press this key to display and/or change the set point of Alarm 1.

— NOTE —


Pressing **Next** and Δ simultaneously allows the user to step backward through the Setup program or digit place movement. Note, however, that you cannot reverse number count by this procedure.

Pressing **Shift** and **Enter** simultaneously circumvents the wait between Setup entries.

To View Process Temperature

To view the process temperature from the measurement mode, press the **Temp** key. The display changes from the measurement to the process temperature or manually adjusted temperature. The display is a rounded whole number with the temperature units (C or F) alternating with tenths of degrees and no units.

The **Temp** key, used in conjunction with the increment (Δ) key, allows the temperature to be changed from $^{\circ}\text{C}$ to $^{\circ}\text{F}$ or vice versa, as well as allowing the use of manual temperature compensation at a given temperature (decimal shown after temperature). When **Temp** is pressed, the process temperature is displayed on the readout. Pressing Δ causes the display to sequence from the displayed value through the following sequence:

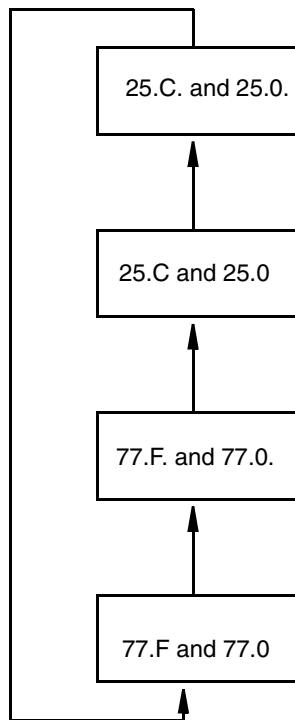

When the decimal point after the C or F is present, the process will be temperature compensated *manually* at the temperature displayed. If another manual compensation temperature is desired, use **Next** and Δ to change the display to the desired temperature; then press **Enter**. The process will then be compensated to the new displayed temperature. To return to automatic compensation, sequence the display to remove the decimal point after C or F. Automatic temperature compensation cannot be adjusted by this procedure. See “Determining Temperature Cell Factor (tCF)” on page 39 for adjusting temperature in the automatic mode.

— NOTE —

To make a minus sign appear on the display, make sure that a number other than zero is present on the display and change the first digit of the number to a minus sign.

For example, to make the display read -20°C , first display $020.^{\circ}\text{C}$, and then change the first digit to a minus sign.

To View Setup Entries

Setup Entries may be viewed at any time. To view any of the Setup Entries, do the following:

1. Press **Shift + Setup**.
2. If necessary, press **Next** until the desired parameter to be viewed is displayed.
3. Press **Enter**.

When viewing the Setup Entries, you may page through the parameters as rapidly as you wish (**Shift + Setup** and then **Next** one or more times). However, once **Enter** is pressed (**Enter** must be pressed to read a parameter value), you must wait (value is displayed for approximately four minutes) for the parameter symbol to reappear.

— **NOTE**

Pressing **Shift + Enter** overrides this wait.

The parameter symbols appear for about four minutes also. If another key is not pressed in this period, the display defaults to the measurement.

To make changes to any Configuration Setup parameter, refer to “Configuration” on page 29.

4. Configuration

User Configuration Setup Entries

This instrument is shipped with either factory default settings or user defined settings, as specified per sales order. Table 4 lists all the parameters that can be changed. It lists the displayed symbol, a description of the display, the factory default value and a space to write user settings.

Table 4. User Configuration Setup Entries

Displayed Symbol	Parameters and values Accessed	Factory Default	User Settings
U_tC	Units and Temperature Compensation	NACL	
AL_1	Alarm 1 Off/Hi/Lo Active	1oFF	
AL_2	Alarm 2 Off/Hi/Lo Active	2oFF	
Aohi	Analog Output High (100%)	Per S.O.	
Aolo	Analog Output Low (0%)	00.00	
SEnS	Sensor	Per S. O.	
FSC	Full Scale Value	Per S. O.	
CF	Cell Factor	Per S. O.	
tCF	Temperature Cell Factor	25.00	
LADJ	Analog Out Electronics Lower Calibration	- - -	
HADJ	Analog Out Electronics Upper Calibration	- - -	

To change any of the User Configuration Setup parameters, use the following procedure:

1. Press **Shift + Setup**.
2. If necessary, Press **Next** until the desired parameter to be changed is displayed.
3. Press **Enter**.
4. Use **Next** and Δ until the desired code or value is displayed.
5. Press **Enter**.
6. Press **Meas** to return to the measure mode.

Units and Temperature Compensation (U_tC)

This procedure is used to set the instrument's temperature compensation.

1. Press **Shift + Setup**.
2. If necessary press **Next** until "U_tC" appears on the display.
3. Press **Enter**.

4. Press **Next** until desired U_tC state is displayed. Choices are:
 - NACL = Dilute NaCl solution with water subtraction referenced to 25°C.
 - bCAL = Bench Calibration Procedure.
5. Press **Enter** to set state.
6. Press **Meas** to return to the measure mode or **Shift + Enter** to return to setup menu item “U_tC.

Alarms

General Information About Alarms

Dual Independent, Form C dry alarm contacts, rated at 5 A noninductive, 125 V ac/30 V dc are provided. Each of the two alarms is configured as off or as a high or low alarm. A *low alarm* relay will trip on decreasing measurement. A *high alarm* relay will trip on increasing measurement. Therefore, combinations of high, low, high/low, low/low, and high/high alarms are possible. The alarm deadband is always set at 1% of the full scale measurement value.

— CAUTION —

When the contacts are used at signal levels of less than 20 W, contact function may become unreliable over time due to the formation of an oxide layer on the contacts. See “Alarm Contact Maintenance” on page 43.

Correct wiring of the contacts is necessary for failsafe operation. See “Wiring of Alarms” on page 21 for wiring information.

Alarm conditions (AL 1, AL 2, or A1A2) are alternately displayed with the measurement on the LED display.

— NOTE —

Upon powering the instrument: Alarm operation is delayed for a time period proportional to the 10 second factory set damping time. Alarms will remain “OFF” until the measurement has stabilized.

Alarm Configuration

You can configure each alarm to be a high alarm, a low alarm or in the off state.

To configure Alarm 1:

1. Press **Shift + Setup**.
2. If necessary, press **Next** until “AL_1” appears on the display.
3. Press **Enter**.
4. Press **Next** until desired alarm state is displayed.

AL_1 states	1oFF	1_Hi	1_Lo
-------------	------	------	------

5. Press **Enter** to set state. The configured state appears on the display (e.g., 1_Lo)
6. Press **Meas** to return to measure or **Shift + Enter** to return setup menu item “AL_1”

To configure Alarm 2:

1. Press **Shift + Setup**.
2. If necessary, press **Next** until “AL_2” appears on the display.
3. Press **Enter**.
4. Press **Next** until desired alarm state is displayed.

AL_2 states	2oFF	2_Hi	2_Lo
-------------	------	------	------

5. Press **Enter** to set state. The configured state appears on the display (e.g., 2_Hi).
6. Press **Meas** to return to measure mode or **Shift + Enter** to return setup menu item “AL_2”.

Setting Alarm Level(s)

This procedure is relevant only when the alarms were configured as Low or High Alarms as explained in the previous section. When the alarms are configured as Off, alarm level settings have no relevance.

To set the level of Alarm 1:

1. Press **Alm 1**.
2. Use the **Next** key to select each digit and the Δ key to change the value of the digit selected.
3. Press **Enter**.

To set the level of Alarm 2:

1. Press **Alm 2**.
2. Use the **Next** key to select each digit and the Δ key to change the value of the digit selected.
3. Press **Enter**.

Press **Meas** to return to measure mode.

Output

Scaling the Analog Output

The maximum span that should be set on the analyzer is the FSC (full scale) value. The minimum span that should be set is 10% of the FSC value. Although it is physically possible to set the analyzer for a smaller range, a loss of accuracy is possible. The analog output could develop steps instead of following the measurement in a continuum.

Analog Output 100% Value (Aohi)

This enables the user to assign a measurement value to the maximum analog output (either 10 V or 20 mA dc). For example, a user may wish to retransmit 4 to 20 mA dc over a conductivity

range of only 10 to 15 $\mu\text{S}/\text{cm}$. This parameter would allow the assignment of the 20 mA dc output to a value of 15 $\mu\text{S}/\text{cm}$.

1. Press **Shift + Setup**.
2. If necessary, press **Next** until “Aohi” appears on the display.
3. Press **Enter**.
4. Use the **Next** key to select each digit and the Δ key to change the value of the digit selected until the value 15.00 $\mu\text{S}/\text{cm}$ is displayed.
5. Press **Enter**.
6. Press **Meas** to return to measure or **Shift + Enter** to return setup menu item “Aohi”.

— **NOTE** —

Invensys Foxboro preconfigures the 100% value to be equal to the specified full scale measurement per sales order.

Analog Output 0% Value (Aolo)

This enables the user to assign a measurement value to the minimum analog output (either 0 V, 0 mA or 4 mA dc). In the above example, the user would assign the minimum analog output to a value of 10 $\mu\text{S}/\text{cm}$.

1. Press **Shift + Setup**.
2. If necessary press **Next** until “Aolo” appears on the display.
3. Press **Enter**.
4. Use the **Next** key to select each digit and the Δ key to change the value of the digit selected until the value 10.00 $\mu\text{S}/\text{cm}$ is displayed.
5. Press **Enter**.
6. Press **Meas** to return to measure or **Shift + Enter** to return setup menu item “Aolo”.

Analog Output Calibration (LAdj, HAdj)

This procedure is used to calibrate the Analog output. This has been done at the factory and should not require recalibration unless the type of output has been changed. An ammeter or voltmeter is required.

1. Connect an ammeter/voltmeter to the analog output terminals. See “Wiring of Plastic Enclosure” on page 18 and “Wiring of Metal Enclosure” on page 19.
2. Press **Shift + Setup**.
3. If necessary, press **Next** until “LAdj” or “HAdj” appears on the display.
4. Press **Enter**, the display will show “Linc”.
5. Press **Next** to select the desired adjustment value:
 - ◆ Linc - Large increment $\sim +0.3$ mA or $\sim +0.15$ V
 - ◆ inc - increment $\sim +0.025$ mA or $\sim +0.01$ V
 - ◆ Sinc - Small increment smallest possible + adjustment 1/20 the size of inc

- ◆ LdEc - Large decrement ~ -0.3 mA or ~ -0.15 V
 - ◆ dEc - decrement ~ -0.025 mA or ~ -0.01 V
 - ◆ SdEc - Small decrement smallest possible - adjustment 1/20 the size of dEc
6. Press **Enter** to change analog output and observe the new reading on your meter.
 7. Repeat Steps 5 and 6 until desired meter value is observed.
 8. Press **Meas** to return to measure or **Shift + Enter** to return setup menu item “LAdj” or “HAdj”.

Changing Sensors (SEnS)

The 873ACC Analyzer can be used with 871CC sensors with either 0.1 cm⁻¹ or 10.0 cm⁻¹ cell constants. Determine whether the 871CC sensor has a 0.1 cm⁻¹ or 10.0 cm⁻¹ cell constant by checking the attached labels:

Label	Cell Constant	SEnS Value
871CC- □2	0.1 cm ⁻¹	1000
871CC- □4	10.0 cm ⁻¹	10.00

1. Press **Shift + Setup**.
2. If necessary press **Next** until “SEnS” appears on the display.
3. Press **Enter**.

— CAUTION —

Pressing **Enter** in SEnS mode (even if sensor was not changed) will require the unit to be bench calibrated before use. If the sensor is set at the sensor you require, press **Meas**. Do **not** press **Enter**.

4. Press **Δ** until desired “SEnS” value is displayed.
5. Press **Enter**.
6. Press **Meas** to return to measure or **Shift + Enter** to return setup menu item “SEnS”.

Full Scale Range (FSC)

Selecting the Full Scale Range

The FSC parameter allows the user to select on of several possible ranges to monitor the process. The FSC range choices are::

SEnS = 1000 Cell Constant = 0.1 cm ⁻¹	SEnS = 10.00 Cell Constant = 10.0 cm ⁻¹
1 μS/cm	100 μS/cm
2 μS/cm	0.1 mS/cm
5 μS/cm	200 μS/cm
10 μS/cm	0.2 mS/cm

SEnS = 1000 Cell Constant = 0.1 cm ⁻¹	SEnS = 10.00 Cell Constant = 10.0 cm ⁻¹
20 μS/cm	500 μS/cm
50 μS/cm	0.5 mS/cm
100 μS/cm	1 mS/cm
200 μS/cm	2 mS/cm
	5 mS/cm
	10 mS/cm
	20 mS/cm

The analyzer accuracy is 0.5% of the maximum upper measurement range value. Thus, for best possible accuracy, the FSC value should be set as low as possible while still allowing all measurement values to within it.

On the lower ranges, the analyzer displays values to the thousandths place.

The analyzer is capable of displaying values greater than that set by the FSC ranges. For example, when the FSC is on the 0 to 5.000 μS/cm range, it can display up 9.999 μS/cm at 25.0°C.

Invensys Foxboro preconfigures the FSC value per sales order.

Changing the Full Scale

— NOTE —

SEnS must be entered correctly before the FSC is changed.

Procedure to change FSC:

1. Press **Shift + Setup**.
2. If necessary, press **Next** until “FSC” appears on the display.
3. Press **Enter**.

— CAUTION —

When changing ranges, the drive voltage to the sensor inputs is changed. Altering the FSC range via the keypad will require the unit to be bench calibrated before use.

Pressing **Enter** in FSC mode (even if range was not changed) will require the unit to be bench calibrated before use. If the range is set at a range you require, press **Meas**. Do **not** press **Enter**.

4. Press **Δ** until the desired value is displayed.
5. Press **Enter**.
6. Press **Meas** to return to the measure mode.

5. Calibration

Electronic Bench Calibration

This procedure is used to calibrate the 873ACC Analyzer with precision resistors and theoretical sensor signal values. In many cases this calibration produces sufficient accuracy for the user's application.

Precision resistors corresponding to the High Cal value, a 100 k Ω or 110 Ω resistor temperature simulation, and a decade resistance box are required for this procedure.

Calibration of Cell Channel

1. Disconnect all sensor leads from the terminal block TB2.
2. Set the "U_tC" parameter to "bCAL" to have unit with no damping and to utilize absolute temperature compensation.
 - a. Press **Shift + Setup**.
 - b. Press **Next** until "U_tC" is displayed.
 - c. Press **Enter**.
 - d. Press **Next** until "bCAL" is displayed.
 - e. Press **Enter**.
 - f. Press **Shift + Enter** to return to "U_tC".
3. Verify and reset "SEnS" parameter.
 - a. Press **Next** until "SEnS" is displayed.
 - b. Press **Enter**.
 - c. Press Δ until desired "SEnS" value is displayed see "Changing Sensors (SEnS)" on page 33.
 - d. Press **Enter**.
 - e. Press **Shift + Enter** to return to "SEnS".
4. Reset the "FSC" parameter. Even if the existing Full Scale value is the desired value, it is necessary to reenter the value.
 - a. Press **Next** until "FSC" is displayed.
 - b. Press **Enter**.
 - c. Press Δ until desired value is displayed see "Full Scale Range (FSC)" on page 33.
 - d. Press **Enter**, even if the desired value is displayed.
 - e. Press **Shift + Enter** to return to "FSC".
5. For units utilizing 0.1 cm⁻¹ cell factor sensors ("CF" = 1000), reset "CF" to 1000, the theoretical factor.
 - a. Press **Next** until "CF" is displayed.

- b. Press **Enter**.
 - c. Use the **Next** key to select each digit and the Δ key to change the value of the digit selected until the display reads 1000.
 - d. Press **Enter**.
 - e. Press **Shift + Enter** to return to “CF”.
6. Reset parameter “tCF” to 25.00 (the theoretical temperature transducer value). See “Determining Temperature Cell Factor (tCF)” on page 39.
 - a. Press **Next** until “tCF” is displayed.
 - b. Press **Enter**.
 - c. Use the **Next** key to select each digit and the Δ key to change the value of the digit selected until the display reads 25.00.
 - d. Press **Enter**.
 - e. Press **Meas** to return to measure mode. Error message “LCAL” should begin to flash on the display.

Checking the Temperature Circuit Calibration.

1. Determine which type temperature compensation your analyzer has by checking the CONFIG CD entry on the model identification label affixed to the analyzer. Refer to Figure 4.
2. Connect 110 Ω or 100 k Ω resistor across terminals 3 and 3A. Refer to Figure 10 and Figure 11. The 871CC Sensor types A through F use a 100 k Ω thermistor for automatic temperature compensation. The 871CC Sensors K through M use a 110 Ω resistor for automatic temperature compensation and are recommend for all measurements at elevated temperatures.
3. Put unit in Automatic Temperature mode.
 - a. Press **Temp**, no decimal point should be visible after the “C” or “F” legend. If there is it must be removed.
 - b. Press Δ once after pressing **Temp**.
 - c. Press **Enter**. This removes the decimal point.

The display should read *approximately* 25°C or 77°F. If the display does not read these values, verify that the correct resistor is being used and ensure that it is correctly installed. If these measures do no improve the value, return unit to Invensys Foxboro.

Zero and Span Calibration

1. With no input across terminals 1 and 2 of terminal board TB2 perform the Cal Lo procedure.
 - a. Press **Shift + Cal Lo**.
 - b. Use the **Next** key to select each digit and the Δ key to change the value of the digit until the value 0 μ S/cm or 0 m/cm, as applicable, is displayed.

- c. Press **Enter**. When the instrument returns to measure mode it should flash the Error message “HCAL”.
2. Connect a decade resistance box to terminals 1 and 2 of TB2.
3. Calculate the Resistance Input required for **Cal Hi** using:

$$\text{Resistance Input in ohms} = \frac{(\text{Cell Factor})(1 \times 10^6)}{\text{Cal Hi Value in } \mu\text{S/cm}}$$

or

$$\text{Resistance Input in ohms} = \frac{(\text{Cell Factor})(1000)}{\text{Cal Hi Value in mS/cm}}$$

EXAMPLE:

For a conductivity display of 20 $\mu\text{S/cm}$ and therefore a cell factor of 0.1 cm^{-1} , the resistance input in ohms is:

$$\text{Resistance Input in ohms} = \frac{(0.1) \cdot (1 \times 10^6)}{20} = 5000$$

For other resistance inputs, refer to Table 5-1.

4. Set decade box to calculated resistance input. Wait at least 15 seconds. Then do **Cal Hi**.
 - a. Press **Shift + Cal Hi**.
 - b. Use the **Next** key to select each digit and the Δ key to change the value of the digit until the desired **Cal Hi** value is displayed.
 - c. Press **Enter**
 - d. Press **Meas**.
5. Reset “U_tC” parameter to “NaCl” for normal temperature compensation.
 - a. Press **Shift + Setup**.
 - b. Press **Next** until “U_tC” is displayed.
 - c. Press **Enter**.
 - d. Press **Next** until “NaCl” is displayed.
 - e. Press **Enter**.
 - f. Press **Meas**.

Table 5. Resistance Inputs

For 0.1 cm ⁻¹ Cell		For 10.0 cm ⁻¹ Cell	
Cal Hi Value	Resistance Input	Cal Hi Value	Resistance Input
μS/cm	Ω	mS/cm	Ω
1	100 000	0.2	50 000
2	50 000	0.3	33 333
3	33 333	0.4	25 000
4	25 000	0.5	20 000
5	20 000	0.6	16 667
10	10 000	0.7	14 286
20	5000	0.8	12 500
25	4000	0.9	11 111
30	3333	1	10 000
40	2500	2	5000
50	2000	3	3333
60	1667	4	2500
70	1429	5	2000
75	1333	7.5	1333
80	1250	10	1000
90	1111	15	667
100	1000	20	500

Calibrating the Analyzer to a Specific Sensor

Invensys Foxboro conductivity sensors are manufactured under strict guidelines for quality and uniformity. Even with the stringent specifications of our assembly procedures, small offsets from theoretical values are possible. In many applications, the sensor can be connected to the analyzer and used without further calibration. For the best possible system accuracy of an 873ACC and 871CC sensor, additional calibrations are required to standardize these small offsets.

An accurate temperature signal is required for proper temperature compensation, especially when measuring over a large temperature gradient. The Temperature Cell Factor (tCF) is used to offset a small deviation from the ideal. This procedure **must** be used when extension cables are used.

— NOTE —

For automatic temperature compensation the 871CC Sensor types A through F use a 100 kΩ, while types K through M use a 100 Ω RTD. Types K through M are recommended for all measurements at elevated temperature.

Additionally, individual sensors with 0.1 cm⁻¹ cell factors may differ slightly from their nominal constant of .1000 cm⁻¹. The Cell Factor adjustment (CF) is used to offset the small deviation of the sensor from the ideal.

871CC Sensors with 0.1 cm⁻¹ nominal cell constants are stamped with a 4-digit number (e.g., .1001), which is the Cell Factor (CF) of that particular cell when tested in our factory. These cells are also stamped with a temperature value (tCF) (e.g., 24.97°C), which is the temperature at

which that particular transducer read its theoretical resistance value. See Figure 13. When the sensor is connected directly to the Analyzer, these factors may be input directly into the 873ACC to correct for these offsets. Alternatively, the procedures that follow may be used to determine these offset values, and *must* be used when additional cable lengths are used with the sensors.

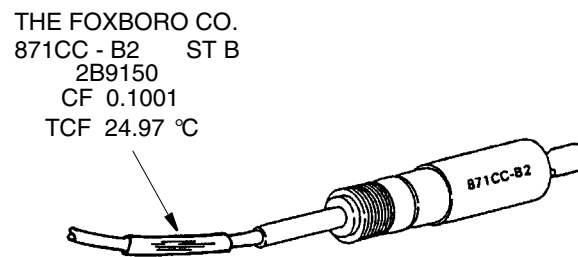


Figure 13. Sensor Identification

Determining Temperature Cell Factor (tCF)

1. Place the conductivity sensor and an accurate Celsius thermometer (with 0.10°C resolution) into a container of liquid. Allow the system to reach thermal equilibrium.
2. Press **Temp**. Then using the Δ key, put the analyzer into Automatic Temperature Compensation with a Celsius readout (no decimal point after the C). See “To View Process Temperature” on page 26. Press **Enter**. The current temperature is displayed as a whole number with the unit C alternating with the value expressed to the tenths place.
3. The value read by the 873A must now be viewed to the hundredths place. To do this, press **Temp** and then press **Next** five times. Because only three digits plus the decimal may be viewed on the display, the first digit will not be visible (e.g. 25.20 will be displayed as 5.20).
4. Determine the temperature difference of the two devices by subtracting the 873A reading from the thermometer reading; e.g., the thermometer reads 24.70°C and the 873A says (2)5.20°C; the difference is $24.70^{\circ}\text{C} - 25.20^{\circ}\text{C} = -0.50^{\circ}\text{C}$.
5. Add this value to 25.00°C (e.g., $25.00^{\circ}\text{C} + (-0.50^{\circ}\text{C}) = 24.50^{\circ}\text{C}$). This is your temperature cell factor. Now that you’ve determined the tCF, enter it as described in the next section.

Entering a tCF Value

1. Press **Shift + Setup**.
2. Press **Next** until “tCF” appears on the display.
3. Press **Enter**.
4. Use the **Next** key to select each digit and the Δ key to change the value of the digit selected until the desired value is displayed.
5. Press **Enter**.
6. Recheck any differences that exist between the thermometer and temperature displayed on the 873A, using the technique described in the previous section.

Entering a CF Value

 **CAUTION**

The procedure given in “Electronic Bench Calibration” on page 35 must precede, not follow, the below procedure. The Electronic Bench Calibration is performed at the factory on all new analyzers.

1. Press **Shift + Setup**.
2. Press **Next** until “CF” appears on the display.
3. Press **Enter**.
4. Use the **Next** key to select each digit and the Δ key to change the value of the digit until the desired value is displayed.
5. Press **Enter**.
6. Press **Meas** to return to the measure mode.

Standardization Using a Known Solution

The Analyzer may be standardized using a solution of known conductivity after the analyzer has been calibrated, and specific sensor factors have been entered. See “Electronic Bench Calibration” on page 35 and “Calibrating the Analyzer to a Specific Sensor” on page 38. The following procedure is used when calibrating with one known solution.

1. Remove sensor from process medium. Refer to Sensor Instruction MI 611-151. Wash the immersion end in distilled water.
2. Immerse the cleaned sensor in the solution of known conductivity. **Always** use a solution that is midscale.
3. Wait five minutes to allow the temperature of the solution and sensor to stabilize.
4. Press **Shift + Cal Lo**.
5. Use the **Next** key to select each digit and the Δ key to change the value of the digit until the conductivity value of the known solution is displayed.
6. Press **Enter**.
7. Press **Meas** to return to the measure mode.
8. Reinstall sensor in process solution.

6. Diagnostics

Troubleshooting

Table 6. Troubleshooting Symptoms

Symptom	Approach
Noisy Signal	May be flow related. 1. Check Analyzer noise by simulating sensor signal with a resistor. 2. Reorient sensor.
Conductivity Decreases	Gas bubble may be trapped.
Temperature Reads Incorrectly	1. Check to see if correct tCF is being used. Extension cables and junction box use will require a new tCF to be determined. 2. Verify 873A is set up for proper temperature transducer. See “Electronic Bench Calibration” on page 35.
Accuracy	Accuracy of the sensor may be affected by deposits from the process liquid. Consult sensor MI for cleaning recommendations.

Error Codes

When the analyzer is operating normally, the measurement value is displayed constantly. If error or alarm conditions exist, the display alternates between the measurement value and the error/alarm message at a one second rate. The messages are shown in Table 7.

Table 7. Error/Alarm Messages

Alternate Display	Condition	Priority	Action Required to Clear Message
Er 1	Instrument Fault, RAM/ROM, software watchdog timer	1 (Highest)	Power down unit.
Err	Incorrect code of parameter entered.	2	Check code and reenter.
t Er	Temperature out of range	3	1. Replace sensor. 2. Place temperature in manual mode (e.g., 25.C.).
LCAL	Low calibration required.	4	Use Bench Calibration procedure to recalibrate analyzer.
HCAL	High calibration required	4	Use Bench Calibration procedure to recalibrate analyzer.
A1A2	Both alarm relays activated	5	1. Measurement returns to within alarm bounds. 2. Alarm 1 and Alarm 2 are turned off.

Table 7. Error/Alarm Messages (Continued)

Alternate Display	Condition	Priority	Action Required to Clear Message
Al 1	Alarm 1 relay activated.	6	1. Measurement returns to within alarm bounds. 2. Alarm 1 is turned off.
Al 2	Alarm 2 relay activated.	6	1. Measurement returns to within alarm bounds. 2. Alarm 2 is turned off.

— NOTE —

If two or more errors exist simultaneously, the analyzer will flash only the error with the highest priority. If the highest priority error is cleared and a lower priority error still remains, the analyzer will then flash the highest priority error of the remaining errors.

7. Alarm Contact Maintenance

The alarm relay contacts are selected to switch loads equal to or greater than 20 watts. The minimum contact current is 1 ampere. The silver alloy contacts rely on the very slight arc generated during switching to eliminate oxide layers that form on the contacts. When the contacts are used at low (signal) levels, contact function may become unreliable over time due to the formation of an oxide layer on the contacts.

When contacts must be used at low levels, attention must be paid to contact condition. The maximum contact resistance for new relays is 100 milliohms. Values above this level or unstable values indicate deterioration of the contact surface as noted above and may result in unreliable alarm function.

The contact surfaces can be restored as follows:

1. Disconnect the alarm wiring from the analyzer.
2. Connect a load of 20 W or more as shown in Figure 14 so that both NO and NC contacts are exercised.
3. Use the analyzer to switch the alarm relay several times.
4. Disconnect the load installed in Step 2 and reconnect the wiring removed in Step 1.
5. Check to ensure that the alarms are functioning properly.

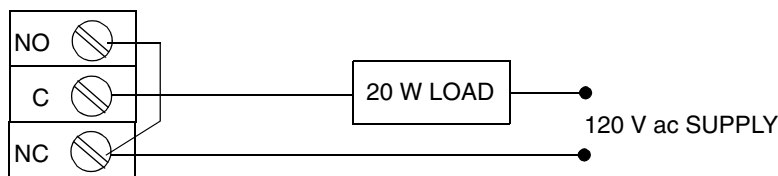


Figure 14. Alarm Contact Reconditioning Circuit

8. Warranty

For sales information or to place an order, contact your local Invensys Foxboro distributor or local Invensys Foxboro sales office.

For Warranty Information..... 1-800-746-6477
For Electrochemistry Analyzer Repair/Troubleshooting Information 508-549-2168
For Electrochemistry Technical Assistance and Application Support..... 508-549-4730
Or by FAX..... 508-549-4734

WARRANTY

Invensys Foxboro expressly warrants the products manufactured by it as meeting the applicable Invensys Foxboro product specifications. INVENSYS FOXBORO MAKES NO OTHER WARRANTIES EITHER EXPRESS OR IMPLIED (INCLUDING WITHOUT LIMITATION WARRANTIES AS TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE). Purchaser retains responsibility for the application and functional adequacy of the offering. In addition, the following shall constitute the exclusive remedies for any breach by Invensys Foxboro of its warranties hereunder.

MATERIAL, WORKMANSHIP, AND TITLE: Invensys Foxboro warrants to Purchaser that all products manufactured by Invensys Foxboro shall be free from defects in material, workmanship, and title, and agrees to either replace, or repair free of charge, any such product, component, or part thereof which shall be returned to the nearest authorized Invensys Foxboro repair facility within one (1) year from date of delivery transportation charges prepaid for the account of the Purchaser. The cost of demonstrating the need to diagnose such defects at the job site, if required, shall be for the account of the Purchaser. Any product or component, or part thereof, so replaced or repaired shall be warranted by Invensys Foxboro for the remainder of the original warranty period or three (3) months, whichever is longer. Any and all such replacements or repairs necessitated by inadequate preventative maintenance, or by normal wear and usage, or by the fault of the Purchaser or power sources supplied by others or by attack and deterioration under unsuitable environmental conditions shall be for the account of the Purchaser. Invensys Foxboro shall not be obligated to pay any costs or charges including "back charges" incurred by the Purchaser or any other party except as may be agreed upon in writing in advance by Invensys Foxboro.

Index

A

Alarm Contact Maintenance 43
Alarms 30

B

Bench Calibration 35

C

Calibration 35
Configuration 29

D

Diagnostics 41
Display 6, 23

E

Error Codes 41

F

Front Panel Display 6
Front Panel Keypad 6

G

General Description 5

I

Identification 7
Installation 11
Introduction 1

K

Keypad 6, 24

M

Mounting to a Panel - Metal Enclosure 12
Mounting to a Panel - Plastic Enclosure 11
Mounting to a Pipe - Metal Enclosure 12
Mounting to a Surface - Movable Mount 16

O

Operation 23
Outputs 31

P

Process Temperature 26

Q

Quick 1

Quick Start 1

S

Safety Specifications 10

Setup Entries 27

Specifications 8

Standardization Using a Known Solution 40

T

Troubleshooting 41

U

Units and Temperature Compensation (U_tC) 29

V

View Process Temperature 26

View Setup Entries 27

W

Wiring of Metal Enclosure 19

Wiring of Plastic Enclosure 18

ISSUE DATES

APR 1996

JUN 2004

Vertical lines to right of text or illustrations indicate areas changed at last issue date.

33 Commercial Street
 Foxboro, MA 02035-2099
 United States of America
<http://www.foxboro.com>
 Inside U.S.: 1-866-746-6477
 Outside U.S.: 1-508-549-2424
 or contact your local Foxboro
 Representative.
 Facsimile: (508) 549-4492

Invensys and Foxboro are trademarks of Invensys plc, its subsidiaries, and affiliates.
 All other brand names may be trademarks of their respective owners.

Copyright 1996-2004 Invensys Systems, Inc.
 All rights reserved

MB 123

Printed in U.S.A.

0604