Catalog | November 2020



EcoStruxure Control Expert
EcoStruxure Automation Device Maintenance
EFB Toolkit
Unity DIF
EcoStruxure Control Expert Specific Libraries



EcoStruxure OPC UA Server Expert OPC Factory Server

EcoStruxure Control Expert and OPC software







Discover Modicon

Industrial Edge control for IIoT

Modicon IIoT-native edge controllers manage complex interfaces across assets and devices or directly into the cloud, with embedded safety and cybersecurity. Modicon provides performance and scalability for a wide range of industrial applications up to high-performance multi-axis machines and high-available redundant processes.

Explore our offer

- Modicon PLC
- Modicon HVAC Controllers
- Modicon Motion Controllers
- Modicon PAC
- Modicon I/O
- Modicon Networking
- Modicon Power Supply
- Modicon Wiring
- Modicon Safety




Quick access to product information

Get technical information about your product



Each commercial reference presented in a catalog contains a hyperlink. Click on it to obtain the technical information of the product:

- Characteristics, Dimensions and drawings, Mounting and clearance,
 Connections and schemas, Performance curves
- Product image, Instruction sheet, User guide, Product certifications, End of life manual

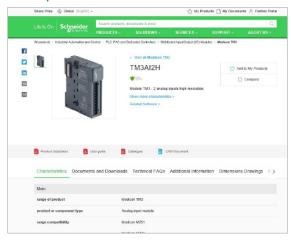

Find your catalog



- With just 3 clicks, you can access the Industrial Automation and Control catalogs, in both English and French
- > Consult digital automation catalogs at Digi-Cat Online



- Up-to-date catalogs
- Embeded product selectors,360° pictures
- · Optimized search by commercial references

Select your training



- > Find the right Training for your needs on our Global website
- > Locate the training center with the selector tool, using this link





General contents

Ecostruxure Control Expert
Companion software
EcoStruxure OPC UA Server Expert
OPC data server software, OFS (OPC Factory Server)
Product reference index

In this catalog, each time words which refer to Safety without precision, must be understood according to "Functional Safety": IEC61508 & IEC61511.

2



Schneider Electric's IoT-enabled, plug-and-play, open, secure, interoperable architecture and platform, in Industries, Infrastructures, Data Centers, and Buildings.

Innovation at every level

EcoStruxure is based on a three-tiered technology stack delivering innovation at every level, from connected products to edge control and apps, analytics, and services.

Together with our hybrid segments approach, this enhances your value around safety, reliability, operational efficiency, sustainability, and connectivity across 6 domains of expertise:

Plant

Grid

- Power
- 1 00001
- IT
- Building
- Machine

Dedicated architectures and IoT

We tailor our solutions in the form of dedicated reference architectures for plants:

- Management systems
- Power systems
- Data center systems
- Industrial plant and machine systems
- Smart grid systems

The Industrial Internet of Things (IIoT) gives an additional boost to technologies. That's why we provide our customers with an IoT-enabled architecture and platform offering simple, reliable, productive, and cost-efficient solutions.

Cybersecurity solutions

Robust cybersecurity protection is a must, and Schneider Electric's solutions can deliver it, regardless of business type or industry.

The vendor-agnostic services provided by our skilled professionals help to protect your entire critical infrastructure. We help to assess your risk, implement cyber-specific solutions, and maintain your onsite defenses over time, while integrating appropriate IT policies and requirements.


This is our difference and your advantage.

Enhanced safety

With the release of M580 Safety, Schneider Electric further expands the EcoStruxure platform.

This consolidates our position as one of the most trusted industrial safety vendor, with thousands of Modicon and Triconex safety systems protecting the most critical industrial processes globally.



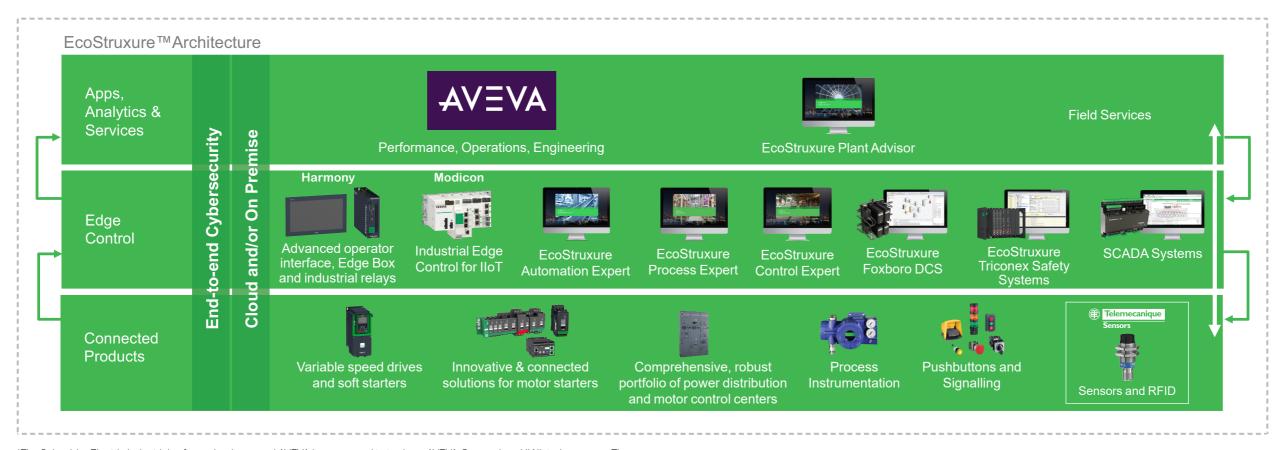

*The Schneider Electric industrial software business and AVEVA have merged to trade as AVEVA Group plc, a UK listed company. The Schneider Electric and Life is On trademarks are owned by Schneider Electric and are being licensed to AVEVA by Schneider Electric.

schneider-electric.com

1 - EcoStruxure Control Expert

	coStruxure Control Expert	
56	election guide	page 1/1
	Presentation, functions	
	Unity pro is renamed EcoStruxure Control Expert	page 1/
	Presentation	
	Topology Manager	
	PAC-to-PAC communication	page 1/
	Cybersecurity	
	FDT/DTM function	page 1/6
	Programming languages	page 1/
	Program units	page 1/1
	Common Safety on Modicon M580	
	Data editor	page 1/1
	DFB user function blocks	page 1/1
	Function block libraries	page 1/1
	Debugging tools	page 1/1
	PLC simulator	page 1/1
	Trending tool	page 1/1
	Documentation editor	page 1/1
	System Time stamping	page 1/1
	Diagnostics integrated in Modicon M340, Modicon M580, Modicon M580 Safety, Premium and Quantum automation platforms	page 1/1:
	Modifying the program with the PAC in RUN mode	page 1/1
	Cross-references function	page 1/1
	Import/export function	page 1/1
	Application converters	page 1/1
	Operating system update utilities	page 1/1
	Online modification of the configuration (CCOTF)	page 1/1
	Process control in machines	page 1/1
	Communication drivers	page 1/1
	Upgrade kits for Concept, PL7 Pro and ProWORX software	page 1/1
	Composition and Windows OS compatibility	page 1/1
	EcoStruxure Control Expert update	page 1/1
	How-to Tutorials	
	References	page 1/2
	EcoStruxure Control Expert licenses and DVD package	page 1/2
	EcoStruxure Control Expert Small V15 software	page 1/2
	EcoStruxure Control Expert Large V15 software	page 1/2
	EcoStruxure Control Expert Extra Large V15 software	page 1/2
	EcoStruxure Control Expert Extra Large Floating V15 software	page 1/2
	EcoStruxure Control Expert Extra Large with Topology Manager and Safety software	page 1/2
	Topology Manager Add-on for EcoStruxure Control Expert Extra Large V15 software	page 1/2:
	M580 Safety Add-on for EcoStruxure Control Expert Large/Extra Large V15 software	
	Accessories for connecting to the PC programming terminal	page 1/2

EcoStruxure Control Expert Small, Large, Extra Large

EcoStruxure	Control Expert programming software for Modicor	n M340 M, Modicon M580 M5, Modicon M580 Safety M5S,
Modicon Mo	mentum MM, Prėmium P, Quantum Q, Quantum Sa	fety QS and Modicon distributed I/O D platforms
IEC 61131-3	Instruction List (IL)	M - MM - D
languages	Ladder (LD)	M - MM - D
	Structured Text (ST)	M - MM - D
	Function Block Diagram (FBD)	M - MM - D
	Sequential Function Chart (SFC)/Grafcet	M - MM - D
Ladder Logic	Language LL984	M - MM
Programming	Multitask programming (Master, fast and event-triggered)	M - MM (master task only) - D
services	Multitask programming (Master, fast, auxiliary and event-triggered)	
	Functional view and function modules	M - MM - D
	Program units	M
	DFB editor and instances	M - MM - D
	DDT compound data editors	M-MM-D
	Data structure instances and tables	M-MM-D
	EF and EFB libraries	M-MM-D
	User-definable control loops	
	Programmable control loops (with process control FB library)	M - MM - D
	Safety function block libraries	
	Motion function block (MFB) libraries	M-MM-D
	Hot Standby PAC redundant system	
	System and application diagnostics	M-MM-D
	Bus and network configuration to slave devices	M - MM - D
	(Modicon distributed I/O, etc.)	
Topology Manager	Multi-controller architecture	
Wallagel	Network consistency	
	Client-server architecture	
	System diagnostics	
Debugging	PLC simulator	M - MM - D
and display services	Hypertext link animations in graphic languages	M - MM - D
Services	Step-by-step execution, Breakpoint, Watchpoint	M-MM-D
	Trending tool	M-MM-D
	Operator screens, Animation tables	M-MM-D
	Diagnostics viewer	M - MM - D
Other	Creation of hyperlinks	M - MM - D
services	XML/XVM import/export	M - MM - D
	Application converters (Modsoft, Concept, ProWORX, PL7)	M
	Utilities for updating PACs and Advantys operating system	M - MM - D
	Communication drivers for Modicon platforms	M - MM - D
	Unity Pro servers - Openness (OFS, third-party tools)	M - MM - D
	Online modification of the configuration	
	Online modification of the program	M - MM - Q
	Importing of applications (Modsoft, Concept, ProWORX)	M - MM
	written in LL984 language	
	Data dictionary, Dynamic exchange with SCADA through OFS	M-MM-D
	Static exchange via XML/XVM export files	M - MM - D
Compatible	Modicon M340 CPUs M	All models
Modicon	Modicon M580 CPUs M5	_
platforms	Modicon M580 Safety CPUs M5S	_
	Modicon Momentum CPUs MM	171CBU78090/98090/98091
	Premium CPUs P	-
	Quantum CPUs Q	-
	Quantum Safety CPUs S	-
Compatible M	lodicon distributed I/O D	STB, OTB, TM7, ETB, Momentum
FacCt	Control Francis cofficience no.	Fac Chrosson Combrel From out Car - !!
Ecostruxure	Control Expert software name	EcoStruxure Control Expert Small

M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models BMEP5810/5820/5830/BMEH5820 BMEP582040S/BMEH582040S (with M580 Safety Add On CEXADSSCZZ●PMZZ) 171CBU78090/98090/98091 TSXP57104W1634M/154M, TSXP57204M/2634M/254M TSXP57304M/3634M/354M, TSXP574634/454M, TSXH572: 140CPU31110, 140CPU43412U, 140CPU53414U - STB, OTB, TM7, ETB, Momentum EcoStruxure Control Expert Large CEXSPUCZL●PMZZ	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - Q M - M5 - MM - Q M - M5 - P - Q - D M - M5 - MM - P - Q - D All models All models All models All models (with M580 Safety Add On CEXADSSCZZ●PMZZ) 171CBU78090/98090/98091 All models
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q M - M - M - Q M - M - M - Q D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models BMEP5810/5820/5830/BMEH5820 BMEP582040S/BMEH582040S (with M580 Safety Add On CEXADSSCZZ●PMZZ) 171CBU78090/98090/98091 TSXP57104M/1634M/154M, TSXP57204M/2634M/254M TSXP57304M/3634M/354M, TSXP574634/454M, TSXH572: 140CPU31110, 140CPU43412U, 140CPU53414U STB, OTB, TM7, ETB, Momentum	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models All models - STB, OTB, TM7, ETB, Momentum
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models BMEP5810/5820/5830/BMEH5820 BMEP582040S/BMEH582040S (with M580 Safety Add On CEXADSSCZZ●PMZZ) 171CBU78090/98090/98091 TSXP57104M/1634M/154M, TSXP57204M/2634M/254M TSXP57304M/3634M/354M, TSXP574634/454M, TSXH572: 140CPU31110, 140CPU43412U, 140CPU53414U	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D All models All models
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models BMEP5810/5820/5830/BMEH5820 BMEP582040S/BMEH582040S (with M580 Safety Add On CEXADSCZZ PMZZ) 171CBU78090/98090/98091 TSXP57104M/1634M/154M, TSXP57204M/2634M/254M TSXP57304M/3634M/354M, TSXP574634/454M, TSXH572	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - Q M - M5 - MM - Q M - M5 - P - Q - D M - M5 - MM - P - Q - D All models All models All models (with M580 Safety Add On CEXADSSCZZ⊕PMZZ) 171CBU78090/98090/98091 All models
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models BMEP5810/5820/5830/BMEH5820 BMEP582040S/BMEH582040S (with M580 Safety Add On CEXADSSCZZ●PMZZ) 171CBU78090/98090/98091 TSXP57104M/1634M/154M, TSXP57204M/2634M/254M TSXP57304M/3634M/354M, TSXP574634/454M, TSXH572	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - Q M - M5 - MM - Q M - M5 - P - Q - D M - M5 - MM - P - Q - D All models All models All models (with M580 Safety Add On CEXADSSCZZ⊕PMZZ) 171CBU78090/98090/98091 All models
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models BMEP5810/5820/5830/BMEH5820 BMEP582040S/BMEH582040S (with M580 Safety Add On CEXADSSCZZ●PMZZ) 171CBU78090/98090/98091 TSXP57104M/1634M/154M, TSXP57204M/2634M/254M	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - Q M - M5 - MM - Q M - M5 - P - Q - D M - M5 - MM - P - Q - D All models All models All models All models (with M580 Safety Add On CEXADSSCZZ●PMZZ) 171CBU78090/98090/98091 All models
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models BMEP5810/5820/5830/BMEH5820 BMEP582040S/BMEH582040S (with M580 Safety Add On CEXADSSCZZ●PMZZ) 171CBU78090/98090/98091	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models All models All models All models (with M580 Safety Add On CEXADSSCZZ◆PMZZ) 171CBU78090/98090/98091
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models BMEP5810/5820/5830/BMEH5820 BMEP582040S/BMEH582040S (with M580 Safety Add On CEXADSSCZZ•PMZZ)	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models All models All models All models (with M580 Safety Add On CEXADSSCZZ◆PMZZ)
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D All models BMEP5810/5820/5830/BMEH5820 BMEP582040S/BMEH582040S (with M580 Safety Add On	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q - D All models All models
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - Q M - M5 - MM - P - Q M - M7 - M7 - Q - D M - M8 - M7 - Q - D M - M8 - M7 - Q - D M - M8 - M7 - Q - D M - M8 - M7 - Q - D All models	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - MM - Q M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - Q M - M5 - P - Q - D M - M5 - P - Q - D
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - MM - Q	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - Q
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - MM - Q	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q M - M5 - MM - P - Q M - M5 - MM - Q
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q M - M5 - MM - P - Q
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M5 - Q
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	
	M-M5-MM-P-Q-D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M5 - P (TSXH5724M/44M) - D	M5 - P (TSXH5724M/44M) - Q (140CPU67160) - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
P (TSXP572•/3•/4•) - D	P (TSXP572•/3•/4•/5•) - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D M - M5	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D
M5	M5 - P (TSXP575•) - Q (140CPU651/671) - D
M - M5 - MM (master task only) - P - Q - D	M - M5 - MM (master task only) - P - Q - D
M - M5 - MM - Q	M - M5 - MM - Q
	M - M5 - MM - P - Q - D
	M - M5 - MM - P - Q - D
M - M5 - MM - P - Q - D	
M - M5 - MM - P - Q - D M - M5 - MM - P - Q - D	M-M5-MM-P-Q-D
M - M5 - MM - P - Q - D	M - M5 - MM - P - Q - D



Software license, see page



CEXSPUCZS•PMZZ

Schneider Electric

EcoStruxure Control Expert software package

EcoStruxure Control Expert

Extra Large with Topology Manager and M580 Safety

EcoStruxure Control Expert programming software for Modicon M340 M, Modicon M580 M5, Modicon M580 Safety M5S, Modicon Momentum MM, Premium P, Quantum Q, Quantum Safety QS and Modicon distributed I/O D platforms

Modicon Mo	omentum MM, Premium P, Quantum Q, Quantum S
IEC 61131-3	Instruction List (IL)
languages	Ladder (LD)
	Structured Text (ST)
	Function Block Diagram (FBD)
	Sequential Function Chart (SFC)/Grafcet
Ladder Logic	Language LL984
	Multitask programming (Master, fast and event-triggered)
	Multitask programming (Master, fast, auxiliary and event-triggered)
	Functional view and function modules
	Program units
	DFB editor and instances
	DDT compound data editors
	Data structure instances and tables
	EF and EFB libraries
	User-definable control loops
	Programmable control loops (with process control FB library)
	Safety function block libraries
	Motion function block (MFB) libraries
	Hot Standby PAC redundant system
	System and application diagnostics
	Bus and network configuration to slave devices (Modicon distributed I/O, etc.)
Topology	Multi-controller architecture
Manager	Network consistency
	Client-server architecture
	System diagnostics
Debugging	PLC simulator
and display	Hypertext link animations in graphic languages
services	Step-by-step execution, Breakpoint, Watchpoint
	Trending tool
	Operator screens, Animation tables
	Diagnostics viewer
Other	Creation of hyperlinks
services	XML/XVM import/export
	·
	Application converters (Modsoft, Concept, ProWORX, PL7)
	Utilities for updating PACs and Advantys operating system
	Communication drivers for Modicon platforms
	Unity Pro servers - Openness (OFS, third-party tools)
	Online modification of the configuration
	Online modification of the program Importing of applications (Modsoft, Concept, ProWORX)
	written in LL984 language
	Data dictionary, Dynamic exchange with SCADA through OFS
	Static exchange via XML/XVM export files
Compatible	Modicon M340 CPUs M
Modicon platforms	Modicon M580 CPUs M5
piationiis	Modicon M580 Safety CPUs M5S
	Modicon Momentum CPUs MM
	Premium CPUs P
	Quantum CPUs 0
	Quantum Safety CPUs S
Compatible M	lodicon distributed I/O D
EcoStruxure	Control Expert software name

M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M-M5-M5S-MM-P-Q-D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - Q M - M5 - M5S - MM (master task only) - P - Q - D M5 - M5S - P (TSXP575•) - Q (140CPU651/671) - D M - M5 - M5S - MM - P - Q - D M - M5 - M5S M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D P (TSXP572•/3•/4•/5•) - D M-M5-M5S-MM-P-Q-D M5S M - M5 - M5S - MM - P - D M5 - M5S - P (TSXH5724M/44M) - Q (140CPU67160) - D M-M5-M5S-MM-P-Q-D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M-M5-M5S-MM-P-Q-D M - M5 - M5S - MM - P - Q - D M-M5-M5S-MM-P-Q-D M - M5 - M5S - MM - P - Q - D M - M5 - M5S - MM - P - Q - D M5 - M5S - Q M - M5 - M5S - MM - P - Q M - M5 - M5S - MM - Q M - M5 - M5S - P - Q - D M - M5 - M5S - MM - P - Q - D All models All models All models 171CBU78090/98090/98091 All models

All models STB, OTB, TM7, ETB, Momentum EcoStruxure Control Expert Extra Large with M580 Safety Add-on **EcoStruxure Control Expert software name** CEXADSCZZ•P•ZZ **EcoStruxure Control Expert software package**

(1) Available Q1 2021.

Software license, see page

M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D - Q
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D- Q
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D - Q
M - M5 - M5S - MM - Q	M - M5 - MM - Q	M - MM - Q
M - M5 - M5S - MM (master task only) - P - Q - D	M - M5 - MM (master task only)	M - MM (master task only) - P - D -
M5 - M5S - P (TSXP575•) - Q (140CPU651/671) - D		P (TSXP575•) - D - Q (140CPU651/671)
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D - Q - QS
M - M5 - M5S	M - M5 - M5S	
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D - Q - QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D - Q
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D - Q
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D - Q
P (TSXP572•/3•/4•/5•) - D	P (TSXP572•/3•/4•/5•) - D	P (TSXP572•/3•/4•/5•) - D
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D -Q
M5S	M5S	D - QS
M - M5 - M5S - MM - P - D	M - M5 - MM - P - D	M - MM - P - D
M5 - M5S - P (TSXH5724M/44M) - Q (140CPU67160) - D	M5 -P (TSXH5724M/44M) - Q (140CPU67160) - D	P (TSXH5724M/44M) - D - Q (140CPU67160)
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D - Q
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	
M5 - M5S	M5	
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	
M - M5 - M5S - MM - P - Q - D	M-M5-MM-P-Q-D	
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M-MM-P-D-Q-QS
M5 - M5S - Q	M5 -Q	
M - M5 - M5S - MM - P - Q M - M5 - M5S - MM - Q	M - M5 - MM - P - Q M - M5 - MM - Q	M - MM - Q
M - M5 - M5S - P - Q - D	M - M5 -P - Q - D	M-P-D-Q-QS
M - M5 - M5S - MM - P - Q - D	M - M5 - MM - P - Q - D	M - MM - P - D - Q - QS
All models	m mo mm - 1 - Q - D	To be used only for Quantum safet
All models		To be used only for Quantum suite
All models	_	
171CBU78090/98090/98091		
All models		
All models		
_		
STB, OTB, TM7, ETB, Momentum		
EcoStruxure Control Expert Extra Large with Topology Manager and M580 Safety (1	EcoStruxure Control Expert Extra Large () with Topology Manager Add-on (1)	Unity Pro Extra Large Safety v7.0 for Quantum
CEXSPMCZX•PMZZ	CEXADMCZZ••ZZ, CEXADMFZZSPAZZ	UNYSPUX••V1X

M-MM-P-D-Q-QS M-MM-P-D-Q M-MM-P-D-Q-QS M-MM-P-D-Q M - MM - Q M - MM (master task only) - P - D - Q **P** (TSXP575•) - **D** - **Q** (140CPU651/671) M-MM-P-D-Q-QS M-MM-P-D-Q-QS M-MM-P-D-Q M-MM-P-D-Q M-MM-P-D-Q P (TSXP572•/3•/4•/5•) - D M-MM-P-D-Q D-QS M-MM-P-D **P** (TSXH5724M/44M) - **D** -**Q** (140CPU67160) M-MM-P-D-Q-QS M-MM-P-D-Q M-MM-P-D-Q-QS M-MM-P-D-Q-QS M-MM-P-D-Q-QS M-MM-P-D-Q-QS M-MM-P-D-Q-QS M-MM-P-D-Q-QS M-MM-P-D-Q-QS M-MM-P-D-Q-QS M-MM-P-D-Q M-MM-P-D-Q M-MM-P-D-Q-QS M-MM-P-D-Q-QS M - MM - Q M-P-D-Q-QS M-MM-P-D-Q-QS To be used only for Quantum safety **Unity Pro Extra Large Safety** v7.0 for Quantum





EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety



EcoStruxure Control Expert

UnityPro is renamed EcoStruxure Control Expert

In line with EcoStruxure[™] strategy and values, Unity Pro, our Engineering software for the Modicon PAC platform for hybrid and process industries, has been renamed EcoStruxure[™] Control Expert.

Presentation

This catalog describes EcoStruxure Control Expert software V15, which is the latest version available.

EcoStruxure Control Expert is the common programming, debugging, and operating software for the Modicon M340, M580, M580S, Premium, Momentum, and Quantum ranges.

Note: Please use Unity Pro software V7 for Quantum SIL3 (safety integrity level 3).

EcoStruxure Control Expert is multitasking software offering the following features:

- All-in-one software
- Five IEC 61131-3 programming languages
- LL 984 programming language
- Device integration with FDT/DTM standard
- Integrated, customizable DFB library
- Topology Manager
- PAC-to-PAC communication
- PLC simulator on PC for program validation prior to installation
- Built-in tests and diagnostics
- Wide range of online services
- Cybersecurity

EcoStruxure Control Expert supports the new M580 Safety PACs, mixing process and safety in a single project. It allows users to:

- Optimize engineering time
- Simplify programming with IEC61508 functions
- Facilitate maintenance


EcoStruxure Control Expert is available in two modes:

- Classic mode for single-controller architectures, with Topology Manager license that can work in Topology Manager mode
- Topology Manager mode for multi-controller architectures

Topology Manager


EcoStruxure Control Expert V15 with the new Topology Manager offers a common environment to design, engineer, commission, operate, and maintain a complete plant. The multi-controller architecture in graphical tree representation makes the design and deployment of entire multi-PAC systems, including the various types of automation assets, very easy.

The intuitive design workflow (drag/drop, copy/paste) is created for the global administration of complete architecture. A consistent update of the logical network view with automatic assignment of IP address allows you to update a project easily, reducing engineering maintenance and total lifecycle costs. During commissioning, users will also be able to deploy one or a group of controllers/assets in one click, thus reducing time and engineering costs.

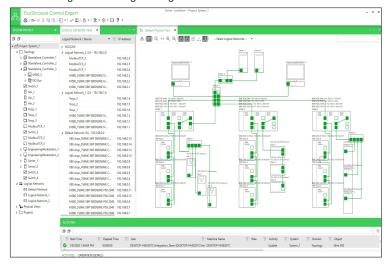

1/6


EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety

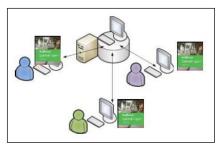


Client-Server model

		₩ M500_1			×			
ogic	al Network / Device		V	Interface	2	IP Address	V	
	M580_1\8ME X8P 1200	#0\8ME P58 3040 #0		Embedded Interfa	ceMainIP	192.168.0.1		
	M580_1\8ME X8P 1200	#0\8ME P58 3040 #0		Embedded Interfa	ceVPA	192.168.0.2		
	M580_1\8ME X8P 1200	#0\8ME NOC 0301.4 #9		Embedded Interfa	ce\MainIP	192.168.0.3		
	X80 drop_1\8ME X8P 08	00 #0\BME CRA 31210.4 #	0	Embedded Interfa	ce\MainIP	192.168.0.4		
	M580_2\BME XBP 1200	#0\8ME P58 3040 #0		Embedded Interfa	QlnisM(so	192.168.0.5		
	M580_2\BME X8P 1200	#0\8ME P58 3040 #0		Embedded Interfa	ceVPA	192.168.0.6		
	M580_2\BME X8P 1200	#0\8ME NOC 0301.4 #9		Embedded Interfa	ce'MainIP	192.168.0.7		
	X80 drop_2\BME X8P 08	00 #0\8ME CRA 31210.4 #	0	Embedded Interfa	Cel/MainIP	192.168.0.8		
	TeSysT_2			Embedded Interfa	ce//P	192.168.0.9		
	RATION DETAILS			Autres				
9 (VD					
9 (3			escription		hich the RSTP service	r is enabled is not linke	d (ID: 5003)
Ø 0	(9) Object		At	escription least one redundar	it port for w	hich the RSTP service I DHCP server is confi		d (ID: 5003)
Ø (9 ' Object M580_218ME X8P 1200		At Th	escription least one redundar at DHCP client is en	it port for wi		figured. (ID: 6015)	d (ID: 5003)
Ø (9 Object M580_2\BME X8P 1200 ATV6_4		At Th	escription least one redundar in DHCP client is en in DHCP client is en	it port for wi abled but no abled but no	DHCP server is conf	figured. (ID: 6015) figured. (ID: 6015)	d (ID: 5003)
Ø (Object M580_2/8ME XEP 1200 ATV6_4 ATV6_3		At Th Th	escription least one redundar a DHCP client is en e DHCP client is en e DHCP client is en	it port for wi abled but no abled but no abled but no	DHCP server is conf DHCP server is conf	figured. (ID: 6015) figured. (ID: 6015) figured. (ID: 6015)	d (ID: 5003)
Ø (Object MS90_2/8ME XEP 1200 ATV6_4 ATV6_3 ATV6_2 ATV6_1		At Th Th Th	escription Jeast one redundar B DHCP client is en B DHCP client is en B DHCP client is en	it port for wi abled but no abled but no abled but no abled but no abled but no	DHCP server is conf DHCP server is conf DHCP server is conf DHCP server is conf	figured. (ID: 6015) figured. (ID: 6015) figured. (ID: 6015)	
9 (9 (9 (9 (9 (9 (9 (9 (9 (9 (Object MS90_2/8ME XEP 1200 ATV6_4 ATV6_3 ATV6_2 ATV6_1	#0.8ME NOC 0301.4 #9	At Th Th Th Th	escription least one redundar DHCP client is en e DHCP client is en	it port for wi abled but no abled but no abled but no abled but no abled but no are disables	DHCP server is conf DHCP server is conf DHCP server is conf DHCP server is conf d in the Security tab	figured. (ID: 6015) figured. (ID: 6015) figured. (ID: 6015) figured. (ID: 6015)	Verify that t
Ø (Object MS00_2/BME X8P 1200 MS00_64 ATV6_4 ATV6_5 ATV6_2 ATV6_1 MS00_2/BME X8P 1200 Logical Natwork_1	#0.8ME NOC 0301.4 #9	At The	escription least one redundar a DHCP client is en e DHCP client is en e DHCP client is en e DHCP dient is en e DHCP services e following services e following services	at port for wi abled but no abled but no abled but no abled but no are disables are disables	DHCP server is conf DHCP server is conf DHCP server is conf DHCP server is conf d in the Security tab	figured. (ID: 6015) figured. (ID: 6015) figured. (ID: 6015) figured. (ID: 6015) of the Properties pane. of the Properties pane.	Verify that t
Ø (Object M590_2/8ME XEP 1200 ATV6_4 ATV6_3 ATV6_2 ATV6_1 M590_2/8ME XEP 1200 M590_T/8ME XEP 1200 M590_T/8ME XEP 1200 Logical Network_1 Logical Network_2	#0.8ME NOC 0301.4 #9	At The	escription least one redundar a DHCP disent is en- e DHCP dient is en- e following services e Logical Network; e Logical Network;	at port for what abled but no abled but no abled but no abled but no are disabled are disabled are perties an oxoperties an oxoperties an oxoperties and abled but no are disabled are perties and are perties and abled but no ab	DHCP server is confi DHCP server is confi DHCP server is confi DHCP server is confi d in the Security tab of d in the Security tab or e not unique (ID: 100 e not unique (ID: 100 e not unique (ID: 100	figured. (ID: 6015) figured. (ID: 6015) figured. (ID: 6015) figured. (ID: 6015) of the Properties pane. of the Properties pane. 14)	Verify that t
Ø (Object MS00_2/BME X8P 1200 MS00_64 ATV6_4 ATV6_5 ATV6_2 ATV6_1 MS00_2/BME X8P 1200 Logical Natwork_1	#0.8ME NOC 0301.4 #9	At The	escription least one redundar be DHCP client is en e following services e following services t Logical Network; e Logical Network; e Logical Network y e Logical Network y	at port for wi abled but no abled but no abled but no are disables are disables properties an properties an properties an	DHCP server is conf i DHCP server is conf i DHCP server is conf i DHCP server is conf d in the Security tab d in the Security tab e not unique (ID: 100	ligured. (ID: 6015) ligured. (ID: 6015) ligured. (ID: 6015) ligured. (ID: 6015) of the Properties pane. of the Properties pane. 34) 34)	Verify that t


Network consistency check

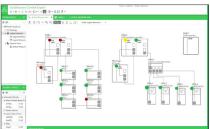

System diagnostics

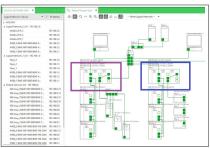

Implicit messaging

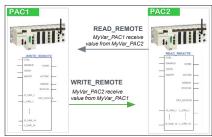

Explicit messaging



Topology Manager (continued)

Client-server model

The client-server model enables multiple engineers to work concurrently on the same project. The central repository (single global database) enables active services to share information across all automation system components as well as share real-time engineering data with all users, thus helping to maintain data consistency.

Network consistency

The accuracy and consistency of the network design can be analyzed and automatically validated with just one click. Detected errors or warnings are reported with detailed instructions for easy correction.

System diagnostics

The system diagnostics provides live statistics for the entire plant during the operation or commissioning phase. Detected errors are localized and analyzed in real time. The intuitive interface also helps to easily visualize these detected errors and resolve them quickly to boost efficiency.

PAC-to-PAC communication

The PAC-to-PAC communication is made flexible and easy with:

- Explicit messaging with READ_REMOTE and WRITE_REMOTE communication function blocks. These blocks enable exchange of variables by using the name of the variable between M580 and M340 PLCs.
- Implicit messaging with local slave being configured in Topology Manager and checked for consistency

Cybersecurity

Schneider Electric constantly endeavours to maintain the security of its systems. Security guidelines are available for our customers to help ensure their systems are protected from attack.

The Modicon M340, M580, M580S, Premium, Momentum, and Quantum automation platforms feature:


- Protection against remote programming changes via a password
- Option to enable or disable HTTP or FTP services

With the Modicon M580 automation platform:

- Log of security events in the SYSLOG database
- Extended Ethernet services management (DHCP, etc.) can be set for each user in the Access Control List
- More secure IPSec communication between EcoStruxure Control Expert or SCADA and PAC

EcoStruxure Control Expert

Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety

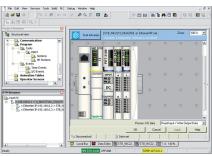

DTM editor (Modicon STB island)

All devices	Device	Type	Vendor	Version	Date
⊞ Devices	T M NDC0401	Communication	Schneider Electric	1.00.0031	
⊕ Vendors	Modbus Serial Comm	Communication	Schneider Electric	2.0.1	2009-06-25
Endress+Hauser	Modbus TCP Commu	Communication	Schneider Electric	20.0	2009-06-05
Schneider Electric	TOTE 1CODMSLP	Device	Schneider Electric	2.02	2009-01-01
Telemecanique	P_ETC101	Communication	Schneider Electric	1.00.0031	
VEGA Grieshaber KG	PRM Comm	Communication	Schneider Electric	1.8	
Groups	PRM Moster	Communication	Schneider Electric	1.x	
⊞ Protocols	Q_N0C77101	Communication	Schneider Electric	1.00.0031	
	STB NIC2212	Device	Schneider Electric	1.0	2009-10-05
	STB NIP2x1x	Device	Schneider Electric	1.0	2009-10-05
External Update Tool Reload	catalog us λ Local Bus λ RIO Bus				


DTM hardware catalog



DTM Browser and DTM context menu



DTM Audit Tool screen

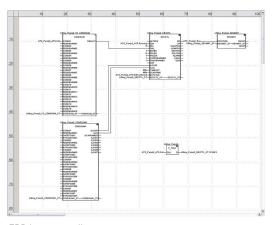

FBD language editor

FDT/DTM function

EcoStruxure Control Expert facilitates integration of fieldbus architectures into engineering control systems using FDT/DTM technology:

- FDT (Field Device Tool) is the container which supports the device DTMs.
- DTM (Device Type Manager) is the configuration tool for devices with integrated graphic interfaces. It contains the properties specific to each device.

In addition to the FDT/DTM standard, the software uses specific information from the Master DTM created for the Profibus Remote Master (PRM) module, the HART module, the Premium ISPY101 weighing module, Altivar process drive integration, and the Modbus/TCP and EtherNet/IP network modules BMXNOC0401 and BMENOC03•1.

Use of the Master DTM allows EcoStruxure Control Expert to perform the following actions.

- Manage the PAC I/O scan
- Create the application variables based on the description of the process objects available from the connected DTM devices
- Manage synchronization with the PAC configuration
- Create a generic DTM from the description files (GSD or EDS)

The DTM configuration is stored in the PAC memory so that the application can be downloaded in its entirety. It is also saved in the PAC project file (STU), the archive file (STA), and the full application exchange file (ZEF).

A third-party DTM can be installed in the DTM hardware catalog. The DTM hardware catalog can be used to sort or filter the DTMs according to various criteria such as device, vendor, groups or protocols.

The DTM Browser in EcoStruxure Control Expert:

- Displays the fieldbus topologies in a tree structure
- Allows the user to configure the DTM devices:
- □ add and delete DTMs
- □ connect and disconnect DTMs to/from their physical devices
- □ display and print the properties of a DTM
- □ transfer DTM configuration data to and from the physical device
- □ execute functions specific to the DTM, via the Device menu

The fieldbus discovery function scans the physical devices in a fieldbus network and adds the selected devices to the DTM Browser.

DTM Audit Tool is provided to have a clear vision of the DTM versions embedded in a project and the versions installed on the PC. Depending on the DTM version compatibility, the tool informs if the project can be opened and built.

Programming languages

The five IEC 61131-3 compliant languages

The five graphical or textual languages available in EcoStruxure Control Expert are used for programming Modicon M340, Modicon M580, Modicon M580 Safety, Modicon Momentum, Premium, and Quantum automation platforms.

The three graphical languages are:

- Ladder (LD) language
- Function Block Diagram (FBD)
- Sequential Function Chart (SFC) or Grafcet

The two textual languages are:

- Structured Text (ST)
- Instruction List (IL)

For these five languages, you can use the standard set of instructions compliant with IEC standard 61131-3 to create applications that can be transferred from one platform to another. EcoStruxure Control Expert software also provides extensions to this standard set of instructions. As they are specific to Modicon M340, Modicon M580, Modicon M580 Safety, Modicon Momentum, Premium, and Quantum automation platforms, these extensions support the development of more complex applications in order to maximize the potential of the specific features of each of these platforms.

LL984 language


LL984 (Ladder Logic 984) language enables migration from legacy Modicon ranges. It is used to program Modicon M580, Modicon M580 Safety, Modicon M340, Momentum, and Quantum automation platforms.

Selection guide:

Presentation: page 1/6

References:

EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety

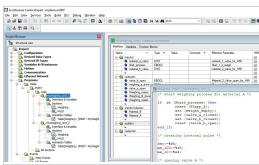

Program units

Program units

Program units are compliant with Program Organization Units (POUs) as defined in standard IEC 61131-3.

Program units are autonomous programming entities (only available for Modicon M580 and M340). Program units allows easy duplication and clear organization of a program with local and public variables.

The program unit includes:

- Public and local variables
- Sections
- Animation tables

The following programming languages are supported:

- FBD (Function Block Diagram)
- LD (Ladder Diagram Language)
- SFC (Sequential Function Chart) only for sections in the program unit that belong to the MAST task
- IL (Instruction List)
- ST (Structured Text)



Common functional Safety architecture on Modicon M580 (1)

The EcoStruxure Control Expert user-friendly interface for Modicon automation platforms family is now available for safety.

EcoStruxure Control Expert allows users to:

- Manage a complete control and safety automation system from design to operation and maintenance.
- Increase productivity during engineering, commissioning, and operation for both process and safety, reducing time to market.

EcoStruxure Control Expert makes it possible to design a common safety architecture by executing:

- The Safety functions of your process in specific safety tasks
- Standard functions in other tasks

All X80 safety I/O are managed through safety tasks, and standard and noninterfering X80 modules are managed in other tasks. This means it is possible to mix safety and standard X80 modules in the same M580 Safety PAC.

IEC 61131-3 compliant languages

FBD and LD are supported in the SAFE task. The safe task has 2 modes for operation and maintenance:

- Safety mode: During operation, the SAFE task is running and is locked for users
- Maintenance mode: Dedicated for maintenance operations in safety part of the application

Data editor

PROCESS and SAFE data are managed in a distinct M580 memory area. EcoStruxure Control Expert allows users to easily manage:

- Exchange of data between process and safe areas of the project in "Data Editor"
- Process data in the "PROCESS Data Editor"
- Safe data in the "SAFE Data Editor"

Safety function blocks

EcoStruxure Control Expert supports new M580 Safety offers with IEC 61508 programming languages and a rich library of Safety function blocks.


(1) Available from V13.



Safety function block

Schneider


EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety

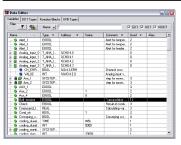


Data editor




Data properties

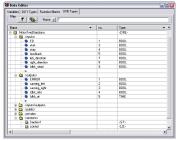

Design

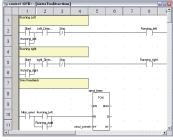

Creating the code



Use within the program

Data editor

The data editor provides a single tool for performing the following editing tasks:

- Declaration of data including variables and function blocks (declaration of their type, instances, and attributes)
- Use and archiving of function block data types in different libraries
- Hierarchical view of data structures
- Searching, sorting, and filtering of data
- Creation of a hyperlink to access a description from any variable comment

The data is displayed in four tabs:

- "Variables" tab for the creation and management of the following data instances: bits, words, double words, inputs/outputs, tables, and structures
- "DDT Types" tab for the creation of derived data types (tables and structures)
- "Function Blocks" tab for the declaration of EFBs and DFBs
- "DFB Types" tab for the creation of DFB user function block data types

Each data element has several attributes, of which:

- Variable name and type are mandatory
- Comment, physical address in the memory, and initial values are optional

The data editor columns can be configured (number of columns, order). The attributes associated with a variable can be displayed in a properties window.

This editor can be accessed at any time during programming by selecting variables for data modification or creation.

DFB user function blocks

With EcoStruxure Control Expert software, users can create their own function blocks for specific application requirements on Modicon M340, Modicon M580, Modicon M580 Safety, Modicon Momentum, Premium, and Quantum platforms.

Once created and saved in the library, these user function blocks can be reused as easily as EFBs (Elementary Function Blocks).

The user function blocks can be used to structure an application. They are used when a program sequence is repeated several times in the application or for freezing a standard programming routine. They can be read-only or read/write. They can be exported to other EcoStruxure Control Expert applications.


Using a DFB in one or more applications:

- simplifies program design and entry
- improves program readability and understanding
- facilitates program debugging (variables handled by the DFB are identified in the data editor)
- enables the use of private variables specific to the DFBs, which are independent of the application

A DFB is set up in several stages:

- The DFB is designed by assigning a name, a set of parameters (inputs, outputs, public and private internal variables) and a comment to it via the data editor.
- The code is created in one or more sections of the program, with the following languages selected according to requirements: Structured Text, Instruction List, Ladder, or Function Block Diagram (ST, IL, LD, or FBD).
- The DFB can be stored in a library with an associated version number.
- A DFB instance is created in the data editor or when the function is called in the program editor.
- This instance is used in the program in the same way as an EFB (the instance can be created from within the program).

EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety

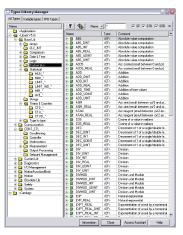

Standard function block libraries



User libraries

Function block libraries

The function and function block libraries manager contains the elements provided with EcoStruxure Control Expert software. Functions and function blocks are organized into libraries, which themselves consist of families. Depending on the type of PAC selected and the processor model, users will have a subset of these libraries available to write their applications. However, the "Base Lib" library contains a set of functions and function blocks, for the majority of which compatibility is independent of the platforms. In particular, it contains the blocks compliant with IEC 61131-3. The "Base Lib" library is structured into families:

- Timers and counters
- Process control on integers
- Table management
- Comparison
- Date and time management
- Logic processing
- Mathematical processing
- Statistical processing
- Character string processing
- Type-to-type data conversion

The "Base Lib" library, which covers standard automation functions, is supplemented by other, more application-specific libraries and platform-specific functions:

- Communication library, providing an easy means of integrating communication programs from PACs with those used by HMIs from the PAC application program. Like other function blocks, these EFBs can be used in any language to exchange data between PACs or to deliver data to be displayed on an HMI.
- Process control library. The CONT_CTL library can be used to set up process-specific control loops. It offers controller, derivative, and integral control functions and additional algorithms, such as EFBs for calculating mean values, selecting a maximum value, detecting edges, or assigning a hysteresis to process values, etc.
- Diagnostics library, which can be used to monitor actuators and contains EFBs for active diagnostics, reactive diagnostics, interlocking diagnostics, permanent process condition diagnostics, dynamic diagnostics, monitoring of signal groups, etc.
- I/O management library, providing services to handle information exchanged with hardware modules (formatting data, scaling, etc.).
- Motion Function Block library, containing a set of predefined functions and structures to manage motion controlled by drives and servo drives connected on CANopen.
- Motion library for motion control and fast counting.
- System library, which provides EFBs for the execution of system functions, including: evaluation of scan time, availability of several different system clocks, SFC section monitoring, display of system status, management of files on the memory cartridge of the Modicon M340 processor, M580 processor, etc.
- Finally, a library named "obsolete", containing the function blocks used by legacy programming software needed to perform application conversions.


Management of user standards

Users can create libraries and families in order to store their own DFBs and DDTs. This enhancement allows users to take advantage of programming standards adapted to their needs, along with version management. This means that it is possible to:


- Check the version of the elements used in an application program against those stored in the library
- Perform an upgrade, if necessary

EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety

Debugging tools: Dynamic animation/adjustment

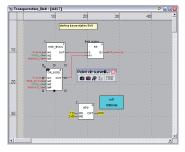

Debugging tools: Watchpoint

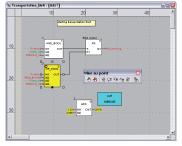

Debugging tools: Breakpoint/step-by-step

Debugging tools

EcoStruxure Control Expert software offers a complete set of tools for debugging Modicon M340, M580, M580S, Momentum, Premium, or Quantum applications. A tool palette provides direct access to the main functions:

- Dynamic program animation
- Setting of watchpoints or breakpoints (not authorized in event-triggered tasks)
- Step-by-step program execution. A function in this mode enables section-by-section execution. Instruction-by-instruction execution can be launched from the previous breakpoint. Three execution commands are therefore possible when the element to be processed is a subroutine (SR) or DFB user block instance:
- □ Step Into: This command is used to move to the first element of the SR or DFB.
- □ Step Over: This command is used to execute the entire SR or DFB.
- $\hfill \Box$ Step Out: This command is used to move to the next instruction after the SR or DFB element.
- Independent execution of the master (MAST), fast (FAST), auxiliary (AUX), and event-triggered (EVTi) tasks

Animation of program elements

Dynamic animation is managed section-by-section. A button on the toolbar is used to activate or deactivate animation for each section.

When the PAC is in RUN, this mode can be used to simultaneously view:

- The animation of a program section, regardless of the language used
- The variables window containing the application objects created automatically from the section viewed

Animation table

Tables containing the variables of the application to be monitored or modified can be created by data entry or initialized automatically from the selected program section. The tables can be stored in the application and retrieved from there at a later date.

EcoStruxure Control Expert can be used to save, import, and export Animation tables with predefined set values. As it allows population of set values along with current values and vice versa in the PAC, Animation tables can be used as templates to make the application easier to tune.

Debugging DFB user function blocks

The parameters and public variables of these blocks are displayed and animated in real time using animation tables, with the possibility of modifying and forcing the required objects.

In exactly the same way as with other program elements, the watchpoint, breakpoint, step-by-step execution, and program code diagnostics functions can be used to analyze the behavior of DFBs. Setting a breakpoint in a DFB user function block instance stops execution of the task containing this block.

Debugging in Sequential Function Chart (SFC) language

The various debugging tools are also available in SFC language. However, unlike other sections (IL, ST, LD, or FBD), an SFC section executed step-by-step does not stop execution of the task but instead freezes the SFC chart. Several breakpoints can be declared simultaneously within a single SFC section.


EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety



Simulator control panel

Transfer [64] S. M. S. Sand dagoe Ford Danie | F. Adayon | S. Sadder) | S. Sand dagoe Ford Danie | F. Adayon | S. Sadder) | S. Sand dagoe Ford Danie | S. Sadder | S. Sadder

Trending tool control panel

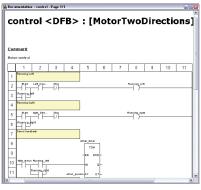

Accessing the documentation editor

PLC simulator

EcoStruxure Control Expert's integrated simulator can be used to test the application program for Modicon M340, M580, M580S, Momentum, Premium, or Quantum automation platforms from the PC terminal without having to connect to the processor. The functions provided by the debugging tools are available for debugging the master, fast, and auxiliary tasks.

As the simulator does not manage the PLC I/O, animation tables can be used to simulate the state of inputs by forcing them to 0 or 1.

The simulator can be connected to third-party applications via an OPC server with OFS (OPC Factory Server) software.

Trending tool

The trending tool allows easy monitoring of variables by detecting operating problems or improving process performance. You can select any variable in your application and start acquisition, save records, and analyze records with integrated tools or Excel. The PAC mast scan can scan up to 16 variables.

Documentation editor

The documentation editor is based on the Documentation Browser, which shows the file structure in tree form.

It allows all or part of the application file to be printed on any graphics printer accessible under Windows using True Type technology, in A4 or US letter print format.

The documentation editor supports the creation of user-specific files using the following headings:

- Title page
- Contents
- General information
- Footer
- Configuration
- EF, EFB, and DFB type function blocks
- User variables
- Communication
- Project structure
- Program
- Animation tables and cross-references
- Runtime screens


System time stamping

System mode allows time stamping of I/O or internal variables for easy management via OFS and SCADA. Programming or use of any function block is not required as the configuration is easy to perform in EcoStruxure Control Expert Data Editor supported by OFS version 3.51.

EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety Integrated diagnostics

Diagnostics integrated in Modicon M340, Modicon M580, Modicon M580 Safety, Premium, and Quantum automation platforms

Presentation

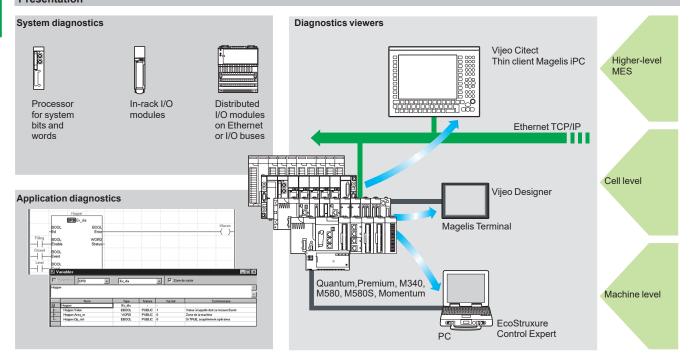

The diagnostics offer for Modicon M340, M580, M580S, Momentum, Premium, and Quantum platforms is based on the following three components:


- System diagnostics
- DFB and EFB diagnostic function blocks (for system and application diagnostics)
- Error message display system, called viewers, supplied as a standard component of Magelis terminal, Vijeo Citect supervisory software and EcoStruxure Control Expert setup software

System diagnostics


The system diagnostics for the Modicon M340, M580, M580S, Momentum, Premium, and Quantum platforms support the monitoring of system bits/words, I/O modules, and activity times (minimum/maximum) of SFC steps. By simply choosing the relevant option during application configuration, any event will generate time-stamped messages logged in the diagnostic buffer of the PAC.

These events are displayed automatically in a diagnostics viewer (1) without requiring any additional programming.

With EcoStruxure Control Expert integrated diagnostics, this function can be used to perform first-level diagnostics of the elements in the configuration, up to and including each I/O module channel.

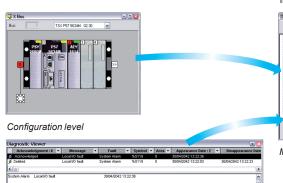

Viewer window (example with EcoStruxure Control Expert software)

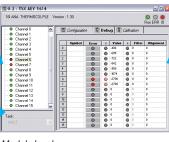

Module level



Channel leve

⁽¹⁾ Diagnostics viewers are tools for displaying and acknowledging diagnostic error messages. They are supplied as a standard component of EcoStruxure Control Expert and Vijeo Designer software, with Magelis terminals and with the PLC Web server that can be accessed via a thin client Magelis iPC.

EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety

Modifying the program with the PAC in RUN mode

With EcoStruxure Control Expert, changes can be made to the program when the PAC connected to the programming terminal is in RUN mode. These modifications are performed with the following operations:

- The application contained in the PAC is transferred to the PC terminal running EcoStruxure Control Expert, if necessary.
- Program changes are prepared. These program modifications can be of any type and in any language (IL, ST, LD, FBD, and SFC), for example, addition or deletion of SFC steps or actions. The code of a DFB user function block can also be modified (however, modification of its interface is not permitted).
- These program changes are updated in the PAC (in RUN mode).

This function makes it possible to add or modify program code and data in different parts of the application during a single modification session (thus resulting in a uniform, consistent modification with respect to the controlled process). This increased flexibility comes at a cost in terms of the amount of program memory

Cross-references function

The EcoStruxure Control Expert's cross-references function, which is available in standalone mode (offline) and when connected to the PAC in Run (online), allows users to view the elements of a PAC application when searching for any type of variable. This view indicates where the declared variable is used, as well as how it is used (for writing, reading, etc.).

This function also provides access to the Search/Replace function for variable

The variable search can be initialized from any editor (language, data, runtime screen, animation table, etc.).



Cross-references table

Data export shortcut menu

Import/export function

The import/export function available in EcoStruxure Control Expert supports the following operations from the structural and functional project views:

- Via the import function, reuse of all or part of a previously created project in the current project
- Via the export function, copying of all or part of the current project to a file for subsequent reuse

The files generated during export are generally in XML format (1). However, in addition to XML, variables can be exported and imported in the following formats:

- .xvm format compatible with OFS data server software
- source format, in an .scy file compatible with PL7 development software
- text format with separator (Tab) in a .txt file for compatibility with any other system

During an import, a wizard can be used to reassign data to new instances of:


- DFB function blocks
- DDT data structures
- simple data

In addition, when a functional module is imported, the data associated with animation tables and runtime screens is also reassigned.

The XML import function also supports the transfer of a Modicon M340, Modicon M580, Modicon M580 Safety, Premium, or Quantum PAC configuration prepared in the SIS Pro costing and configuration tool for use in the creation of a project in EcoStruxure Control Expert. This import function spares the user from having to redefine the PAC configuration when the PAC has already been configured with the SIS Pro tool.

EcoStruxure Control Expert includes an Excel import/export tool that makes it easy to manage the variables using an XML export file in Excel.

(1) XML language is an open, text-based language that provides structural and semantic information



Data import wizard

Schneider

EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety

Application converters

EcoStruxure Control Expert's integrated conversion tools can be used to convert applications created with ModSoft, ProWorX, Concept, and PL7 programming software to EcoStruxure Control Expert applications.

Concept/EcoStruxure Control Expert converter (Quantum and Momentum PACs)

This conversion is performed with a Concept application V2.5 or later (it can also be performed in V2.11 or later, but only after an update to V2.5). In order to perform the conversion, the application should be exported to an ASCII file in Concept. The export file is converted to a EcoStruxure Control Expert source file automatically. This file is then analyzed by EcoStruxure Control Expert. At the end of the procedure, a conversion report is generated and an output window displays any conversion detected error and provides direct access to the part of the program to be modified. The Concept application converter converts the application to EcoStruxure Control Expert, but does not guarantee that it will operate correctly in real time. It is therefore essential to test or debug all converted applications.

PL7/EcoStruxure Control Expert converter (Premium PAC and Atrium slot PAC)

This conversion is performed with a PL7 application V4 or later (Premium PAC or Atrium slot PAC). In order to perform the conversion, the source file (complete application or user function block) should be exported to PL7.

The conversion procedure is similar to that of the Concept conversion described above.

Note: Applications created with Concept, Modsoft and ProWORX can be converted to LL984. Please contact our Customer Care Center.

Unity M580 Application Converter (UMAC)

The conversion from Unity Quantum and Unity Premium applications to Unity M580 applications is performed with UMAC.

UMAC is a standalone software tool that can be installed on a Windows PC. The complete conversion process relies on the use of EcoStruxure Control Expert. UMAC is available in 2 sizes: Lite and Standard. UMAC Lite is free and downloadable from our website www.schneider-electric.com. UMAC Lite allows the existing configuration to be retained while UMAC Standard adapts the code to Modicon M580.

Operating system update utilities

The OS-Loader software is designed for updating operating systems on Premium and Quantum platforms. It is supplied with EcoStruxure Control Expert software. It is used to upgrade EcoStruxure Control Expert processors and modules as well as to upgrade PL7 or Concept processors and modules to make them compatible with EcoStruxure Control Expert.

OS-Loader software supports:

- Premium processors
- Quantum processors
- Ethernet communication modules
- EtherNet/IP communication modules

The operating system updates are performed as follows:

- Uni-Telway RS 485 terminal link for Premium processors
- Modbus or Modbus Plus terminal link for Quantum processors
- Ethernet TCP/IP network for integrated Ethernet port on Premium processors and Premium and Quantum Ethernet modules

Note: For Modicon M340, M580, and Momentum this service is provided by Unity Loader (see page 2/6).

Online modification of the configuration (CCOTF)


This function, also called Change Configuration On The Fly (CCOTF), is used to modify the Modicon M580 or Modicon Quantum configuration online (application in RUN mode):

- Addition or removal of discrete or analog I/O modules
- Modification of configuration parameters of discrete or analog I/O modules (already present or newly installed)

On Quantum, the CCOTF function is supported by standalone processors for the three types of I/O architecture (local, RIO, DIO) using version 5 of EcoStruxure Control Expert, and for Hot Standby processors using version 4.1 or higher of EcoStruxure Control Expert. The CCOTF function should first be validated in the EcoStruxure Control Expert configuration screen. A confirmation screen appears when the configuration has been modified online.




Unity M580 Application Converter tool

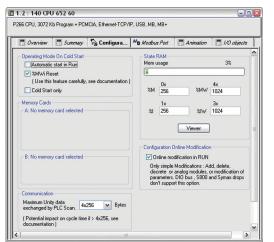

Configuration screen

EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety Programmable process control

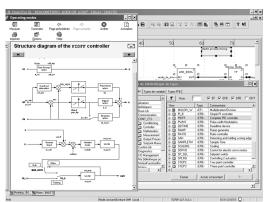

CONT_CTL, programmable process control integrated in EcoStruxure Control Expert

Process control in machines

EcoStruxure Control Expert contains **CONT_CTL**, a library of 36 function blocks used to create control loops for machine control.

The requirements for closed loop control functions in machines are adequately met by Modicon M340, Modicon M580, Modicon M580 Safety, Modicon Momentum, Premium, and Quantum platforms thanks to the wealth of functions in the library and the flexibility with which function blocks can be linked together through programming. This solution therefore avoids the need for external controllers and simplifies the overall control architecture of the machine, as well as its design, rollout, and operation.


The EFs or EFBs can be used in any of the EcoStruxure Control Expert languages (LD, ST, IL, and FBD). FBD is particularly suitable for accessing control processing operations in EcoStruxure Control Expert through its wizard for entering and viewing parameters and function block variables.

CONT_CTL library functions

The library consists of six function families:

- input data conditioning
- controllers
- mathematical functions
- process value processing
- output value processing
- setpoint management

Pure time delay
Integrator with limiting
First order time lag
Lead/lag function with smoothing
Lead function with smoothing
Mass flow calculation based on the measurement of differential pressure or flow speed with pressure and temperature compensation
Dead time term
Scaling
Integrator (typically of flow) until a limit (typically a volume) is reached, with automatic reset
Velocity limiter, with manipulated variable limiting
Basic PI controller: PI algorithm with a mixed structure (series/parallel)
Complete PID controller: PID algorithm with a parallel or mixed structure (series/parallel)
Automatic tuner setting for the PIDFF (complete PID) controller or the PI_B (simple PI) controller I dentification using Ziegler Nichols type method Modeling based on first-order process Building of control parameters with criterion for prioritizing either the reaction time to disturbance (dynamic) or the stability of the process
Model-based controller. The model is a first-order model with delay. This corrector is useful: When there are serious delays compared with the main time constant of the process; this scenario cannot be satisfactorily resolved by standard PID process control. For regulating a non-linear process IMC can handle any stable aperiodic process of any order.
Control of controller startup and sampling
Simple two-position controller
Three-position controller for temperature regulation
Comparison of two values, with dead zone and hysteresis
Square root, with weighting and threshold, useful for linearization
of flow measurements
Weighted multiplication/division of 3 numerical values

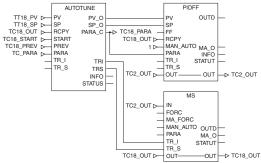

Presentation:

page 1/6

Example: PID controller with MS manual control

Selection guide:

page 1/2

References:

Process value processing

AVGMV


SP_SEL

EcoStruxure Control Expert

Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety Programmable process control

Process control in machines (continued)

CONT_CTL library functions (continued)

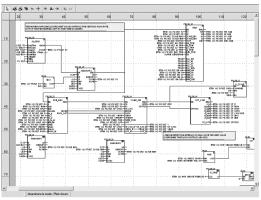

Programming in EcoStruxure Control Expert in offline mode

Moving average with fixed number of samples (50 max.) AVGMV_K Moving average with constant correction factor, 10,000 samples DEAD ZONE Dead zone LOOKUP TABLE1 Linearization of characteristic curves using first-order interpolation SAH Detection of a rising edge HYST_XXX Detection of high threshold with hysteresis (1) INDLIM_XXX Detection of high and low thresholds with hysteresis (1) Output value processing MS Manual control of an output MS_DB Manual control of an output with dead zone PWM1 Control via pulse width modulation **SERVO** Control for servo motors SPLRG Control of two Split Range actuators Setpoint management Ramp generator, with separate ascending and descending ramps RAMP RATIO Ratio controller

Setting up process control function blocks

Based on the sequencing of function blocks, the FBD language integrated in EcoStruxure Control Expert is a programming language particularly suitable for building control loops.

Designers can use FBD to easily associate blocks from the CONT CTL library with their own DFBs written in EcoStruxure Control Expert's ST, IL, or LD language, or in C language.

Selection of setpoint value: local (operator) or remote (processing)

Debugging, operation

All EcoStruxure Control Expert 's standard debugging services (see page 1/11) are available. In particular, the PLC simulator can be used to check correct execution of processing offline.

The CONT_CTL control function block library is available in all versions of EcoStruxure Control Expert. It is compatible with processors in the Modicon M340, Modicon M580, Modicon M580 Safety, Modicon Momentum, Premium, and Quantum ranges.

Optional specialized libraries


The CONT_CTL control function block library can be supplemented with optional specialized libraries, to meet specific needs such as predictive control, fuzzy logic controller, HVAC, and mass flow calculation (see page 2/8).

Resources

The technical documentation provides many examples of how to set up programmable process control function blocks in FBD, LD, IL, and ST languages.

The techniques for adjusting process control loops are described in the EcoStruxure Control Expert online help and also the document available in www.schneider-electric.com.

(1) XXX according to the type of variable: DINT, INT, UINT, UDINT, REAL.

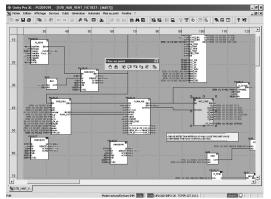

Programming in online mode

EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and M580 Safety

Communication drivers

The most commonly used communication drivers for Modicon M340, M580, M580S, Momentum, Premium, and Quantum platforms are installed at the same time as the EcoStruxure Control Expert software.

EcoStruxure Control Expert also includes the following drivers, which can be installed as required (1):

Protocol - Hardware	Windows® 7 32-bit and 64-bit editions	Windows® 10 32-bit and 64-bit editions
Fip adaptor - CUSBFIP		
Modbus Serial - COM port		
PCIway - Atrium TPCI57 PCI card		
Uni-Telway - COM port		
USB for high end PLC		
XIP - XWay on TCP/IP		



Upgrade kits for Concept, PL7 Pro, and ProWORX software

The Concept, PL7 Pro, and ProWORX upgrade kits allow users who already have one of these programs from the installed base, and who have a current subscription, to obtain EcoStruxure Control Expert version V4.1 software at a reduced price.

These upgrades are only available for licenses of the same type (e.g. from Concept XL group license to EcoStruxure Control Expert Extra Large group license).

EcoStruxure Control Expert update (2)

Customers are notified automatically when a new EcoStruxure Control Expert update becomes available. They can then access the software update manager directly, download the update, and install it locally on their workstation.



How-to Tutorials

The EcoStruxure Control Expert has a dedicated YouTube channel showcasing videos that help you easily navigate and work with the software. It includes videos on topics like configuration, installation, testing, software features, etc. To explore more, click on the following link:



(1) Also available separately under reference TLXCDDRV20M.

(2) EcoStruxure Control Expert requires .NET Framework 3.5 and .NET Framework 4.5.2. Note: The latest firmware versions can be downloaded from our website

Presentation: Selection guide: page 1/2 page 1/6

References:

EcoStruxure Control Expert

Small/Large/Extra Large/Extra Large with Topology Manager and Safety



EcoStruxure Control Expert

EcoStruxure Control Expert licenses and DVD package

Package and licenses can be ordered separately

A license is mandatory to run EcoStruxure Control Expert (after expiration of trial period), while a DVD package is optional: installation files can be downloaded from www.schneider-electric.com.

Licenses are delivered separately and are available in paper format or digital E-license format (delivered by email).

Unique package

The package is now unique for all sizes (Small, Large, Extra Large, Extra Large Safety, and Extra Large Topology Manager).

Licenses are available in different sizes:

- EcoStruxure Control Expert Small (see page 1/21)
- EcoStruxure Control Expert Large (see page 1/22)
- EcoStruxure Control Expert Extra Large (see page 1/23)
- EcoStruxure Control Expert Extra Large with Topology Manager and Safety (see page 1/24)
- EcoStruxure Control Expert Extra Large Topology Manager Add-on (see page 1/25)
- EcoStruxure Control Expert Large and Extra Large M580 Safety Add-on (see page 1/26)

New floating licenses are available

In addition to the usual licenses that are linked to the computer where EcoStruxure Control Expert is running (so-called node locked licenses), new floating licenses are also available.

EcoStruxure Control Expert with Topology Manager

Topology Manager is available as:

- An Add-on license that can be added to an XL license (see page 1/25)
- Directly with a bundle license (EcoStruxure Control Expert XL with Topology Manager and M580 Safety) (see page 1/24)

EcoStruxure Control Expert with M580 Safety

M580 Safety is available as:

- An Add-on license that can be added to an XL or L license (see page 1/26)
- Directly with a bundle license (EcoStruxure Control Expert XL with Topology Manager and M580 Safety) (see page 1/24)

Composition and Windows OS compatibility

EcoStruxure Control Expert multilingual software packages are compatible with Windows 10 (64-bit) and Windows Server 2019 operating systems.

The package comprises:

- EcoStruxure Control Expert V15 DVD in six languages (English, French, German, Italian, Spanish, and Chinese)
- Converters for converting applications created with Concept and PL7
- PLC simulator

Cables for connecting the processor to the programming PC need to be ordered separately.

EcoStruxure Control Expert package EcoStruxure Control Expert DVD package					
Description	Software size	Reference	Weight kg/lb		
EcoStruxure Control Expert DVD package	Small Large Extra Large Extra Large Safety Extra Large Topology Manager	CEXPACKAGEV15	_		



EcoStruxure Control Expert Small



EcoStruxure Control Expert

EcoStruxure Control Expert Small V15 software

For Modicon M340: All models For Modicon Momentum: 171CBU78090/98090/98091
For distributed I/O: Modicon ETB, TM7, OTB, STB, Momentum

EcoStruxure Control Expert Small software licenses (1) (2)						
Description	License type	Reference	Weight kg/lb			
EcoStruxure Control Expert	0 (CEXSPUCZSSPMZZ	_			
Small software Paper license	Group (3 stations)	CEXSPUCZSGPMZZ	_			
	Team (10 stations)	CEXSPUCZSTPMZZ	_			
EcoStruxure Control Expert Small software E-license	Single (1 station)	CEXSPUCZSSPAZZ	_			

License upgrades for E	coStruxure Control Exper	t Small	
From	То	Reference	Weight kg/lb
Paper license			
Single (1 station)	Group (3 stations)	CEXUPNCZSGPMZZ	_
Group (3 stations)	Team (10 stations)	CEXUPNCZSTPMZZ	_

⁽¹⁾ For compatibility of EcoStruxure Control Expert software/automation platforms and

distributed I/O, refer to the selection guide on page 1/2.

(2) Renewals for EcoStruxure Control Expert new versions are possible. Please contact our Customer Care Center for more information.

EcoStruxure Control Expert Large



EcoStruxure Control Expert

EcoStruxure Control Expert Large V15 software

For Modicon M340: All models

For Modicon M580: BMEH5820/BMEP5810/5820/5830

For Modicon Momentum: 171CBU78090/98090/98091 For Modicon Premium: TSX571e...4e For Modicon Quantum: 140CPU31110/43412U/53414U For distributed I/O: Modicon ETB, TM7, OTB, STB, Momentum

EcoStruxure Control Exp	oert Large software licen	ses (1) (2)	
Description	License type	Reference	Weight kg/lb
EcoStruxure Control Expert Large software Paper license		CEXSPUCZLSPMZZ	-
	Group (3 stations)	CEXSPUCZLGPMZZ	_
	Team (10 stations)	CEXSPUCZLTPMZZ	-
EcoStruxure Control Expert Large software E-license	Single (1 station)	CEXSPUCZLSPAZZ	_

License upgrades for EcoStruxure Control Expert Large			
From To Reference			
Paper license			
Single (1 station)	Group (3 stations)	CEXUPNCZLGPMZZ	-
Group (3 stations)	Team (10 stations)	CEXUPNCZLTPMZZ	_

Upgrade to EcoStruxure Control Expert La Expert Small	rge from EcoStruxure Conf	trol
Type of upgrade The number of stations is unchanged	Reference	Weight kg/ <i>lb</i>
Paper license		
Small to Large Single (1 station)	CEXUPGCZLSPMZZ	-
Small to Large Group (3 stations)	CEXUPGCZLGPMZZ	_
Small to Large Team (10 stations)	CEXUPGCZLTPMZZ	_

⁽¹⁾ For compatibility of EcoStruxure Control Expert software/automation platforms and distributed I/O, refer to the selection guide on page 1/2

⁽²⁾ Renewals for EcoStruxure Control Expert new versions are possible. Please contact our Customer Care Center for more information.

EcoStruxure Control Expert Extra Large



EcoStruxure Control Expert

EcoStruxure Control Expert Extra Large V15 software

For Modicon M340: All models

For Modicon M580: All models

For Modicon Momentum: 171CBU7809098090/98091
For Modicon Premium: TSX5716...66
For Modicon Quantum: 140CPU31110/43412U/53414U/65150/65160/65260/67160/67260/67261
For distributed I/O: Modicon ETB, TM7, OTB, STB, Momentum

EcoStruxure Control Exp	ert Extra Large softw	are licenses (1) (2)	
Description	License type	Reference	Weight kg/lb
EcoStruxure Control Expert Extra Large software Paper	Single (1 station)	CEXSPUCZXSPMZZ	-
license	Group (3 stations)	CEXSPUCZXGPMZZ	_
	Team (10 stations)	CEXSPUCZXTPMZZ	_
	Entity (100 stations)	CEXSPUCZXEPMZZ	_
EcoStruxure Control Expert Extra Large software E-license	Single (1 station)	CEXSPUCZXSPAZZ	

License upgrades fo	or EcoStruxure Control Ex	pert Extra Large	
From	То	Reference	Weight kg/lb
Paper license			
Single (1 station)	Group (3 stations)	CEXUPNCZXGPMZZ	_
Group (3 stations)	Team (10 stations)	CEXUPNCZXTPMZZ	_

Upgrade to EcoStruxure Control Expert Ext Control Expert Large	ra Large from EcoStruxure	•
Type of upgrade Number of stations is unchanged	Reference	Weight kg/lb
Paper license		
Large to Pro Extra Large Single (1 station)	CEXUPGCZXSPMZZ	_
Large to Pro Extra Large Group (3 stations)	CEXUPGCZXGPMZZ	
Large to Pro Extra Large Team (10 stations)	CEXUPGCZXTPMZZ	_

EcoStruxure Control Expert Extra Large Floating V15 software

EcoStruxure Contro	I Expert Extra Large Flo	ating software license	es (1) (2)
Description	License type	Reference	Weigl kg/

EcoStruxure Control Expert Extra Large Group Floating software licenses

		kg/ <i>lb</i>
Group (3 stations)	CEXSPUCZXGPTZZ	-
Team (10 stations)	CEXSPUCZXTPTZZ	_
Entity (100 stations)	CEXSPUCZXEPTZZ	

License upgrades for EcoStruxure Control Expert Extra Large Floating			g
From	То	Reference	Weight kg/ <i>lb</i>
Paper license			
Group Floating (3 stations)	Team Floating (10 stations)	CEXUPNCZXTPTZZ	_
Team Floating (10 stations)	Entity Floating (100 stations)	CEXUPNCZXEPTZZ	

Upgrade to EcoStruxure Control Expert Extra EcoStruxure Control Expert Extra Large	Large Floating from	
Type of upgrade Number of stations is unchanged	Reference	Weight kg/ <i>lb</i>
Paper license		
Extra Large Group to Group Floating	CEXUPGCZXGPTZZ	-
Extra Large Team to Team Floating	CEXUPGCZXTPTZZ	_
Extra Large Entity to Entity Floating	CEXUPGCZXEPTZZ	_

⁽¹⁾ For compatibility of EcoStruxure Control Expert software/automation platforms and distributed I/O, refer to EcoStruxure Control Expert Pro Extra Large in the selection guide on

⁽²⁾ Renewals for EcoStruxure Control Expert new versions are possible. Please contact our Customer Care Center for more information.

EcoStruxure Control Expert

Extra Large

Topology Manager and M580 Safety



EcoStruxure Control Expert

EcoStruxure Control Expert Extra Large V15 software with Topology Manager and M580 Safety

For Modicon M340: All models

For Modicon M580: All models

For Modicon M580 Safety: All models

For Modicon Momentum: 171CBU78090/98090/98091

For Modicon Premium: TSX571e...6e

For Modicon Quantum: 140CPU31110/43412U/53414U/65150/65160/65260/67160/67260/67261

For distributed I/O: Modicon ETB, TM7, OTB, STB, Momentum

EcoStruxure Control Expert Extra Large with Topology Manager and M580 Safety software licenses (1)				
Description	License type	Reference	Weight kg/lb	
EcoStruxure Control	Single (1 station)	CEXSPMCZXSPMZZ	_	
Expert Extra Large with Topology Manager and M580 Safety software	Group (3 stations)	CEXSPMCZXGPMZZ	-	
	Team (10 stations)	CEXSPMCZXTPMZZ	_	
Paper license	Entity (100 stations)	CEXSPMCZXEPMZZ	_	
EcoStruxure Control	Single (1 station)	CEXSPMCZXSPAZZ	_	
Expert Extra Large with Topology Manager and M580 Safety software E-license	Corporate e-license (unlimited stations)	CEXSPMFZXSPAZZ	_	

License upgrades for EcoStruxure Control Expert Extra Large with Topology Manager and M580 Safety (1)				
From	То	Reference	Weight kg/ <i>lb</i>	
Paper license				
Single (1 station)	Group (3 stations)	CEXUMNCZXGPMZZ	-	
Group (3 stations)	Team (10 stations)	CEXUMNCZXTPMZZ	-	
Team (10 stations)	Entity (100 stations)	CEXUMNCZXEPMZZ	_	
E-license				
Entity (100 stations)	Corporate e-license (unlimited stations)	CEXUMNFZXSPAZZ	-	

EcoStruxure Control Expert Extra Large Floating with Topology Manager and M580 Safety software licenses (1)				
Description	License type	Reference	Weight kg/lb	
EcoStruxure Control Expert Extra Large Floating with Topology Manager	Group Floating (3 stations)	CEXSPMCZXGPTZZ		
	Team Floating (10 stations)	CEXSPMCZXTPTZZ	_	
and M580 Safety software	Entity Floating (100 stations)	CEXSPMCZXEPTZZ		
Paper license	Education Entity Floating (100 stations)	CEXSPMEZXEPTZZ	-	
EcoStruxure Control	Group Floating (3 stations)	CEXSPMCZXGPBZZ	-	
Expert Extra Large Floating with Topology Manager and M580 Safety software E-license	Education Entity Floating (100 stations)	CEXSPMEZXEPBZZ	_	

License upgrades for EcoStruxure Control Expert Extra Large Floating with Topology Manager and M580 Safety (1)			
From To Reference			
Paper license			
Group (3 stations)	Team Floating (10 stations)	CEXUMNCZXTPTZZ	-
Team (10 stations)	Entity Floating (100 stations)	CEXUMNCZXEPTZZ	_

Upgrades to EcoStruxure Control Expert Extra Large Floating with Topology Manager and M580 Safety from EcoStruxure Control Expert Extra Large with Topology Manager and M580 Safety (1) From To Reference Weight

From	То	Reference	Weight kg/lb
Paper license			
Group (3 stations)	Group Floating (3 stations)	CEXUMFCZXGPTZZ	-
Team (10 stations)	Team Floating (10 stations)	CEXUMFCZXTPTZZ	_
Entity (100 stations)	Entity Floating (100 stations)	CEXUMFCZXEPTZZ	_

⁽¹⁾ Available Q1 2021.

EcoStruxure Control Expert Extra Large Topology Manager Add-on



EcoStruxure Control Expert

Topology Manager Add-on for EcoStruxure Control Expert Extra Large V15 software

For Modicon M340: All models

For Modicon M580: All models
For Modicon M580 Safety: All models
For Modicon Momentum: 171CBU78090/98090/98091

For Modicon Premium: TSX571•...6•
For Modicon Quantum: 140CPU31110/43412U/5341
4U/65150/65160/65260/67160/67260/67261
For distributed I/O: Modicon ETB, TM7, OTB, STB, Momentum

Topology Manager Add-on for EcoStruxure Control Expert Extra Large software license (1)			
Description	License type	Reference	Weight kg/ <i>lb</i>
Topology Manager Add-on	Single (1 station)	CEXADMCZZSPMZZ	-
for EcoStruxure Control Expert Extra Large software Paper license	Group (3 stations)	CEXADMCZZGPMZZ	_
	Team (10 stations)	CEXADMCZZTPMZZ	_
	Entity (100 stations)	CEXADMCZZEPMZZ	_
Topology Manager Add-on software licenses for EcoStruxure Control Expert Extra Large software E-license	Corporate (unlimited stations)	CEXADMFZZSPAZZ	_

Topology Manager Add-on for EcoStruxure Control Expert Extra Large Floating software license (1)				
Description	License type	Reference	Weight kg/lb	
Topology Manager Add-on	Group Float (3 stations)	CEXADMCZZGPTZZ	_	
for EcoStruxure Control Expert Extra Large Floating	Team Float (10 station)	CEXADMCZZTPTZZ	_	
software Paper license	Enttiy Float (100 stations)	CEXADMCZZEPTZZ	_	

(1) Available Q1 2021.

EcoStruxure Control Expert Large/Extra Large M580 Safety Add-on

EcoStruxure Control Expert

M580 Safety Add-on for EcoStruxure Control Expert Large/ **Extra Large V15 software**

For Modicon M580 Safety: All models

License use examples

EcoStruxure Control Expert Extra Large with M580 Safety can now be managed in different

- With an Add-on license that can be added to an XL or L license (see below on this page)
- Directly with a bundle license (EcoStruxure Control Expert XL with M580 Safety) (see below on this page)

To manage BMEP582040S or BMEH582040S Safety CPUs, the following licenses can be used:

■ CEXSPUCZL•PMZZ (EcoStruxure Control Expert Large) with CEXADSCZZ•PMZZ (M580 Safety Add-on for L or XL single)

To manage all Modicon M580 Safety CPU models, the following licenses can be used:

- CEXSPUCZX•PMZZ (EcoStruxure Control Expert Large) with CEXADSCZZ•PMZZ (M580 Safety Add-On for L or XL single)
- CEXSPMCZX•PMZZ (EcoStruxure Control Expert Large with Topology Manager and M580 Safety)

M580 Safety Add-on for EcoStruxure Control Expert Large/Extra Large Safety software license				
Description	License type	Reference	Weight kg/lb	
M580 Safety Add-on for EcoStruxure Control Expert	Single (1 station)	CEXADSCZZSPMZZ	-	
Large (L) or Extra Large (XL) software Paper license	Group (3 stations)	CEXADSCZZGPMZZ	_	
	Team (10 stations)	CEXADSCZZTPMZZ	_	
	Entity (100 stations)	CEXADSCZZEPMZZ	_	

M580 Safety Add-on for EcoStruxure Control Expert Extra Large Floating software license				
Description	License type	Reference	Weight kg/lb	
M580 Safety Add-on for EcoStruxure Control Expert	Group Floating (3 stations)	CEXADSCZZGPTZZ	-	
Extra Large (XL) Floating software Paper license	Team Floating (10 stations)	CEXADSCZZTPTZZ	_	
	Entity Floating (100 stations)	CEXADSCZZEPTZZ	_	

⁽¹⁾ For compatibility of EcoStruxure Control Expert software/automation platforms and distributed I/O, refer to EcoStruxure Control Expert Extra Large in the selection guide on

Schneider

⁽²⁾ Renewals for EcoStruxure Control Expert new versions are possible. Please contact our Customer Care Center for more information.

EcoStruxure Control Expert Small/Large/Extra Large/Extra Large with Topology Manager and Safety



Accessories for connecting to the PC programming terminal						
Description	Use			Reference	Weight	
	From processor port	To PC port	m/ft		kg/ <i>lb</i>	
PC terminal connection	USB mini B port BMXP341000/20•0/20•02	USB port	1.8/ 5.91	BMXXCAUSBH018	0.065/ <i>0.143</i>	
(PC to PAC)	BMEP58●●●		4.5/ 14.8	BMXXCAUSBH045	0.110/ <i>0.24</i> 3	
(1)	USB port Premium TSX575•/6• Quantum 140CPU6•1	USB port	3.3/ 10.8	UNYXCAUSB033	_	
	Modbus port, RJ45 connector Quantum 140CPU6•1	RJ 45 connector	3/ 9.84	110XCA28202	_	
PC terminal connection cables (PC SUB-D to Modicon STB I/O)	HE13 connector Modicon STB I/O network interface module (NIM)	RS-232D (2) (9-way SUB-D connector)	2/ 6.56	STBXCA4002	0.210/ 0.463	
USB/SUB-D adaptor (PC USB to Modicon STB I/O)	HE13 connector Modicon STB I/O network interface module (NIM) with STBXCA4002 cable (3)	USB port (3)	-	SR2CBL06	0.185/ <i>0.408</i>	

⁽¹⁾ The **490NTW00002** and **490NTW00002U** RJ45 ConneXium cables (2 m/6.56 ft) can be used to connect the PC to the SERVICE port of M580 CPUs or X80 drop. Please consult our Website www.schneider-electric.com.
(2) Use the SR2CBL06 cable for connection on a USB port (3).

Schneider Electric

⁽³⁾ Adapter equipped with a USB connector (PC side) and a 9-way SUB-D connector (STBXCA4002 cable side); requires the STBXCA4002 cable (9-way SUB-DIHE 13) for connection to the HE13 connector on the Modicon STB NIM.

2 - EcoStruxure Control Expert Companion software

E	coStruxure Automation Device Maintenance
	Presentation page 2/2
	References page 2/3
Ε	FB Toolkit software
	Presentation, setuppage 2/4
	References
U	nity DIF software
	Presentation, setuppage 2/6
	References
U	nity Loader software
	Presentationpage 2/8
	References
Ε	coStruxure Control Expert Specific libraries
	Presentation page 2/10
	References page 2/11

EcoStruxure Control Expert
EcoStruxure Automation Device Maintenance Firmware upgrade tool

Firmware upgrade tool



EcoStruxure Automation Device Maintenance

Presentation

EcoStruxure Automation Device Maintenance allows you to upgrade the firmware on multiple devices simultaneously. The devices can be discovered automatically or can be added manually if automatic device discovery is not supported or switched off in the device.

The supported device discovery methods are:

- Modbus function code 43 (Read Device Identification)
- DPWS (Device Profile for Web Services)


EcoStruxure Automation Device Maintenance supports the following features:

- Automatic device discovery
- Manual device identification
- Certificate management
- Firmware update for multiple devices simultaneously
- IP address management

Software graphic interface

The interface is easy to use and provides the following main views for different operations:


- Main device/loading: After initial start-up, EcoStruxure Automation Device Maintenance displays a view with the details of the devices known by the tool. It will also allow you to upgrade firmware on multiple devices.
- Add device: It is possible to add a new device as an unidentified device if the device cannot be discovered automatically by EcoStruxure Automation Device Maintenance because either the device does not support discovery, or the device discovery feature is switched off.
- **Data package**: The package repository displays the firmware packages available in the tool. Selecting a certain package from the list will display the related information of that package like category, product, release notes, and location.
- Configuring settings: The Settings page allows you to configure discovery mode, communication settings, package settings, logs, manage device certificates, and select the desired language.
- Error and Warning window: The display details of the detected errors can be displayed in a cumulative log window. The errors log provides the details to rectify the detected error related to the selected device.
- Project: The Project feature allows you to create a new EcoStruxure Automation Device Maintenance project, and open and save existing ones.

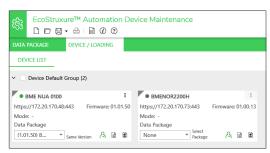

Thumbnail view of devices for easy handling



Data package

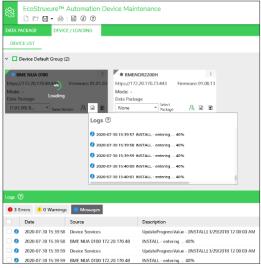

Performing firmware update on a device

Modicon M340 PAC and BMXRMS●●8MFP memory card only

The EcoStruxure Automation Device Maintenance tool can download the firmware (controller or module) onto a flash memory card (BMXRMS••8MFP only) plugged into the PAC CPU. This firmware download can then be used to update a remote Modicon M340 PAC.

In future versions, the project files will also be downloadable along with the firmware.

EcoStruxure Control Expert EcoStruxure Automation Device Maintenance -Firmware upgrade tool

PC-to-PAC Communication

EcoStruxure Automation Device Maintenance supports the following PC-to-PAC communication:

Modicon M340, M580, or Momentum Unity PACs or Modicon X80 I/O modules:
 Communication via Ethernet and USB ports, transfer of project components and firmware

Reference	Type of module	Ethernet port	USB port		
BMXP342000	M340 CPU with Modbus				
BMXP342010/20103	M340 CPU with CANopen				
BMXP342020	M340 CPU with integrated				
BMXP342030/20302	Ethernet port				
BMXNOE0100/0110	X80 Ethernet Modbus/TCP module				
BMXAMI/ART/AMO/AMM	X80 Analog I/O module				
BMXEHC0200/0800	X80 Counter module				
BMXMSP0200	X80 Motion control module				
BMEP58 10XX/20XX/30XX/40XX	M580 CPUs				
BMENOC03•1	M580 communication module				
171CBU78090	Momentum Unity CPU with integrated port				
171CBU98090/ 171CBU98091	Momentum Unity CPU with integrated port				
Supported Supported if CPU has integrated Ethernet port					

In future versions, the following communications will also be supported:

- Modicon Quantum EcoStruxure Control Expert PACs: Modbus communication, transfer of project components only
- Modicon Premium EcoStruxure Control Expert PACs: Unitelway communication, transfer of project components only

For Ethernet networks, EcoStruxure Automation Device Maintenance contains a network scanner that can be used to scan a range of network addresses. Once a recognized Modicon M340, M580, or Momentum Unity PAC has been selected, data transfer operations can be performed.

Cybersecurity

The following ports are used by the software:

- Modbus (via port 502)
- HTTP (via port 80)/HTTPs (via ports 443 and 8080)
- FTP (via ports 20, 21)
- DPWS (via port 3702)

References

EcoStruxure Automation Device Maintenance is a freeware and can be downloaded from our website www.schneider-electric.com, download section.

Description	Туре	Reference	Weight Kg/lb
EcoStruxure Automation Device Maintenance	Single license (1 station)	Software can be downloaded free of charge from our website www.schneider-electric.com	_

Presentation, setup


Software

EcoStruxure Control Expert EFB Toolkit software



FFR Toolkit

Unity ITD Toolkit - Family Sc. testfamily - Ifforb TISKTI © ES Year Curret Egyldy Carret Collect 19th © Carret Collect 19th EFE pand EFB log EFB header EFB source FAMILY THIS BY CONTROL OF THE CONTROL OF THE COLLECT IN THE COLL

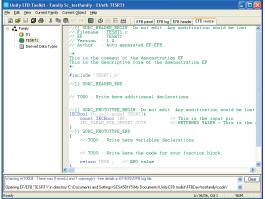

EFB Toolkit: Editor

Presentation

EFB Toolkit software helps to develop EFs and EFBs in "C" programming language. As an option with EcoStruxure Control Expert, it can be used to extend the standard EcoStruxure Control Expert function blocks in order to increase functionality. This software comes with *Microsoft Visual Studio*, which can be used to debug the function blocks developed in the EcoStruxure Control Expert PLC simulator. EFB Toolkit also includes a service for creating and managing families of function blocks and integrating them in EcoStruxure Control Expert.

Setup

EFB Toolkit manages the whole process of developing EcoStruxure Control Expert function blocks:

- User-friendly graphical user interface with automatic file organization
- Powerful tools for testing and debugging
- Management of compatibilities and software versions of created functions
- Generation of executable files for subsequent installation of functions on different EcoStruxure Control Expert stations

Managing function block families

EFB Toolkit helps to create and manage function block families. The function blocks developed, also known as EFs/EFBs, are stored in families. It makes it possible to create an organized library of functions written in "C" language. Once created, these function block families are installed on the EcoStruxure Control Expert stations for the purpose of extending the standard EcoStruxure Control Expert libraries. Integration in EcoStruxure Control Expert can be executed from EFB Toolkit or via the tool for updating EcoStruxure Control Expert libraries, which allows these families to be distributed without the use of any other software.

Developing function blocks

The EFB Toolkit software allows the user to create a function block as follows:

- Declaration of the function block interface in the same way as for the DFBs in EcoStruxure Control Expert
- Definition of all data types needed (elementary, structures, tables)
- Support of public and private variables
- Generation of all files and the block "C" coding frame (the user only adds functionality to this frame)
- Granting access to numerous internal PAC services, such as the real-time clock, PAC variables and data, system words and math functions, including highprecision numerical processing in "double" format
- Structure of the function block family (compilation/link for all EcoStruxure Control Expert automation platforms)
- Provision of a debugging environment: the function blocks created can easily be debugged in *Microsoft Visual Studio* by downloading a EcoStruxure Control Expert application containing the function developed in the EcoStruxure Control Expert PLC simulator. The debugging functions in *Microsoft Visual Studio*, especially breakpoints, step-by-step operations, display of the code/data and manipulation of the data, can be accessed without restriction.
- Support for managing EcoStruxure Control Expert versions, important during the function block maintenance phase

Compatibility

EFB Toolkit is compatible with EcoStruxure Control Expert, Large and Extra Large. EFs and EFBs can be developed for Modicon Premium, Quantum, M340, M580 and Unity Momentum platforms.

The latest available EFB Toolkit version is V14:

- OS compatibility Windows® 7 (32-bit and 64-bit), Windows® 10 (32-bit and 64-bit)
- Generated libraries can be installed on EcoStruxure Control Expert

EcoStruxure Control Expert EFB Toolkit software

References

EFB Toolkit and its documentation are supplied in electronic format on DVD-ROM in English and are available for download at www.schneider-electric.com.

EFB Toolkit package includes: ■ EFB Toolkit DVD

- GNU Compiler CD
- Microsoft Visual Studio DVD

Description	Туре	Language	Reference	Weight kg/lb
EFB Toolkit software	Single license (1 station)	English (software and electronic documentation)	UNYSPUZFUCD80	-

Presentation, setup


Software

EcoStruxure Control Expert Unity DIF software



Unity DIF

Selection of elements to compare

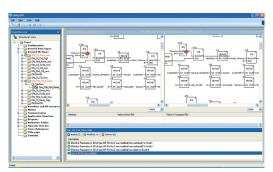

Displaying results

Presentation

Unity DIF software helps to compare two EcoStruxure Control Expert application files and represents differences in a graphical format similar to EcoStruxure Control Expert graphics for consistency and better understanding. The differences are displayed graphically and textually based on the type of section chosen. Unity DIF improves productivity during the main life stages of a control system, mainly during development and debugging of applications and commissioning, operation and maintenance of the installation.

Setup

Unity DIF compares two EcoStruxure Control Expert application files (XEF, ZEF, STU and STA) and detects anything ADDED, DELETED and MODIFIED. The user interface and graphical representation of differences are similar to EcoStruxure Control Expert for consistency and ease of understanding the differences.

Unity DIF can be launched in several ways:

- From EcoStruxure Control Expert
- From the Windows Start menu
- From a command line interface

Unity DIF can provide differences for the following sections:

- PAC Configuration (Hardware and Network)
- Derived Data Types
- Derived FB Types
- Variables and FB Instance
- Motion
- Communication
- Programs
- Animation Table
- Operator Screen
- DTM Catalog
- Project Settings

The result of the comparison can be printed or saved in .pdf and .txt file formats.

Windows® OS Compatibility

Unity DIF is compatible with Windows 7 (32-bit and 64-bit), Windows 10 (32-bit and 64-bit) and Windows Server 2008 R2 (64-bit).

Comparison (1)

The base and compare files have to be selected by the user, and the results of the comparison will be displayed with respect to the base file as reference.

Before initiating comparison, the user can select his preference of required section for comparison.

Displaying results

Upon comparison, the section summary will be loaded with the complete list of differences. The user can navigate through the project browser window or using the F7 and F8 keys.

The differences will be highlighted in three different colors signifying Added, Deleted or Modified types. Colors can be customized as per the user's preference. The detailed report can be generated through Print or can be Saved for later reference.

Unity DIF also supports command line processing and .txt report generation for interfacing with Partner software.

(1) Comparison of STU and STA requires EcoStruxure Control Expert to be available.

EcoStruxure Control Expert Unity DIF software

References

Unity DIF software is free and downloadable from our website: www.schneider-electric.com.

Compatibility: From Unity Pro V2.1 to EcoStruxure Control Expert V15 or later.

Description	Language	Туре	Reference	Weight kg/lb
Unity DIF software	English (software and electronic documentation)	Single license (1 station)	UNYDFFXZZSPA80 (1)	-

⁽¹⁾ Available on our website www.schneider-electric.com.

EcoStruxure Control Expert Unity Loader software



Unity Loader

Peter | Finance | Options | About | PET Project | PET Proj

Unity Loader: Project tab

Subject Connection. | Connection | Media | PLC | Plant | Plant

Unity Loader: Firmware tab

Presentation

Unity Loader is companion software to EcoStruxure Control Expert and is used to perform maintenance operations on automation applications. Its easy setup and the small size of its executable make it a vital tool for updating EcoStruxure Control Expert projects without needing to use EcoStruxure Control Expert. It can also be used for updating the embedded software on Modicon M340, M580, M580S or Momentum Unity PACs or on Modicon X80 I/O modules. It performs the following main functions:

- Transferring automation project components, such as the program and data, from the PC to the PAC or the PAC to the PC
- Transferring files and user Web pages stored in the memory card of Modicon M340 PACs
- Transferring the firmware from the PC to Modicon M340, M580, M580S or Momentum Unity PACs or to Modicon X80 I/O modules

Software graphic interface

The interface is easy to use and has four tabs for access to different operations:

- The "Project" tab manages the transfer of projects (program and data) between the PC and the PAC CPU. The software transfers the program (application file format: .stu; archive file format: .sta) and data (located and unlocated; data file format: .dat) of a EcoStruxure Control Expert project in both directions. The program and data files created by Unity Loader are compatible with EcoStruxure Control Expert. When it is connected to the PAC, Unity Loader displays the information associated with the data read in the PAC. This information is displayed on the PC for the selected files. The user decides which project elements will be transferred by a single command after validation of the required transfers.
 - □ Modicon M340 PACs and BMXRMS••8MFP memory card only: the files and user Web pages can be transferred from the memory card to the PC and vice versa.
 - □ *BMXNOE0110* with flash memory card only: Web pages stored in the flash memory can be transferred from the module to the PC and vice versa.
- The "Firmware" tab can be used to update the firmware in the Modicon M340, M580, M580S or Momentum Unity PACs or on Modicon X80 I/O modules. The screen displays the detailed content of the firmware versions existing in the module and on the PC. Firmware updating works in the same way as project transfers.
- The "Options" tabs is used to configure the working environment, especially the location of files on the PC and the selection of one of the six languages supported (English, French, German, Italian, Spanish and Chinese) for the user interface and online help.
- The "About..." tab displays information about the software.

Note: Regardless of which tab is selected, the connection status with the PAC is continuously displayed, together with commands for connection/disconnection and changing the PAC operating mode.

Modicon M340 PAC and BMXRMS●●8MFP memory card only

The Unity Loader software can download the project files and the firmware (controller or module) onto a flash memory card (BMXRMS••8MFP only) plugged into the PAC CPU.

This firmware download can then be used to update a remote Modicon M340 PAC.

Automation of Unity Loader commands

Projects can be downloaded/uploaded between a PAC and a supervisory station equipped with Unity Loader software by means of a command file included in the supervisory application.

EcoStruxure Control Expert Unity Loader software

Communication between the PC and the PAC

Unity Loader supports the following PC-to-PAC communication:

- Modicon Quantum EcoStruxure Control Expert PACs: Modbus communication, transfer of project components only
- Modicon Premium EcoStruxure Control Expert PACs: Unitelway communication, transfer of project components only
- Modicon M340, M580 or Momentum Unity PACs or Modicon X80 I/O modules: communication via Ethernet and USB ports, transfer of project components and firmware. See the table below:

Reference	Type of module	Ethernet port	USB port	
BMXP342000	M340 CPU with Modbus			
BMXP342010/20103	M340 CPU with CANopen			
BMXP342020	M340 CPU with integrated			
BMXP342030/20302	Ethernet port			
BMXNOE0100/0110	X80 module Ethernet Modbus/TCP			
BMXAMI/ART/AMO/AMM	X80 module Analog I/O			
BMXEHC0200/0800	X80 module Counter			
BMXMSP0200	X80 module Motion control			
BMEP58 10XX/20XX/30XX/40XX	M580 CPUs			
BMENOC03e1	M580 communication module			
171CBU78090	Momentum Unity CPU with integrated port			
171CBU98090/ 171CBU98091	Momentum Unity CPU with integrated port			
Supported Supported if CPU has integrated Ethernet port				

For Ethernet networks, Unity Loader contains a network scanner which can be used to scan a range of network addresses. Once a recognized Modicon M340, M580 or Momentum Unity PAC has been selected, data transfer operations can be performed.

References

Unity Loader can be downloaded free of charge from our website www.schneider-electric.com, download section.

Compatibility

Unity Loader is independent of EcoStruxure Control Expert and compatible with Modicon M340, M580 or Momentum Unity PACs, EcoStruxure Control Expert Quantum PACs via Modbus and EcoStruxure Control Expert Premium PAC via Unitelway. The program files and PAC data files are compatible between EcoStruxure Control Expert and Unity Loader.

Description	Туре	Reference	Weight kg/lb
Unity Loader software	Single license (1 station)	Software can be downloaded free of charge from our website www.schneider-electric.com	-

Note: In future, all the Unity Loader software features will be replaced by EcoStruxure Automation Device Maintenance.

EcoStruxure Control Expert Specific libraries



EcoStruxure Control Expert specific Libraries

Presentation

The CONT_CTL process control function block library supplied with EcoStruxure Control Expert software can be supplemented with optional specialized libraries so as to meet specific needs such as:

- Predictive control
- Fuzzy logic controller
- HVAĆ
- Mass flow calculation

GPL (General Purpose Library) for EcoStruxure Control Expert

General Purpose Library for EcoStruxure Control Expert provide the core automation and device integration function blocks for your automation system. It offers function blocks that are derived from GPL Library for Wonderware System Platform or GPL Library for Vijeo Citect but only with Control Expert components (Function Blocks, DFBs).

The GPL Library supports several Schneider Electric devices including TeSys T and TeSys U starters-controllers, Modicon STB distributed inputs/outputs, power meters, Altivar variable speed drives, Icla and Lexium integrated drives, SEPAM digital protection relays, various fieldbus communications and other standard objects for motors.

There are approximately 100 objects in the library. The GPL Library for EcoStruxure Control Expert is available for free on Schneider Electric Exchange platform.

Additional libraries

Fuzzy Control Library

This library is used in particular in the water treatment field, for example for controlling chlorine levels in fresh water pools or controlling water levels in high-level reservoirs.

Flow Calculation Library

This library is used in the vertical Oil & Gas field, for measuring the gas flow in compliance with the *American Gas Association (AGA)* standard. This version of the library includes the AGA3, AGA7 and AGA8 function blocks.

TeSys Library

This library provides function blocks for TeSys T and TeSys U starter-controllers for M340 and Premium platforms.

It includes function blocks and a help function for EcoStruxure Control Expert.

PCR Library for EcoStruxure Control Expert and Concept

This library is used for predictive control of process applications. Originally developed for reactors, predictive control can be used in other industrial sectors.

Schneider Electric's *Companion Unity & Libraries* team works in partnership with the French company *Sherpa Engineering*, who specialize in predictive control consultancy services.

Heating Ventilation & Air Conditioning Library

This library is used in the HVAC field and deals with repetitive temperature control and humidity problems using ventilation equipment.



EcoStruxure Control Expert Specific libraries

Specific libraries depending on the software used

Specific libraries depending on the software used (see below) can be ordered separately.

Control libraries				
Description	Target software	Туре	Reference	Weight kg/lb
PCR Library	EcoStruxure Control Expert and Concept	Single license (1 station)	UNYLPCZAUWB	_
Fuzzy Control Library	EcoStruxure Control Expert	Single license (1 station)	UNYLFZZAUWB12	-
TeSys Library	_		UNYLTSZAUWB10	-
Heating Ventilation & Air Conditioning Library			UNYLHVZAUWB10	
Flow Calculation Library			UNYLAGZAUWB20	_
GPL (General Purpose Library) Version 2018	_	(1)	(1)	

⁽¹⁾ PSx GPL Library is available for free.

3 - EcoStruxure OPC UA Server Expert

E	coStruxure OPC UA Server Expert		
	Presentation	page 3	3/
	Supported devices and protocols	page 3	3/
	Redundant communications	page 3	3/
	Use cases	page 3	3/
	Supported architectures	page 3	3/
	Local access	page 3	3/
	Remote access from an OPC UA client	page 3	3/
	Setup	page 3	3/
	System requirements	page 3	3/
	References	nage '	3,

EcoStruxure OPC UA Server Expert



EcoStruxure OPC UA Server Expert



Presentation

EcoStruxure OPC UA Server Expert is a state of the art Schneider Electric communications software platform. It seamlessly links our process automation edge controllers and connected field devices to your information systems and the Industrial Internet of Things (IIoT). The connections are established via the OPC Foundation's Open Platform Communications conforming to the Unified Architecture (OPC UA) service-oriented architecture standard.

The OPC UA standard defines a modern, open communications architecture for industrial communications that enhances cybersecurity and that is scalable from resource constrained sensors through to cloud enterprise systems. OPC UA extends the traditional industrial communications model with a full Service Orientated Architecture (SOA) to publish and manage device metadata, and context, thus helping to eliminate repetition, to simplify system configuration and to reduce maintenance overhead.

Building on the field-proven device integration layer of OPC Factory Server (OFS), EcoStruxure OPC UA Server Expert updates legacy 'OPC Classic' communications provided by OFS with scalable OPC UA connectivity. It helps to maintain more robust and secure integration with current and legacy Schneider Electric third-party field devices.

With the V2.0 release, OPC UA Server Expert provides the following features:

- Compliance with OPC UAV1.03 'Standard Server' profile
- IP-routable, bandwidth-efficient connectivity that helps to ensure communications security
- Compatibility with modern communications infrastructure
- Certificate-based authentication and encryption helping to ensure more robust end-to-end cybersecurity
- Metadata model support to define and communicate data structure, meaning, and context
- Highly-available redundant architectures with auto change over
- Flexible 'many-to-many' device to OPC UA client connectivity
- Online real-time update capabilities
- Support for Modicon located and unlocated symbols
- Assistance in maintaining read-only access to Modicon M580 Safety ePAC symbols

Supported devices and protocols

EcoStruxure OPC UA Server Expert is a multi-device data server, allowing simultaneous use of several communication protocols to multiple field devices. It delivers a range of services to OPC UA clients for communicating with current and legacy field devices and assets via physical address or symbol, while providing support for doing so in a more secure and robust manner.

Supported devices:

- Schneider Electric Process Automation Controllers
- □ M340 PAC
- □ M580 ePAC
- Generic Modbus/TCP devices via Ethernet connection

Supported networks and protocols:

- OPC UA binary configurations (based on OPC UA V1.03 standard) enhancing cybersecurity as defined below:
- □ None
- $\hfill\Box$ Signed with OPC UA frames
- ☐ Signed and encrypted with OPC UA frames
- Modbus/TCP

Redundant communications

OPC UA Server Expert incorporates native support for a redundant link with Modicon M580 ePAC to increase system availability without impacting the configuration or operational performance upstream OPC UA clients such as SCADA. In the case of a communications interruption, OPC UA Server Expert automatically changes over from the primary to the standby communication path without interrupting upstream OPC UA communications.

References:

Architectures: Setup: Functions: page 3/3 page 3/4 page 3/5

EcoStruxure OPC UA Server Expert

Use cases

The inclusion of OPC UA technology within OPC UA Server Expert enables a modern, open approach to industrial device data connectivity, benefiting two different types of user requirements:

■ Operational users who wish to directly monitor and control field equipment via supervisory control (SCADA) or human/machine interface applications to manage the real-time operation of industrial processes.

These users can take advantage of the high performance and the support delivered by OPC UA Server Expert in providing a more robust and more secure communications platform.

■ Analysts or asset owners wishing to consolidate and analyze device and process data to drive performance insight and directed improvement through advanced business intelligence and machine learning techniques.

These users can take advantage of the interoperable open standards, flexibility, metamodel capability and simplified SOA integration provided by OPC UA Server Expert.


Supported architectures

EcoStruxure OPC UA Server Expert supports:

- Local or remote access via OPC UA
- Standalone or redundant server operation

Local access


The client application and the EcoStruxure OPC UA Server Expert are on the same PC.

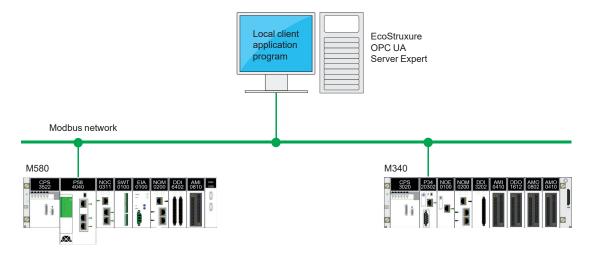


Remote access from an OPC UA client

The client application and the EcoStruxure OPC UA Server Expert are on remote stations.

Communication between the client station and the EcoStruxure OPC UA Server Expert is conducted via the OPC UA protocol.

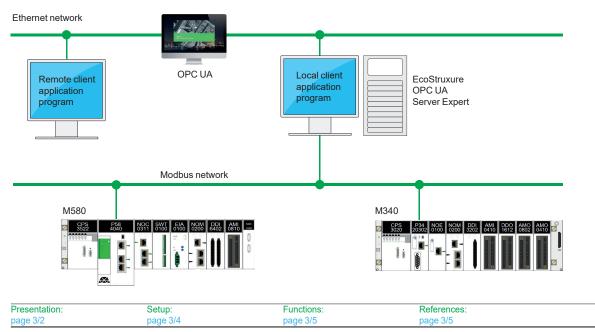

EcoStruxure OPC UA Server Expert

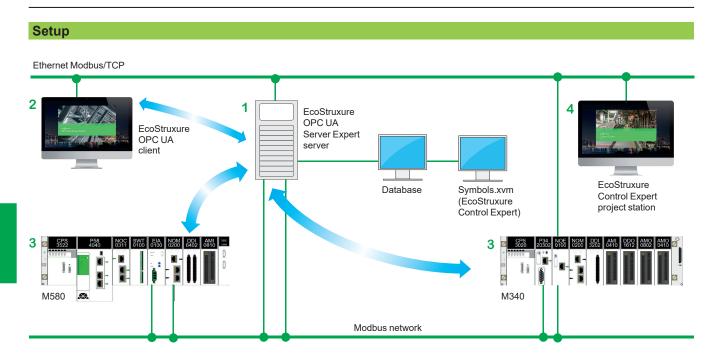

The EcoStruxure OPC UA Server Expert server 1 is at the center of the data exchanges. It makes variables exchanged between the EcoStruxure OPC UA client 2 and the PAC 3 consistent in one of the ways described below using a symbol (or variables) database:

■ The variables database is the PAC itself.

In this case, EcoStruxure Control Expert is not needed. This does not apply to the Momentum PAC. If an inconsistency is detected (following online modification of the PAC program for example), the EcoStruxure OPC UA Server Expert server station resynchronizes itself automatically as a background task, without breaking communication between the PAC and the OPC UA client.

For this function, the following minimum versions are required:

- □ EcoStruxure OPC UA Server Expert V2.0
- □ EcoStruxure Control Expert V14
- □ Modicon M340 V2.3, M580 V1.0
- The accessible variables are eventually provided by an export file (XVM format) generated by ExoStruxure Control Expert.

In this case, EcoStruxure Control Expert is not required to be installed on the EcoStruxure OPC UA Server Expert server station.

Functions, references

Software

EcoStruxure OPC UA Server Expert



EcoStruxure OPC UA Server Expert

System requirements

EcoStruxure OPC UA Server Expert V2.0 is compliant with following platforms:

- Microsoft Windows® 7
- Microsoft Windows 10
- Microsoft Windows Server® 2012 R2 (1)
- Microsoft Windows Server 2016 (1)

32-bit and 64-bit platforms are supported, with a minimum of 4GB RAM required. Multicore/multiprocessor architectures are highly recommended for optimal runtime performance.

Unity Pro V13, EcoStruxure Control Expert V14 or higher is recommended.

References

The EcoStruxure OPC UA Server Expert V2.0 offer comprises:

- OPC UA server software
- OPC UA server simulator
- OPC UA server configuration software
- An example OPC UA client
- Setup documentation

EcoStruxure OPC UA Server Expert interfaces with variable export files generated by EcoStruxure Control Expert software. It also provides a direct dynamic link to EcoStruxure Control Expert applications.

EcoStruxure OPC UA Server Expert V2.0 software supports an unlimited number of UAP UA symbols (2) within the performance constraints of the hosting server and operating system, and is licenced as single server, 10-server and 100-server site licenses.

	EcoStruxure OPC	UA Server Expert V2.0				
	Description	License type	Reference	Weight kg/lb		
OPC UA Server Expert V2.0		1 server	OFSUASCZZSPMZZ	-		
		10 servers	OFSUASCZZTPMZZ	_		
		100 servers	OFSUASCZZEPMZZ	_		

- (1) Windows Server Remote Desktop Services feature is not supported.
- (2) "symbol": variable, structure, table, etc. in the EcoStruxure Control Expert application.

4 - OPC data server software: OFS (OPC Factory Server), Time stamping system

OPC data server software

	OPC Factory Server	
	Presentation	page 4/2
	Supported devices and protocols	page 4/2
	Redundant link on Modbus/TCP	page 4/2
	Openness	page 4/2
	Supported architectures	page 4/3
	Setup	page 4/5
	Functions	page 4/6
	References	page 4/7
	Time stamping system	
	Presentation	page 4/8
	Advantages	page 4/8
	Composition of a time stamping architecture	page 4/8
П	Performance	nage 4/0

OPC data server software OFS (OPC Factory Server)





Presentation

Based on the OLE for Process Control (OPC) standard, Schneider Electric's OPC Factory Server (OFS) software allows "client" software applications, such as supervisors/SCADA and customized interfaces, to access the data of Schneider Electric automation system and electrical distribution devices connected to networks or fieldbuses in real time.

It also allows communication with third-party devices supporting Modbus and Modbus/TCP protocols.

OFS enables simpler, more open and transparent communication between your software applications and your devices. These are just some of the advantages that result in a complete interoperability solution that is central to your process.

In version V3.6, the OFS provides the following additional features:

- OPC DA (OPC Data Access)
- .NET API interface
- Native support for a redundant link with the PAC
- Access to time-stamped variables in the PAC or X80 drops
- V3.6 is compatible with Wonderware WSP environment (OPC DA compatible only). More details are available on the Wonderware Global Customer Support site

There are two versions of the OFS V3.6 offer supporting the OPC DA protocol:

- OFS Small: Data server for 1,000 items (1).
- OFS Large: Data server with an unlimited number of items (1).

Supported devices and protocols

OFS software is a multi-device data server: it allows simultaneous use of several communication protocols, and it provides client applications with a set of services for accessing control system items that may be local or remote, via physical address or via symbol.

Supported devices:

- Modicon Quantum, Premium, M340, M580, Micro, Compact and Momentum PACs
- Schneider Electric TSX Series 7 and April Series 1000 PACs
- Modbus serial devices connected via Schneider Electric gateways: TSXETG10.

 EGX.

 EGX.
- Uni-Telway serial devices connected via Schneider Electric gateways (TSXETG1010)

Supported networks and protocols:

- Modbus: Modbus serial, Modbus Plus, Modbus/TCP
- X-Way/Uni-TE: Uni-Telway, Fipway, ISAway, PCIway

Redundant link on Modbus/TCP

The OFS V3.6 incorporates native support for a redundant link with the PAC in order to optimize system availability without any impact on the SCADA application. OFS automatically changes over from the primary to the standby communication path in case of a communication fault.

Openness

The development of specialized interfaces is simpler with OFS V3.6 software, which is aimed at two types of user in particular:

- End users who want either to interface their supervision or human/machine interface applications with Schneider Electric equipment, or to develop applications on a PC (supervisory control screens, Excel spreadsheets etc.) requiring access to control system data.
- Suppliers of control system or industrial data processing software (supervision, human/machine interfaces, etc.) seeking to develop, within their standard products, an OPC Client interface capable of accessing data in Schneider Electric equipment via the OFS server.

(1) "item": variable, structure, table etc. in the Unity Pro application.

 Architectures:
 Setup:
 Functions:
 References:
 Time stamping system:

 page 4/3
 page 4/5
 page 4/6
 page 4/7
 page 4/8

OPC data server software OFS (OPC Factory Server)



OPC Factory Server: Home page


Supported architectures

The OFS server allows four access modes:

- A purely local mode
- Remote access from an OPC DA client
- Remote access from an OPC.NET client


Local access

The client application and the OFS server are on the same PC.

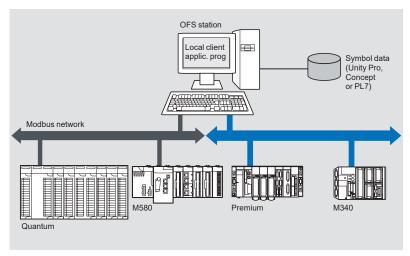

Remote access from an OPC DA client

The client application and the OFS data server are on remote stations. Communication between the client station and the OFS server is conducted through the DCOM layer (Microsoft) via the OPC DA protocol.

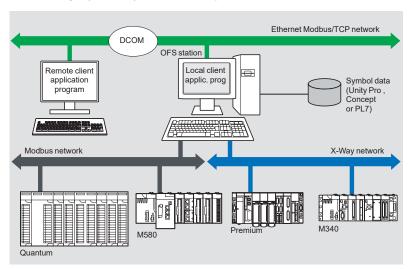


OPC data server software OFS (OPC Factory Server)

Supported architectures (continued)

Remote access from an OPC .NET client

The .NET client application program and the OFS data server are on remote stations. Communication between the client station and the OFS server is conducted through the DCOM layer (Microsoft) via the OPC DA protocol.

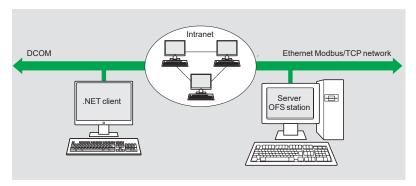


The .NET Microsoft compatibility of the OFS server has been developed to allow an OPC .NET client to access OFS server items on an Intranet network via the OPC .NET API interface.

This interface provides interoperability between existing OPC applications and applications developed in the standard .NET environment.

OPC data server software OFS (OPC Factory Server)

Setup

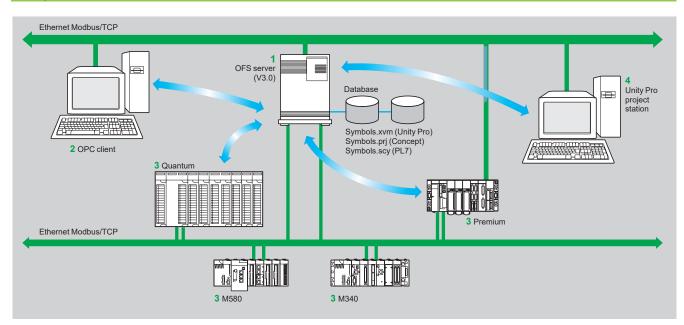

The OFS server 1 is at the center of the data exchanges. It makes variables exchanged between the OPC client 2 and the PAC 3 consistent in one of three ways, using a symbol (or variables) database:

- The variables database is either the Unity Pro project 4, or the Concept project. In both these cases, Unity Pro or Concept needs to be installed on the OFS server station.
- Or the variables database is an export file (SCY for PL7, XVM for Unity Pro). PL7 and Unity Pro are not required in either of these cases.
- Or the variables database is the PAC itself. In this case neither Unity Pro nor an export file is needed. This does not apply to Momentum and TSX Micro PACs. If an inconsistency is detected (following online modification of the PAC program for example), OFS resynchronizes itself automatically as a background task, without breaking communication between the PAC and the OPC client.

For this function the following minimum versions are required:

- □ OFS V3.35
- □ Unity Pro V6.0
- ☐ Modicon M340 V2.3, M580 V1.0, Premium V2.9 and Quantum V3.0 PACs

Presentation:Architectures:Functions:References:Time-stamping system:page 4/2page 4/3page 4/6page 4/7page 4/8

OPC data server software OFS (OPC Factory Server)

Functions

Development of client applications

OFS software has 4 types of interface:

■ OLE Automation interface (OPC DA)

Particularly suitable for end users, this enables the development of OPC client applications in Visual Basic, in Visual Basic for Excel, and in C++.

■ OLE Custom interface (OPC DA)

Used primarily by suppliers of automated control system or industrial IT products, this interface enables the development of applications in C++ in order to access the OFS software OPC server. It is aimed at software development experts in particular, so that they can integrate the client application into their standard products. It is the interface with the highest performance, in terms of access time to data stored in the OPC server. It requires extensive knowledge of C++ programming to set up.

■ OPC .NET API wrapper interface

The .NET Microsoft compatibility of the OFS data server gives an OPC .NET client standard access to OFS server items via an Intranet network, thus providing greater interoperability with standard .NET environments.

Note: In this case, communication between the OPC .NET client and the OFS server is conducted through the DCOM layer (or COM layer in a local configuration) via the OPC DA protocol.

Presentation: Architectures: Setup: References: Time-stamping system: page 4/2 page 4/3 page 4/5 page 4/7 page 4/8

OPC data server software OFS (OPC Factory Server)



References

OFS V3.6 software for PC compatible stations (minimum configuration: Pentium 566 MHz processor, 128 MB of RAM) running Windows® 7 (32-bit or 64-bit) or Windows 8 (32-bit or 64-bit).

The OFS V3.6 offer comprises:

- OPC server software
- OPC server simulator (for debugging the application when no PACs are present)
- OFS server configuration software
- An example of OPC client for setting up applications
- The setup documentation on DVD-ROM
- A reference document on "time stamping system" solutions
- A tool to help with sizing and configuring "time stamping system" solutions

Supplied on DVD-ROM, the software operates independently on a PC. It interfaces with the variable export files generated by PL7, ProWORX, Concept, and Unity Pro software.

It also provides a direct dynamic link to the Unity Pro and Concept applications.

OFS V3.6 software is available in two versions:

- Small Version TLXCDS•OFS36
- ☐ Maximum of 1,000 items (1)
- □ Protocol supported: OPC DA
- ☐ Single station and 10-station site licenses
- Large Version TLXCDLeOFS36
- □ Unlimited number of items (1)
- □ Protocol supported: OPC DA

V3.6 Large software

items (1)

■ Unlimited number of

■ Protocols supported:

Server V3.6 Large

☐ Single station, 10-station and 200-station site licenses

OPC Factory Server V3.6 Small			
Description	License type	Reference	Weight kg/lb
OPC Factory Server	Single station	TLXCDSUOFS36	_
V3.6 Small software ■ Maximum of 1000 items (1) ■ Protocols supported: OPC DA and OPC UA	10 stations	TLXCDSTOFS36	-
OPC Factory Serve	r V3.6 Large		
Description	License type	Reference	Weight kg/lb
OPC Factory Server	Single station	TLXCDLUOFS36	_

TLXCDLTOFS36

TLXCDLFOFS36

OPC DA, OPC XML-DA and OPC UA		
OPC Factory Server V3.6 upgrades		
Description	Reference	Weight kg/lb
Update for OPC Factory Server V3.6 Small	TLXCDUPDSOFS	_
Undate for OPC Factory	TI YONUPDI OES	

(1) "item": variable, structure, table etc. in the Unity Pro application.

10 stations

200 stations

OPC data server software

Time stamping system

Presentation

The time stamping system is a complete solution providing a SCADA with a sequence of events that are time-stamped at source, enabling the user to analyze the source of any abnormal behavior in an automated system.

The SOE (sequence of events) is displayed in the alarm log or in the list of events for a client such as a SCADA.

Each event in the SOE is a change of value (transition) of a discrete I/O detected by a time stamping module.

Advantages

Using the time stamping system has the following advantages:

- No PAC programming
- Direct communication between the time stamping modules and the client. If the time stamping modules are in an Ethernet I/O drop, the bandwidth of the PAC communication is not used
- Consistency of the I/O values between the process (time stamping modules) and the client
- Consistency is maintained irrespective of the operating mode
- Management of Hot Standby configurations on the PAC and/or SCADA redundancy

Composition of a time stamping architecture

BMXCRA31210 and BMECRA31210 modules

This time stamping module can be at the source of any discrete I/O signal located in the drop with a resolution of 10 ms.

To avoid losing any events, all events are stored and kept in a buffer located in the product until OFS takes them.

Synchronization of the CRA module uses the NTP protocol.

BMXERT1604T module

This module has 16 discrete inputs which carry out the time stamping on source outputs with a resolution of 1 ms.

To avoid losing any events, the events are stored and kept in a buffer located in the product until OFS takes them.

This module can be placed either in an RIO drop, or in a local rack equipped with a BM●CRA31210 module.

The CRA module is synchronized via the DCF 77 or IRIG-B standards.

OFS V3.6

OFS V3.6 is used to access events stored in the various buffers in the architecture and to notify the SCADA of them via the standard OPC DA protocol.

Time stamped variables can be provided by the BMXERT1604T, discrete modules plugged into X80 drops, or even by the CPU since Unity V10.

Vijeo Citect V7.3


Vijeo Citect V7.3 receives events transmitted by OFS and displays them in the SOE or in the list of alarms.

Wonderware WSP

A specific OFS V3.6 version dedicated to the Wonderware platform is available on the Wonderware Global Customer Support site.

The OFS-WSP driver has the same features as OPC V3.6 – Large apart from the following:

- It is licensed from a Wonderware environment only. It cannot be run outside a Wonderware environment
- It contains the server, the simulator, a sample client, configuration tool, configuration manager, and a user manual
- It is OPC DA compatible only (No OPC UA No OPC XML)

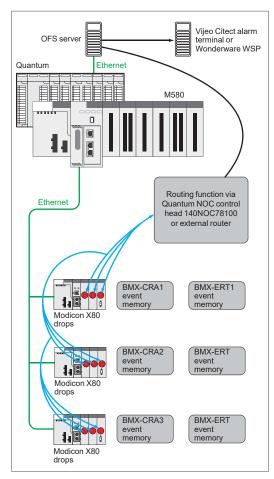

Example of a time stamping architecture

Presentation: Architectures: Setup: References: Time-stamping system: page 4/2 page 4/3 page 4/5 page 4/7 page 4/8

OPC data server software Time stamping system

Performance		
Performance	Event source module	Value
Between two identical source modules in	BMXERT1604T	1.6 < resolution < 3.3 ms
the same rack	BM•CRA31210	10 ms
Between two different inputs in the same	BMXERT1604T	1 ms
source module	BM•CRA31210	1 scan
Maximum number of events scanned	BMXERT1604T	400 events (1)
	BM•CRA31210	2,048 events (1)
Maximum number of I/O and memory	BMXERT1604T	16 discrete inputs on module
available		512 events in internal buffer
	BM•CRA31210	256 discrete I/O configured
		4,000 events in internal buffer
Maximum number of source modules in an	BM•CRA31210	1 per drop
Ethernet remote drop	BMXERT••••	9 per drop
Maximum number of event sources controlled	BMXERT●●●●	500 sources per second (1)

⁽¹⁾ This maximum value is not an absolute value. It depends on the overall system dynamics (total number of scanned items and number of events generated by the system).

5

5 - Product reference index

Product reference index

■ Product reference index......page 5/2

Product reference index

#	
110XCA28202	1/27
В	
BMXXCAUSBH018	1/27
BMXXCAUSBH045	1/27
С	
CEXADMCZZEPMZZ	1/25
CEXADMCZZEPTZZ	1/25
CEXADMCZZGPMZZ	
	1/25
CEXADMCZZGPTZZ	1/25
CEXADMCZZSPMZZ	1/25
CEXADMCZZTPMZZ	1/25
CEXADMCZZTPTZZ	1/25
CEXADMFZZSPAZZ	1/25
CEXADSCZZEPMZZ	1/26
CEXADSCZZEPTZZ	1/26
CEXADSCZZGPMZZ	1/26
CEXADSCZZGPTZZ	1/26
CEXADSCZZSPMZZ	1/26
CEXADSCZZTPMZZ	1/26
CEXADSCZZTPTZZ	1/26
CEXPACKAGEV15	1/20
CEXSPMCZXEPMZZ	1/24
CEXSPMCZXEPTZZ	1/24
CEXSPMCZXGPBZZ	
	1/24
CEXSPMCZXGPMZZ	1/24
CEXSPMCZXGPTZZ	1/24
CEXSPMCZXSPAZZ	1/24
CEXSPMCZXSPMZZ	1/24
CEXSPMCZXTPMZZ	1/24
CEXSPMCZXTPTZZ	1/24
CEXSPMEZXEPBZZ	1/24
CEXSPMEZXEPTZZ	1/24
CEXSPMFZXSPAZZ	1/24
CEXSPUCZLGPMZZ	1/22
CEXSPUCZLSPAZZ	1/22
CEXSPUCZLSPMZZ	1/22
CEXSPUCZLTPMZZ	1/22
CEXSPUCZSGPMZZ	1/21
CEXSPUCZSSPAZZ	1/21
CEXSPUCZSSPMZZ	1/21
CEXSPUCZSTPMZZ	1/21
CEXSPUCZXEPMZZ	1/23
CEXSPUCZXEPTZZ	1/23
CEXSPUCZXGPMZZ	1/23
CEXSPUCZXGPTZZ	1/23
CEXSPUCZXSPAZZ	1/23
CEXSPUCZXSPMZZ	1/23
CEXSPUCZXTPMZZ	1/23
CEXSPUCZXTPTZZ	1/23
CEXUMFCZXEPTZZ	1/24
CEXUMFCZXGPTZZ	1/24
CEXUMFCZXTPTZZ	1/24
CEXUMNCZXEPMZZ	1/24
CEXUMNCZXEPTZZ	1/24
CEXUMNCZXGPMZZ	1/24
CEXUMNICZYTPTZZ	1/24
CEXUMNEZXERAZZ	1/24
CEXUMNFZXSPAZZ	1/24
CEXUPGCZLGPMZZ	1/22
CEXUPGCZLSPMZZ	1/22
CEXUPGCZLTPMZZ	1/22
OCVUDACTVEDTTT	1/22

CEXUPGCZXGPMZZ	1/23
CEXUPGCZXGPTZZ	1/23
CEXUPGCZXSPMZZ	1/23
CEXUPGCZXTPMZZ	1/23
CEXUPGCZXTPTZZ	1/23
CEXUPNCZLGPMZZ	1/22
CEXUPNCZLTPMZZ	1/22
CEXUPNCZSGPMZZ	1/21
CEXUPNCZSTPMZZ	1/21
CEXUPNCZXEPTZZ	1/23
CEXUPNCZXGPMZZ	1/23
CEXUPNCZXTPMZZ	1/23
CEXUPNCZXTPTZZ	1/23
0	
OFSUASCZZEPMZZ	3/5
OFSUASCZZSPMZZ	3/5
OFSUASCZZTPMZZ	3/5
S	
SR2CBL06	1/27
STBXCA4002	1/27 1/27
STBXCA4002	
STBXCA4002	1/27
STBXCA4002 T TLXCDLFOFS36	1/27 4/7
STBXCA4002 T TLXCDLF0FS36 TLXCDLT0FS36	1/27 4/7 4/7
STBXCA4002 T TLXCDLF0FS36 TLXCDLT0FS36 TLXCDLU0FS36	1/27 4/7 4/7 4/7
STBXCA4002 T TLXCDLF0FS36 TLXCDLT0FS36 TLXCDLU0FS36 TLXCDST0FS36	1/27 4/7 4/7 4/7 4/7
TLXCDLF0FS36 TLXCDLT0FS36 TLXCDLU0FS36 TLXCDST0FS36 TLXCDSU0FS36 TLXCDSU0FS36	4/7 4/7 4/7 4/7 4/7 4/7
STBXCA4002 T TLXCDLF0FS36 TLXCDLT0FS36 TLXCDLU0FS36 TLXCDST0FS36 TLXCDSU0FS36 TLXCDSU0FS36 TLXCDUPDL0FS	4/7 4/7 4/7 4/7 4/7 4/7
STBXCA4002 T TLXCDLF0FS36 TLXCDLT0FS36 TLXCDLU0FS36 TLXCDST0FS36 TLXCDSU0FS36 TLXCDSU0FS36 TLXCDUPDL0FS TLXCDUPDSOFS	4/7 4/7 4/7 4/7 4/7 4/7
STBXCA4002 T TLXCDLF0FS36 TLXCDLT0FS36 TLXCDLU0FS36 TLXCDST0FS36 TLXCDSU0FS36 TLXCDUPDL0FS TLXCDUPDL0FS U	4/7 4/7 4/7 4/7 4/7 4/7 4/7
STBXCA4002 T TLXCDLFOFS36 TLXCDLTOFS36 TLXCDLUOFS36 TLXCDSTOFS36 TLXCDSUOFS36 TLXCDUPDLOFS TLXCDUPDLOFS TLXCDUPDSOFS U UNYDFFXZZSPA80	1/27 4/7 4/7 4/7 4/7 4/7 4/7 2/7
STBXCA4002 T TLXCDLF0FS36 TLXCDLT0FS36 TLXCDLU0FS36 TLXCDST0FS36 TLXCDSU0FS36 TLXCDUPDL0FS TLXCDUPDL0FS U UNYDFFXZZSPA80 UNYLAGZAUWB20	1/27 4/7 4/7 4/7 4/7 4/7 4/7 4/7 2/7 2/11
STBXCA4002 T TLXCDLF0FS36 TLXCDLU0FS36 TLXCDLU0FS36 TLXCDST0FS36 TLXCDSU0FS36 TLXCDUPDLOFS TLXCDUPDLOFS U UNYDFFXZZSPA80 UNYLAGZAUWB20 UNYLFZZAUWB12	1/27 4/7 4/7 4/7 4/7 4/7 4/7 4/7 2/11 2/11
STBXCA4002 T TLXCDLF0FS36 TLXCDLU0FS36 TLXCDLU0FS36 TLXCDST0FS36 TLXCDSU0FS36 TLXCDUPDLOFS TLXCDUPDLOFS U UNYDFFXZZSPA80 UNYLAGZAUWB20 UNYLFZZAUWB12 UNYLHVZAUWB10	1/27 4/7 4/7 4/7 4/7 4/7 4/7 4/7 2/11 2/11 2/11
STBXCA4002 T TLXCDLF0FS36 TLXCDLU0FS36 TLXCDLU0FS36 TLXCDST0FS36 TLXCDSU0FS36 TLXCDUPDL0FS TLXCDUPDL0FS U UNYDFFXZZSPA80 UNYLAGZAUWB20 UNYLFZZAUWB12 UNYLHVZAUWB10 UNYLPCZAUWB	1/27 4/7 4/7 4/7 4/7 4/7 4/7 4/7 2/11 2/11 2/11
STBXCA4002 T TLXCDLF0FS36 TLXCDLU0FS36 TLXCDLU0FS36 TLXCDST0FS36 TLXCDSU0FS36 TLXCDUPDLOFS TLXCDUPDLOFS U UNYDFFXZZSPA80 UNYLAGZAUWB20 UNYLFZZAUWB12 UNYLFZZAUWB10 UNYLPCZAUWB UNYLPCZAUWB	1/27 4/7 4/7 4/7 4/7 4/7 4/7 4/7 2/11 2/11 2/11 2/11





Learn more about our products at www.schneider-electric.com

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein.

Design: Schneider Electric Photos: Schneider Electric

Schneider Electric Industries SAS

Head Office 35, rue Joseph Monier - CS 30323 F-92500 Rueil-Malmaison Cedex France

MKTED2140504EN November 2020 - V8.0